

User Guide

PANTUM

WWW.PANTUM.COM

Pantum M7300 Series Monochrome Laser MFP



It is recommended that you read this Guide carefully before using the printer

Preface

Welcome to the Pantum series products!

We heartily appreciate your using of Pantum series products!

To protect your vital interests, please carefully read the following statements.

Legal Notice

Trademarks

Pantum and Pantum logos are registered trademarks of Zhuhai Pantum Electronics Co.,Ltd.

Microsoft®, Windows®, Windows Server® and Windows Vista® are trademarks registered by Microsoft Corporation in the United States or other countries/regions.

Google Cloud Print is a trademark of Google Inc.

Mopria®, the Mopria® Logo and the Mopria® Alliance logo are registered trademarks and service marks of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

Mac and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries.

AirPrint and the AirPrint logo are trademarks of Apple Inc.

Wi-Fi Direct, Wi-Fi Protected Setup(WPS), WPA, WPA2, and Wi-Fi Protected Access are marks of the Wi-Fi Alliance.

The ownership to the names of the software in this User Guide belongs to their respective companies in accordance with corresponding license agreement, and they are referred for instructions only.

All other product and brand names herein may be the registered trademarks, trademarks or service marks of their respective owners, and they are referred for instructions only.

Copyright

The Copyright of this User Guide is owned by Zhuhai Pantum Electronics Co.,Ltd.

It is prohibited to copy, translate, modify and transmit this User Guide by any means or in any form without the prior written consent of Zhuhai Pantum Electronics Co.,Ltd.

Version:V1.1

8 jgWUJa Yf

For a better user experience, Zhuhai Pantum Electronics Co.,Ltd. reserves the right to make changes to the User Guide. The information contained herein is subject to change without notice.

Users are responsible for any damages arising from failing to follow this User Guide. Meanwhile, except the express warranty made in the product maintenance manual or service commitment, Zhuhai Pantum Electronics Co.,Ltd. does not make any express or implied warranty or guarantee to this User Guide (including composing or words).

Using this product to copy, print, scan certain documents or images or make other forms of operations may be prohibited by the local laws. If you are uncertain about the legality of using this product for certain documents or images, you should consult your legal advisor in advance.

The product can only be used safely in the non-tropical areas at an altitude no higher than 2000 meters.

Safety Precautions

Disconnect the product from power supply

The product should be placed near or easily accessible to outlet for unplugging to cut off the power in time!

@jYf GUZYmi

The laser radiation is harmful to the human body. Since laser components are completely sealed in the printer, laser radiation will not leak. To avoid laser radiation, please do not randomly disassemble the printer!

The printer follows the provisions of Class 1 laser products under CFR standard. The printer has a Class III b laser diode, which has no laser radiation leakage among laser components.

The laser components shall complies with the requirements of: U.S. Code of Federal Regulations, 21 CFR 1040, IEC 60825-1

The following label is attached to the laser components inside the printer:




GUZmK Ufb]b[

Please note the following safety warnings before using the printer:


! K Ufb]b[




There is high-voltage electrode inside the printer. Before cleaning the printer, make sure the power is turned off!

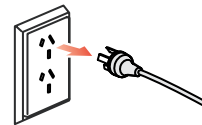

Plugging and unplugging the power cord plug with a wet hand can result in an electric shock.

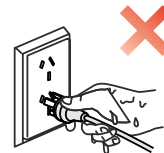

The fuser unit is hot when and after printing. Touching the fuser unit (the shaded area as shown) may cause burns!

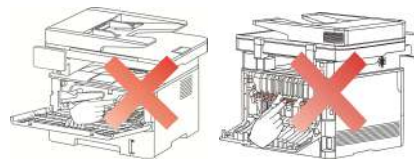

The fuser unit is attached with a high temperature warning label. Please do not remove or damage this label.



Precautions

DfYWU h]cbg'VYZ:fYl g]b['h Y'Df]bhf.

1. Read and understand all instructions.
2. Familiarize yourself with the basic principles associated with operating electrical appliances.
3. Comply with all warnings and instructions marked on the equipment or specified in the manual supplied with the equipment.
4. If the operating instructions conflict with the safety information, please refer back to the safety information, as you may have misunderstood the operating instructions. If you cannot resolve the conflicts, please call the Customer Service Hotline or contact a service representative for help.
5. Before cleaning the equipment, remove the power cord from the AC power supply outlet. Do not use liquid or aerosol cleaners.
6. Please make sure that the equipment is put on a stable desktop surface to avoid serious damage caused by the falling of the equipment.
7. Do not put the equipment near a radiator, an air conditioner, or a ventilation pipe.
8. Do not put any articles on the power cord. Do not put the equipment at the place where its power cord could be stepped on by people.
9. Outlets and extension cords must not be overloaded. This may reduce performance and could result in fire or electric shock.
10. Do not allow pets to chew on the AC power cord or the computer interface cable.
11. Do not allow sharp objects piercing equipment slot, so as to avoid contact with the high-voltage device, which otherwise may result in fire or electric shock. Take care not to spill liquids onto the equipment.
12. Do not disassemble the equipment so as to avoid the risk of electric shock. Necessary repairs may only be carried out by professional maintenance personnel. Opening or removing the cover could result in an electric shock or other potential hazards. Incorrect disassembly and assembly could also result in an electric shock during future use.
13. If any one of the following occurs, disconnect the equipment from the computer and pull out the power cord from the AC wall socket and contact a qualified member of the service personnel for maintenance:
 - Liquid has been spilled into the equipment.
 - The equipment has been exposed to rain or water.
 - The equipment falls, or the cover is damaged.
 - Significant changes in the equipment's performance.
14. Only adjust the control mentioned in the instructions. Incorrect adjustment of other controls may result in damage and mean that professional maintenance personnel need to spend more time fixing it.

15. Do not use the equipment in a thunderstorm so as to avoid the risk of an electric shock. If possible, pull out the AC power cord during a thunderstorm.

16. If you continuously print multiple pages, the surface of the tray will become very hot. Take care not to touch this surface, and keep children away from this surface.

17. The signal wire of the device connected with the printer can not be connected to the outdoors.

18. Please ensure timely ventilation in case of a prolonged use or printing huge amounts of documents in a poorly ventilated room.

19. In standby status, the product will automatically enter into the power saving (sleep) mode if it does not receive any job order for a while (such as 1 minute); and it can realize zero power consumption only if it has not been connected with any external input power supply.

20. As the Class 1 equipment, the product must be connected to the power supply outlet with protective grounding line when using.

21. This product should be placed according to the shipping marks on the product package box during delivery.

22. This product is a kind of low-voltage equipment. When using this product below the specified voltage range, please refer to the product precautions or call Pantum Aftersales Service Centre, if the toner comes off the printed contents, or the equipment starts slowly.

23. This product is sold as a complete machine. The consumers can go to Pantum Aftersales Service Centre to purchase parts they need. If the product sold is inconsistent with the package list, please go to the specified Aftersales Service Centre to solve the problem.

24. Install this product in a place with the temperature between 10°C and 35°C and the relative humidity between 20% and 80%.

25. For security and other reasons the printer may switch to intermittent printing after a certain amount of continuous printing.

26. This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

27. IC Radiation Exposure Statement:

This equipment complies with Canada and FCC radiation exposure limits set forth for uncontrolled environments.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

28. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

29. Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

30. The power consumption of the product with wireless function is 2.710W / without wireless function is 1.888W in networked standby if all wired network ports are connected and all wireless network ports are activated.

31. Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

32. This Class B digital apparatus complies with Canadian ICES-003.

33. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the back of this equipment is a label that contains, among other information, a product identifier in the format US: VFCFA01A5103M. If requested, this number must be provided to the telephone company. This equipment uses the following USOC jacks: RJ-11, RJ-45, USB jacks and power jacks.

34. REN (RINGER EQUIVALENT NUMBERS) STATEMENT

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

Notice: The Ringer Equivalence Number (REN: 0.1A) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

35. ATTACHMENT LIMITATIONS STATEMENT

Notice: This equipment meets telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). This is confirmed by marking the equipment with the Industry Canada certification number. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.


This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

36. This product meets the applicable Industry Canada technical specifications

37. Please keep this User Guide properly.

Legal Information

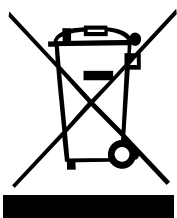

This symbol indicates that, at the end of your product's life, it must not be discarded as domestic waste. Instead, you should dispose of your used equipment at a designated collection point for the recycling of waste electrical and electronic equipment. Ref: EU Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). Please contact your distributor / supplier for further information.



This product is suitable for indoor use only.



European Community (EC) directives conformity

This product complies with the protection requirements of EC directives 2014/35/EU and 2014/30/EU on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility and safety of electrical equipment designed for use within certain voltage limits.

The manufacturer of this product is: Zhuhai Pantum Electronics Co.,Ltd., No.3883, Zhuhai Avenue, Zhuhai, Guangdong, China 519060.

A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative.

This product satisfies the Class B limits of EN 55032 and safety requirements of EN60950



This printer is fully compliant with the ROHS Directive 2009/95/EC and the requirements of the revised Directive 2011/65/EU for managing toxic and hazardous substances.



A battery is built in the product with the faxing feature. When the product battery is scraped, it should never be disposed with other household waste. In order to protect the natural resources and promote the reuse of materials, please separate the battery from other types of waste, and deliver it to your local battery recycling systems for recycling.

Warning: 1. The battery of this product is non-rechargeable, and it should never be dismantled, crushed, heated or burned. Improper replacement operations may cause fire and burns; 2. The battery should be placed beyond the reach of children to prevent them swallowing.



To protect natural resources and promote the utilization of materials, please separate the battery from other types of waste for recycle by your local battery recovery system.

Warning: 1. The battery of this product is non-rechargeable, and it should never be dismantled, crushed, heated or burned. Improper replacement operations may cause fire and burns; 2. The battery should be placed beyond the reach of children to prevent them swallowing.

SVHC (Substances of Very High Concern) content stated in REACH Regulation: Battery built in the equipment with faxing feature contains SVHC including: 1,2-dimethoxyethane;ethylene glycol dimethyl ether (EGDME) with concentration of 0.707%.

Table of Contents

1.Before Using the Printer	1
1.1.Product series introduction	1
1.2.Supplied Accessories	2
1.3.Product View	3
1.4.Laser Toner Cartridge	5
1.5.Control Panel	6
1.5.1.Control Panel	6
1.5.2.Home screen.....	7
1.5.3.Touch screen button.....	8
1.5.4. Function of power indicator	9
2.Paper and Print Media.....	10
2.1.Paper Specification.....	10
2.2.Special Paper	11
2.3.Non-printing Area and Non-scanning Area	12
2.4.Loading Paper	12
2.4.1.Loading into the Automatic Feeder Tray	12
2.4.2.Install manual feed tray	14
2.5. Paper and Manuscript Use Process	16
2.5.1.Scanning With Tablet	17
2.5.2. Scan with the automatic document feeder (ADF)	18
3.Driver installation and uninstallation	19
3.1.Driver installation based on Windows system	19
3.1.1.Installation via USB connection	19
3.1.2.One-key wireless network installation.....	33
3.1.3.Installation via wired network connection	40
3.2.Driver installation based on Mac system	41
3.2.1.Driver installation.....	41
3.3.Add printer to Mac system	43
3.3.1.Add in USB connection mode	43
3.3.2.Addition in wired network connection mode	43
3.3.3.Add in wireless network connection mode	43
3.3.4.Add AirPrint printer.....	44
4. Wired network setup (applicable to wired network models)	45
4.1.Set IP Address	45
4.1.1Automatic Setting	45
4.1.2.Manual Setting	45
5.Wireless network setup (applicable to Wi-Fi models)	46
5.1.Basic structure mode	46
5.1.1.Wireless network setup tools	46
5.1.2.Wi-Fi Protected Setup (WPS) setup.....	50
5.1.3.How to disable the Wi-Fi network connected	50
5.2.Wi-Fi Direct mode	50
5.2.1.Preliminary preparations	50
5.2.2.Wi-Fi Direct connection	51
5.2.3.How to disable the Wi-Fi Direct.....	52
5.3.Wireless network setup FAQs	52
6.Web server	54
6.1.Visit the embedded Web server.....	54
6.2.Use Web server to manage printer	54
6.2.1.IP address setup	55
6.2.2.Wireless setup	56
6.2.3.Machine setup.....	57

6.2.4.Recover factory settings via Web server	59
7.Print	60
7.1.Print Function.....	60
7.2.Print Settings	61
7.2.1.Print parameter settings	61
7.2.2.Automatic Two-Sided Printing	61
7.2.3.Fine mode printing	65
7.2.4.Mute printing	66
7.2.5.Open Help Document	67
7.3.Printing Mode.....	68
7.3.1.Printing with the Automatic Feeder Tray	68
7.3.2.Printing with manual feed tray	68
7.4.USB print	69
7.5.Secure printing	70
7.6.Google Cloud Print	72
7.7.Cancel printing.....	72
8. Copying	73
8.1. Copying function	73
8.2. Copying method.....	73
8.3. Copying cancel	73
8.4. Common copying setting	73
8.4.1.Image quality.....	74
8.4.2.Intensity.....	74
8.4.3.Resizing	74
8.4.4.Multipage.....	74
8.4.5.Clone.....	75
8.4.6.Poster.....	75
8.4.7.Collated copy	75
8.4.8.Duplex copy	76
8.4.9.Paper setting.....	76
8.5. ID copy setting	76
8.5.1.Arrangement mode	77
8.5.2.Intensity.....	77
8.5.3.Paper dimension	77
8.6. Receipt setting	78
8.6.1.Intensity.....	78
8.6.2.Paper setting.....	78
9. Scan	79
9.1. Scanning mode.....	79
9.1.1. Windows system scan	79
9.1.2. Mac System Scan	85
9.1.3. Push Scan.....	88
9.2.Scanning function	91
9.3. Cancel Scan Job.....	91
10. Fax.....	92
10.1. Connect Devices.....	92
10.2.Fax Settings.....	92
10.3. Fax Functions	93
10.3.1.Send Fax.....	93
10.3.2. Receive Fax	94
10.3.3. Set the compatibility of interference VoIP telephone line	95
10.3.4.Other Fax Functions	95

10.4.PC-Fax.....	96
10.4.1.Sending Fax with PC-Fax	97
11. Mobile Print/Scan/Fax	98
11.1. "Pantum" APP	98
11.1.1. Operating systems supported	98
11.1.2. How to download Pantum App	98
11.1.3. How to use this "Pantum" APP	98
11.2. Mopria mobile print	101
11.2.1. The operating systems and applications which support Mopria mobile printing	101
11.2.2. How to download Mopria Print Service	101
11.2.3. Preliminary preparations	101
11.2.4. How to use Mopria mobile printing	101
11.3. NFC function	102
11.3.1. Preliminary preparations	102
11.3.2. How to use NFC function to print	102
11.4. AirPrint mobile print.....	103
11.4.1. Operating systems supported by AirPrint mobile print	103
11.4.2. Preliminary preparations	103
11.4.3. How to use AirPrint mobile printing	103
12.General Settings.....	104
12.1. System Settings.....	104
12.1.1. Ink saving setting	104
12.1.2. 12.1.2.Language Setting	104
12.1.3. Restore Factory Settings	105
12.1.4. Sleep Time Setting	105
12.1.5. Mute printing	106
12.1.6. Auto shut-off setting	106
12.1.7. Sound/volume	107
12.1.8. Time/date	107
12.2. Network Settings.....	108
12.3. Network Information.....	108
12.4. Print information report	109
12.5. Consumable information	109
12.6.Configure the e-mail address book.....	109
12.7.Configure the FTP address book.....	110
12.8. Online upgrade	110
13. Routine Maintenance.....	111
13.1. Cleaning the Printer	111
13.2. Toner cartridge and drum component maintenance	114
13.2.1. About toner cartridge and drum component component.....	114
13.2.2. Replace toner cartridge and drum component.....	114
14. Troubleshooting	119
14.1. Cleaning Jammed Paper	119
14.1.1. Middle jam.....	119
14.1.2. Paper Jam in the Fuser Unit	121
14.1.3. Duplex Unit Jam.....	124
14.1.4. A paper jam occurs on the automatic document feeder (ADF)	125
14.2. Software Failure.....	127
14.3. Error Message	127
14.4. Common Troubleshooting.....	128

14.4.1. Common Trouble	128
14.4.2. Image Defects	131
14.5. Fax faults	134
15. Product Specifications	136
15.1. Overview of the Specifications	136
15.2. Print Specifications	137
15.3. Copy Specifications	137
15.4. Scan Specifications	138
15.5. Fax specification	138

1.Before Using the Printer

1.1.Product series introduction

Product series parameters			M7300FDN series	M7300FDW series
Interface type	USB		●	●
	NET		●	●
	Wi-Fi			●
Print Language	PDL		●	●
Control Panel	Touch screen		●	●
Print Speed	A4	33ppm	●	●
	Letter	35ppm	●	●
Automatic Two-Sided Printing			●	●
Auto Duplex Scan			●	●
NFC function				●
Mute printing			●	●
Copy			●	●
Scan			●	●
Fax			●	●
Scan to U-disk			●	●
USB print			●	●
Secure printing			●	●
ADF			●	●








(●: Support; Blank: Unsupport)




Note: • This product series is subject to additions or changes without prior notice.

- The printer with fax should be set for language, time and fax as per window prompts upon initial starting or restoring factory settings.
- For this user manual, the "ADF" is short for automatic document feeder.

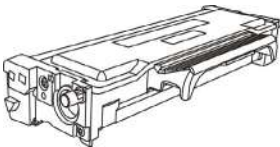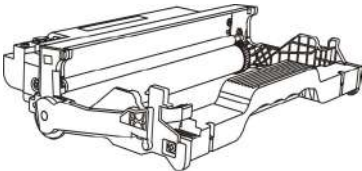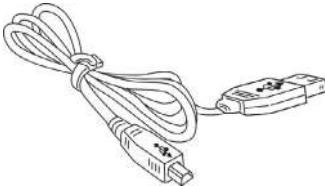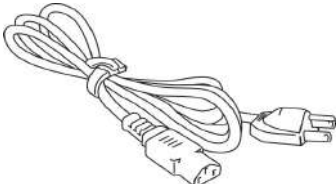
1.2.Supplied Accessories

Name	Parts
Toner cartridge	
Drum component	
USB Interface Cable	
Power Cord	
CD	
Quick Setup Guide	
Pantum Warranty	

 **Note:** • The Pantum Warranty may not be attached in some regions.

1.3.Product View


Side view

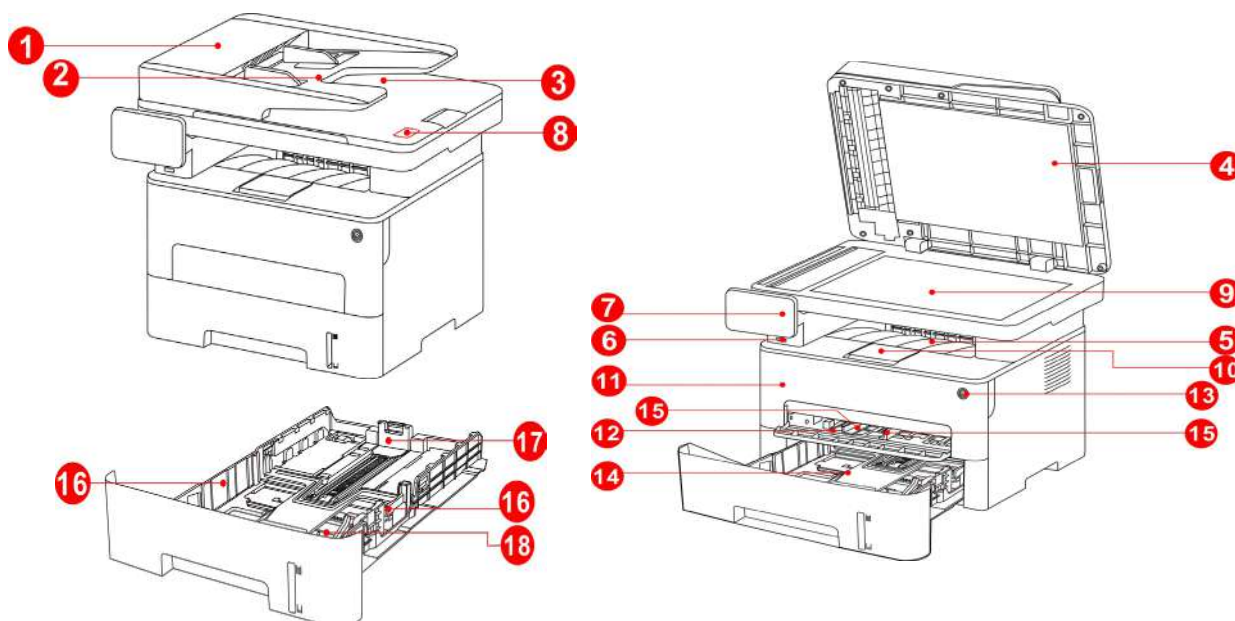

1	Cover of automatic document feeder	This is used to remove the paper jammed in scanning for the ADF.
2	Feed tray of automatic document feeder	This is used to place originals scanned from the ADF.
3	Exit tray of automatic document feeder	Prevent originals scanned from falling off.
4	Cover of scanner	Open the cover of scanner to place the scanned originals on its glass plate.
5	Output Bin	For storing the printed paper.
6	Front USB interface	For USB flash disk printing and scanning into USB flas disk.
7	Control Panel	Indicate printer status to conduct set operation.
8	NFC (Near Field Communication) label	Use mobile device to touch the tag to download or start the mobile application and for Wi-Fi Direct.
9	Glass Platen	To put the original of tablet PC for scan.
10	Output Tray	To prevent the printed paper from falling.
11	Front Cover	To open the front cover to take out the laser toner cartridge.
12	Manual feed tray	For placing mediums that are printed in manual feed tray.
13	Power switch	Turn the power on or off and press this button under Ready state to enter energy-saving mode. Press and hold this button for more than 2s to turn the printer power off.

14	Automatic Feeder Tray	For placing mediums that are printed in auto feed tray.
15	Paper deflector of manual feed tray	Slide paper deflector to adapt to paper width
16	Paper width deflector of auto feed tray	Slide paper width deflector to adapt to paper width.
17	Paper length deflector of auto feed tray	Slide paper length deflector to adapt to paper length.
18	Clip of extended tray of auto feed tray	For adjustment of length extension of the tray .

Rear View

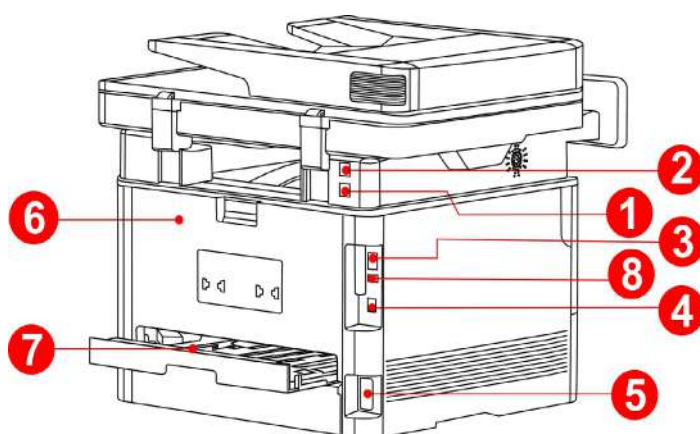

1	LINE interface (only for machine with the fax feature.)	Telephone line interface, used for connection of this product to the telephone circuit.
2	EXT. interface (only for machine with the fax feature.)	Extension interface, used for connection with external extension telephone.
3	USB Interface	For connecting product to computer with USB cable.
4	Network Interface	For connecting product to network with network cable.
5	Power Interface	For connecting product to power with power cord.
6	Rear Cover	For paper release when it gets jammed.
7	Duplex Printing Unit	For paper feed at duplex printing and paper release when paper gets jammed at duplex printing.
8	Rear USB port	For extension of storage capacity of secure printing.



Note: • Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.

1.4.Laser Toner Cartridge


Laser toner cartridge is composed of drum component and toner cartridge.

Service life of drum component



Type	Average Print Volume
Longevity of drum component	About 12000 Pages A4/LTR-based page (1 page/job).

Service life of toner cartridge

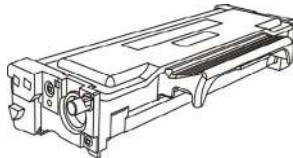

Type	Average Print Volume
Standard-volume toner cartridge	About 1500 Pages(Based on ISO 19752 standard)
High-volume toner cartridge	About 3000 Pages(Based on ISO 19752 standard)
Toner cartridge of super large capacity	About 6000 Pages(Based on ISO 19752 standard)




Note: • The model is subject to increase without notice.

- Consumables capacity may vary with different using types.
- The Company does not recommend using consumables other than the original consumables provided, as any damages caused by non-original consumables are not covered by the scope of warranty.
- Toner cartridge appearance may differ because of multiple volume and models, so the schematic diagram is only for your reference.

1.5.Control Panel

1.5.1.Control Panel


The layout of the printer control panel is shown below:

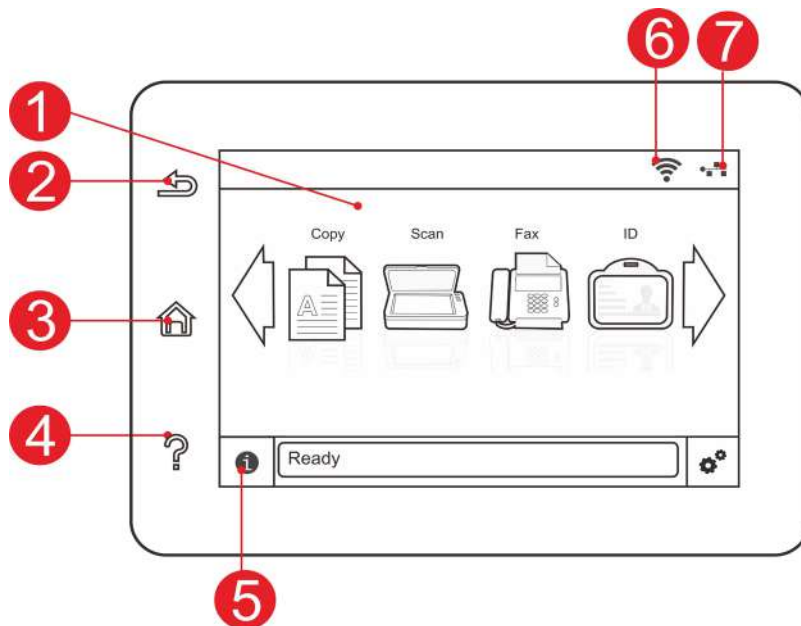

No.	Name	Functions
1	Color touch screen	<ul style="list-style-type: none">• Check printer status and message.• Set and operate printe .
2	Return button	Return to the previous menu.
3	Home button	Go to the home screen.
4	Help button	<ul style="list-style-type: none">• Access to Help system of control panel.• It describes how to use each screen an eliminate faults.
5	Status icon	<ul style="list-style-type: none">• View supplies information in ready state.• View printer error status information in error status.
6	Wi-Fi icon	<ul style="list-style-type: none">• View printer Wi-Fi information.• Icon is dimmed when Wi-Fi disconnects
7	Wired network status icon	<ul style="list-style-type: none">• Check printer wired network information• Icon is dimmed when wired networ disconnects.

1.5.2.Home screen

Use home screen buttons and icons to initialize print, fax or scan. The layout is shown as below:

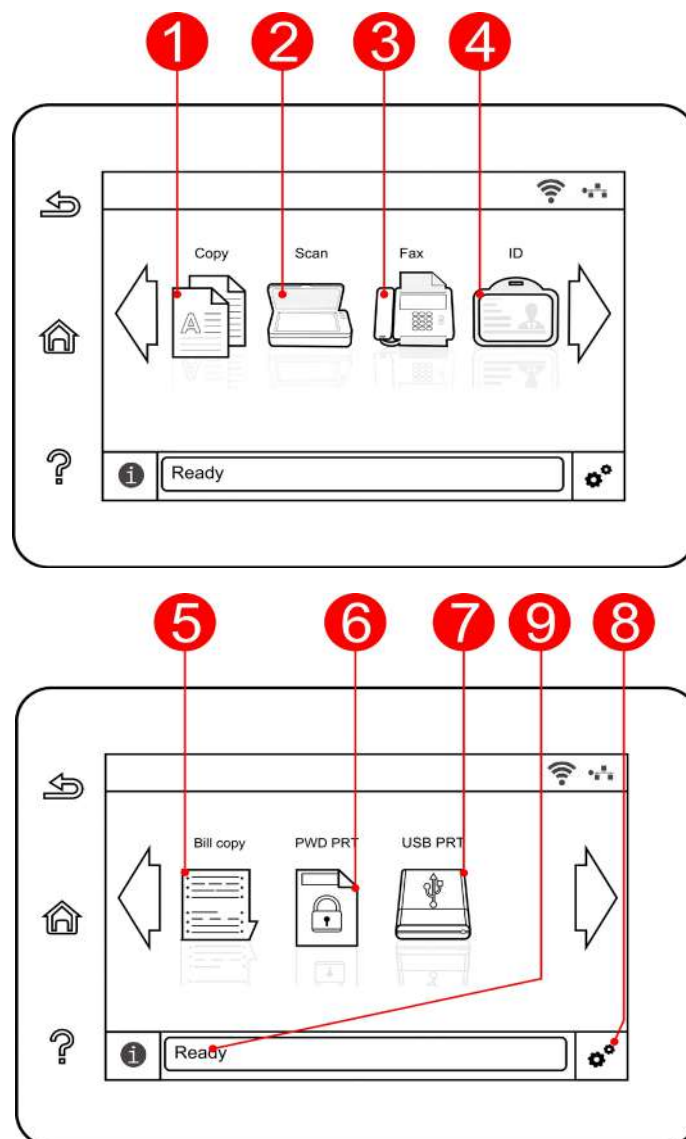


No.	Name	Functions
1	Copy	Access to “Copy” menu and make a copy.
2	Scan	Access to “Scan” menu and scan document.
3	Fax	Access to “Fax” menu and send a fax.
4	ID copy	Access to “ID copy” menu and make an ID card copy.
5	Bill copy	Access to “Bill copy” menu and make a bill copy.

No.	Name	Functions
6	Secure printing	Access to "Secure Print" menu to print with password.
7	USB print	Access to USB storage job and make a job print.
8	"Setting" button	Open menu setting interface.
9	Status message bar	Display the current printer status.




1.5.3.Touch screen button

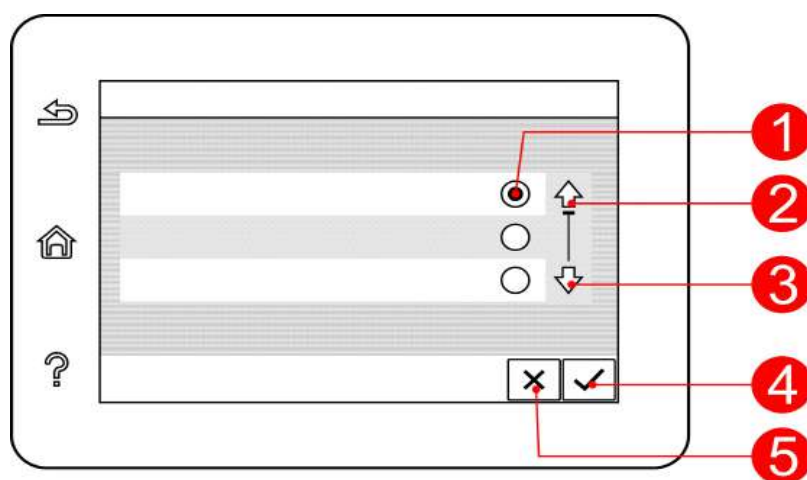Layout of touch screen buttons of printer control panel is shown as below:



No.	Name	Functions
1	Radio button	Select or delete an item.
2	Up arrow	Scroll up.
3	Down arrow	Scroll down.
4	Acceptance button	Save setting.
5	Cancel button	Cancel selection.

1.5.4. Function of power indicator

No.	Status displayed by power indicator	Status	Status Description
1		Die out	Shutdown status
2		Always on	Booting and ready states
3		Blink	Sleep mode

2. Paper and Print Media

2.1. Paper Specification

Automatic Feeder Tray	Media Type	Plain paper(70~105g/m ²),thin paper(60~70g/m ²)
	Media size	A4, Letter, A5, Legal, Statement, JIS B5, Folio, Oficio, Executive, ISO B5, A6, B6, 16K, Big 16K, 32K, Big 32K,Custom
	Media weight	60~105g/m ²
	Maximum capacity of the tray	250 pages (80 g/m ²)
Manual feed tray	Media Type	Plain paper(70~105g/m ²),thin paper(60~70g/m ²),thick paper(105~200g/m ²),transparent film,carton pape ,label paper, envelope
	Media size	A4, Letter, Legal, Folio, Oficio, Statement, Executive, JIS B5, ISO B5, A5, A6, B6, Monarch Env, DL Env, C5 Env, NO.10 Env, C6 Env, Japanese Postcard, ZL, 16K, Big 16K, 32K, Big 32K, Yougata4, Postcard, Younaga3, Nagagata3, Yougata2,Custom
	Media weight	60~200 g/m ²
	Maximum capacity of the tray	1 pages



Note: • 80 g/m² standard paper is recommended for this printer.

- It is not recommended to use special paper extensively, which may affect the service life of the printer.
- The print media that does not meet the guidelines listed in this User Guide may result in poor print quality, increased paper jam and excessive wear of the printer.
- Properties such as weight, composition, texture and humidity are important factors affecting the printer performance and output quality.

Please note the following matters when selecting the print media:

1. Desired print effect: The print media selected should meet the requirement of the print tasks.
2. Surface smoothness: The smoothness of the print media may affect the sharpness of the print outcome.
3. Some print media may meet all the use guidelines contained herein, but they still can not bring satisfactory effect. This may be due to incorrect operation, inappropriate temperature and humidity, or other factors beyond the control of Pantum. Before purchasing large quantities of print media, make sure that the print media meets the specifications specified in this User Guide.

2.2.Special Paper

This printer supports using the special paper for printing. Special paper includes: label paper, envelope, transparent film, thick paper, carton paper, thin paper.




Note: • When using special paper or print media, be sure to select matched print type and size in the print settings so as to get the best print effect.

Please observe the following standards:

Types of Print Media	Correct Practices	Incorrect Practices
Label Paper	Use labels with no exposed lining paper only. Labels shall be put flat when using. Use labels of full sheet only. There is no guarantee that all the labels in the market can meet corresponding requirements.	Use wrinkled, blistered or damaged label papers.
Envelope	Envelopes should be loaded evenly.	Use wrinkled, nicked, stuck or damaged envelopes. Use envelopes with clips, snaps, windows, or coated linings. Use envelopes with self-adhesive stickers or other synthetic materials.
Transparent Film	Only use transparent films approved for use in laser printers.	Use transparent print media that is not suitable for laser printers.
Thick Paper, carton paper	Only use heavy paper that is approved for use in laser printers and meets the weight specifications of this printer .	Use the paper whose weight is more than the specification of the media recommended for this printer, unless the paper is approved for use in this printer.

2.3.Non-printing Area and Non-scanning Area

The shaded part indicates the non-printing area and non-scanning area.

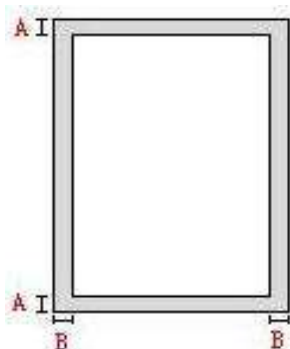

Usage	Paper Size	Top and bottom margins (A)	Left and right margins (B)
Printing	A4	4.2mm(0.165inch)	4.2mm(0.165inch)
	Letter	4.2mm(0.165inch)	4.2mm(0.165inch)
Scan	A4	2mm(0.079inch)	2mm(0.079inch)
	Letter	2mm(0.079inch)	2mm(0.079inch)


2.4.Loading Paper




Note: • Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.

2.4.1.Loading into the Automatic Feeder Tray

1. Slide out the automatic feeder tray from the printer.

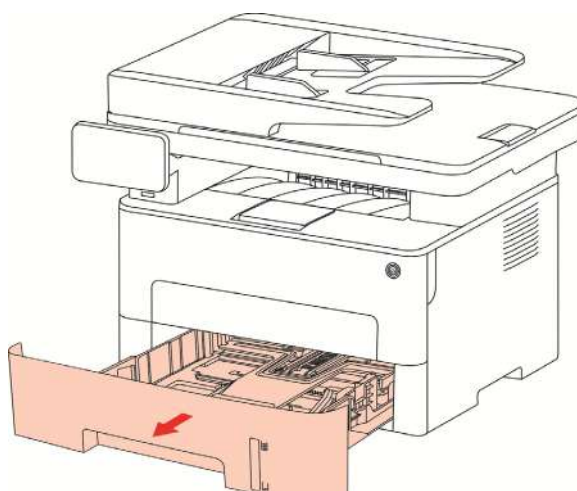


2. Slide the clip of extended tray of auto feed tray, paper length deflector or and paper width deflector to the slot suitable for paper size, in order to match paper length and width.

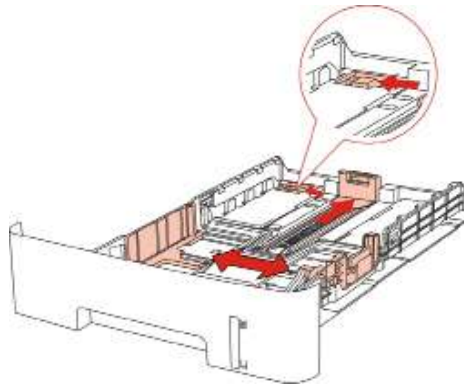


Note: • Do not overly squeeze the "paper length guide" and "paper width guide", otherwise it could easily lead to deformation of paper.

3. Before loading paper, please unfold the stacked paper to avoid a paper jam or feed error, and then load the paper into the tray print-side down. The automatic feeder tray can be loaded up to 250 pages, 80g/m² paper.

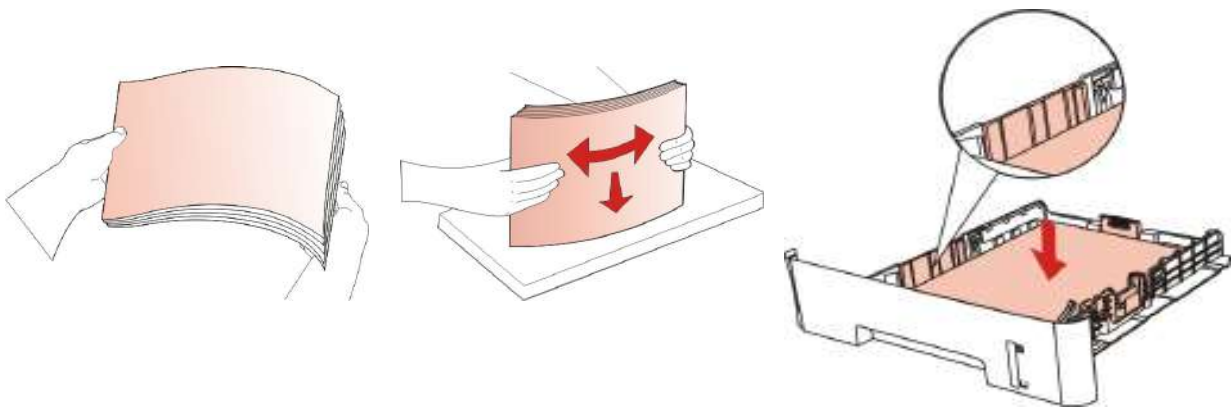

4. Raise the output tray to avoid the printed paper from slipping and falling, or immediately remove the printed document after the printing is complete.

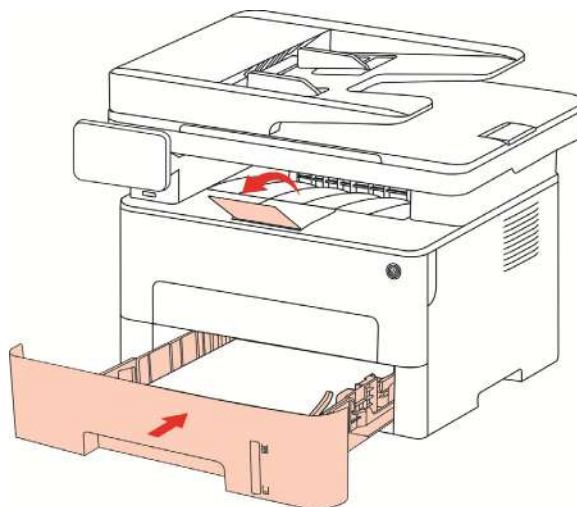




Note: • It is recommended that you raise the output tray to prevent the paper from slipping and falling after printing. If you choose not to raise the output tray, we recommend that you immediately remove the printed paper from the printer.


- If more than 250 pages (80 g/m²) are put inside the auto feed tray at one time, paper jam or paper feed failure will be led to.
- If carrying out single-sided printing, please make sure that the side to be printed (the blank side) is face down.

2.4.2. Install manual feed tray


1. Raise the output tray to avoid the printed paper from slipping and falling, or immediately remove the printed document after the printing is complete.

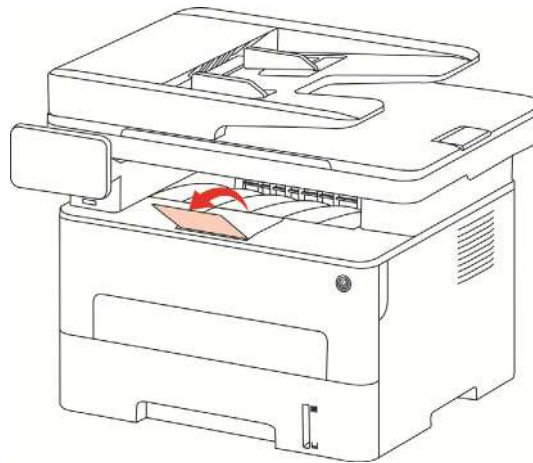


2. Open manual feed tray.

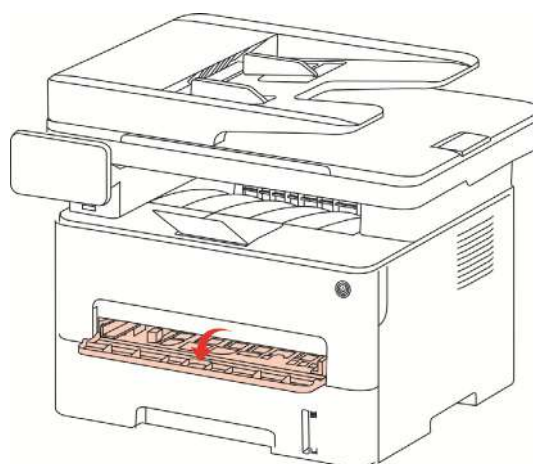

3. Slide the paper deflector of manual feed tray to match the two sides of paper. Do not use excessive force; otherwise, paper will be made jammed or skewed.

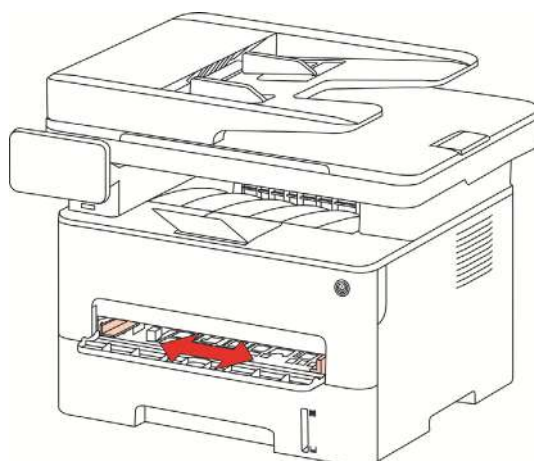

4. Put a flat printing medium into the manual feed tray with both hands.

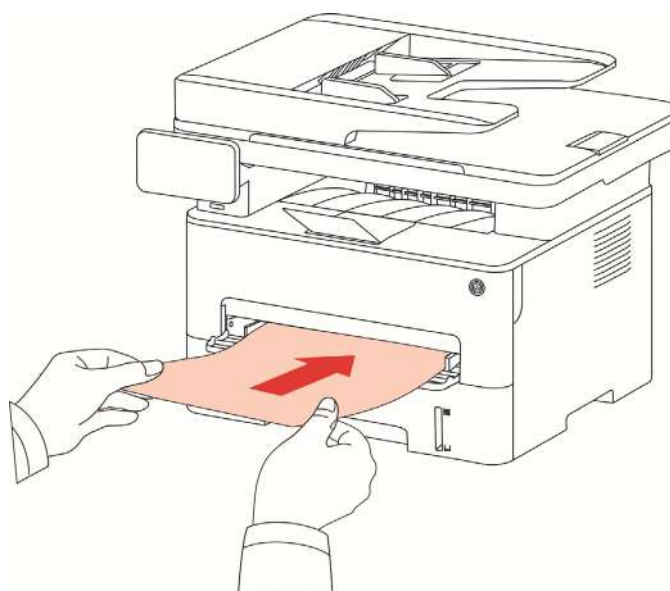

Note: • The printer will enter manual feed mode automatically when you put papers inside the manual feed tray.

- Please put one printing medium inside the manual feed tray each time and put in another piece after finishing printing.
- Put the printing medium inside the manual feed tray with the printing side up; the top of paper should be put inside first.

5. When the printed page is output from the printer, put the second piece inside according to the above steps to continue printing. Slow action will lead to the prompt of paper out or paper failure of manual feed tray. After paper is put inside, printing will be resumed automatically; too quick action may make paper caught up in the printer, which will easily result in paper jam.



Note: • After printing, please take out printed papers output from printer immediately. Stacked papers or envelopes will lead to paper jam or wrapped paper.

2.5. Paper and Manuscript Use Process

Manuscript requirements:

Source	Type	Size
Automatic document feeder (ADF)	Plain paper	A4, A5, B5, A6, Letter, Folio, Legal
Platen	Plain paper, thin paper, thick paper, transparent film, carton paper, label paper, envelope	A4, A5, B5, Letter, Full Scanning Platen, Custom


2.5.1. Scanning With Tablet




Note: • Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.

Steps of Use:


1. Lift up the scanner cover.

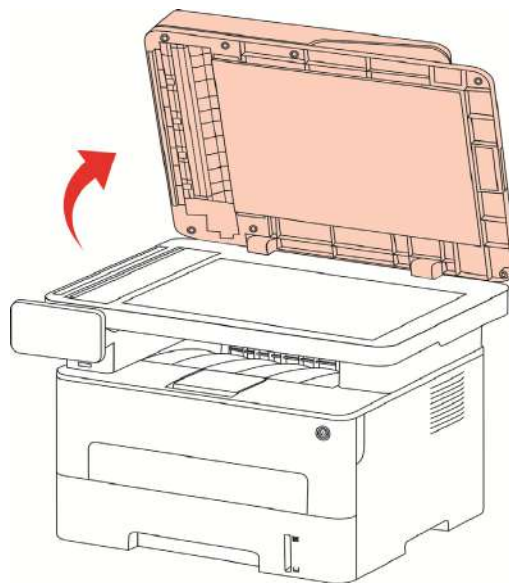

2. Load the manuscript face down.

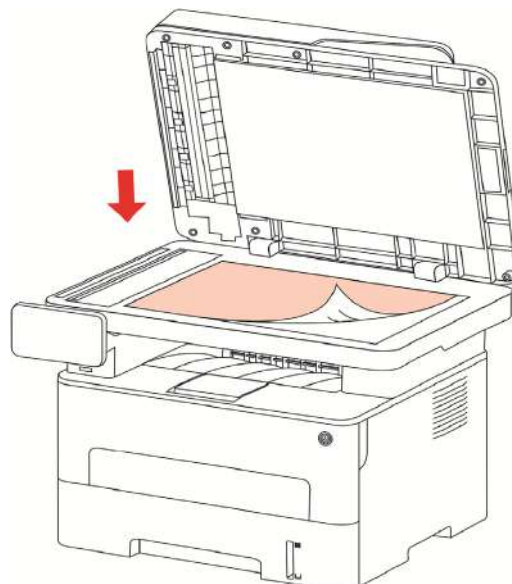


3. Align the manuscript to match the appropriate paper size.

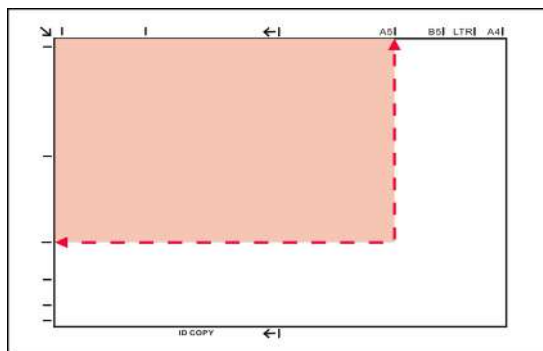

Note: • If the manuscript does not match with any size marker, please align the upper-left corner of the manuscript with the arrow.

- Make sure there is no document in the ADF. If a document is detected in the ADF, it will be more preferential than that on glass platen.

4. Close the scanner cover gently.

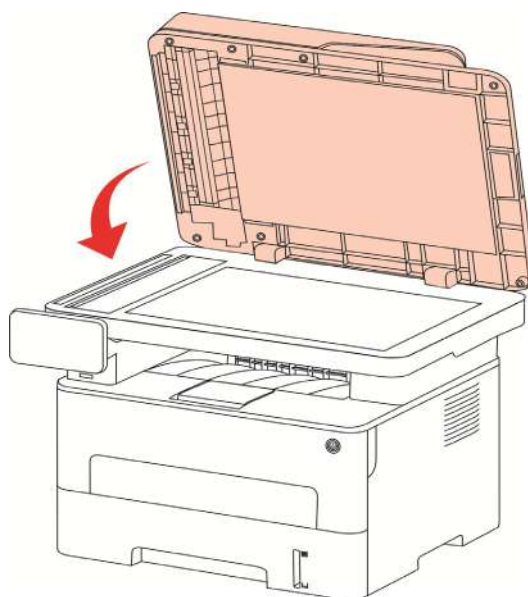


Note: • Please put the paper or document on the scanner glass after the glue, ink or correction fluid are completely dried.

- Rough textured, uneven, oil stained and extremely smooth paper will make printing effect poor.
- Please make sure that there is no dust, fluff, etc. on the paper.
- Paper shall be put on a flat surface and stored under a cool and dry environment.
- To avoid influencing the definition, please don't open the scanner cover during scanning with the platen.


2.5.2. Scan with the automatic document feeder (ADF)

The document feeder supports single-sided scanning and automatic duplex scanning. Refer to [Chapter 9](#) for the scanning method.

1. Put the original into the ADF with its front upward and top fed first.

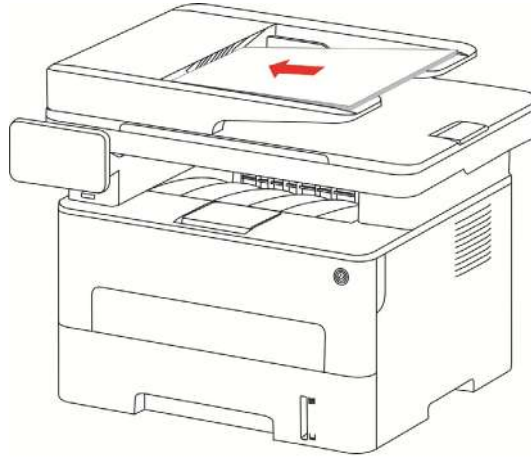

2. Adjust the document guide till it gets close to the paper stack.

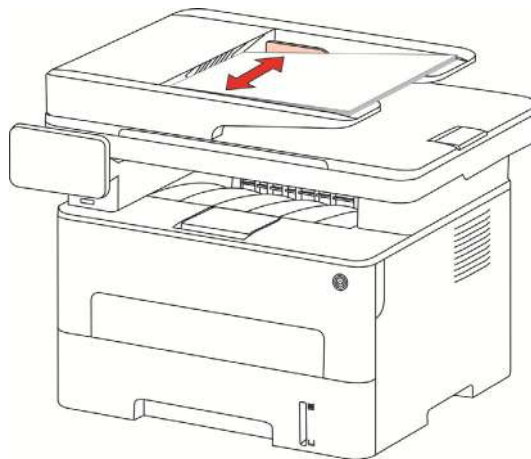

Note: • The ADF supports feeding 50 pieces of paper at most that should be fed one by one.

3. Driver installation and uninstallation

3.1. How to install Windows printer driver

Windows driver installation software provides two installing methods: one-click installation and manual installation. We recommend one-click installation, which can help to install driver automatically in a faster and more convenient way. If you have any difficulty in using one-click installation, please try manual installation.



Note: • Driver installation interface may differ because of different models and functions, so the schematic diagram is only for your reference.

3.1.1. One-click Installation

One-click installation provides three methods of installation: connect the printer via USB cable, connect the printer via wired network, and connect the printer via wireless network. You can choose one of them according to your habit.



3.1.1.1. Method I: Connect the printer via USB cable

1. Connect the printer to computer via USB cable, power the printer and computer on.
2. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
 - Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

3. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.
4. Click on the “One-click installation” button in Method I and enter into the installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

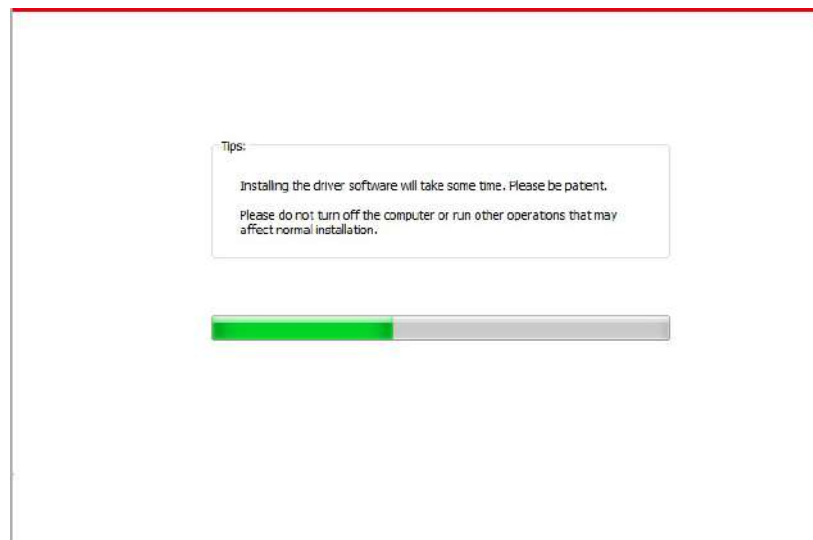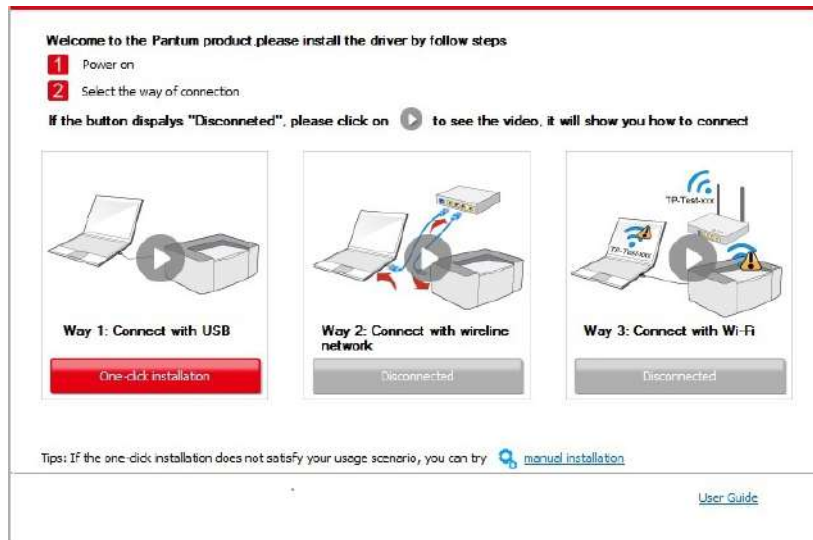

5. After the installation, click “Print & Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.2. Method II: Connect the printer via wired network

1. Turn the power of printer and computer on.
2. Connect the computer to wired network.
3. Connect network cable to the network interface of printer, to make sure the printer is connected to computer network (please refer to [Chapter 4](#) for network setup).
4. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.

- Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

5. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.


6. Please click on the “One-click installation” button in Method II and install driver software.




Note : • You can put your mouse cursor in the “One-click installation” button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.



- You can check the printer IP address through “Network configuration page” (Please see [Chapter 12.4](#) for how to print).

- Click on the “One-click installation” button to enter installation process if your software has searched only one printer. The process may need some time, and the duration is related to your computer configuration. Please wait patiently.

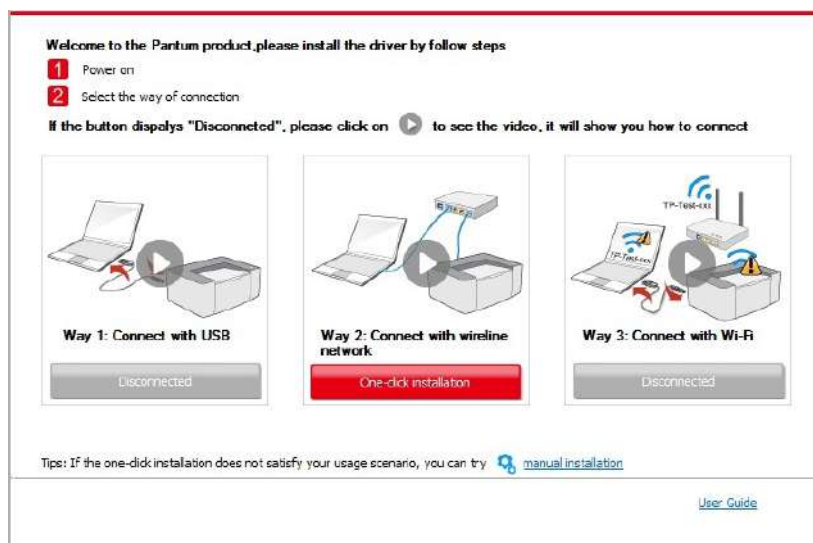

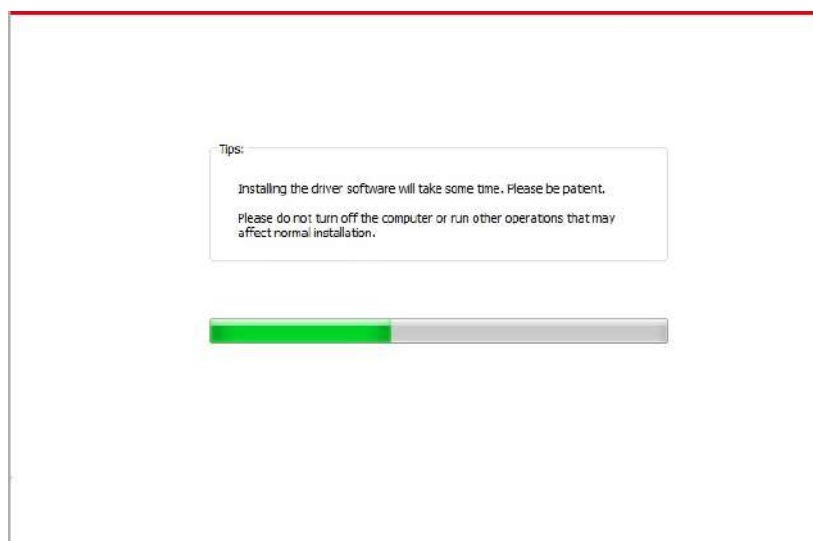

- If your software has searched several printers, click on the "One-click installation" button, and the printer list interface will pop up. Please select the printer that you need according to your printer wired network IP address or host ID.

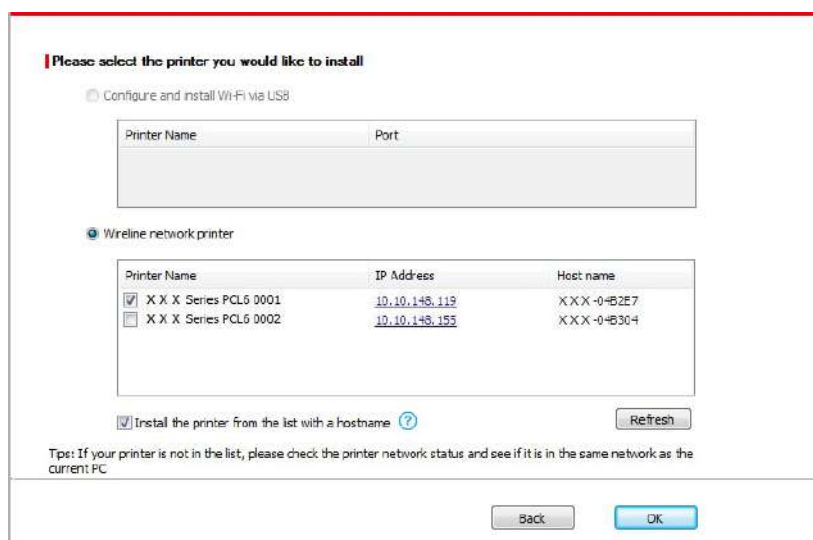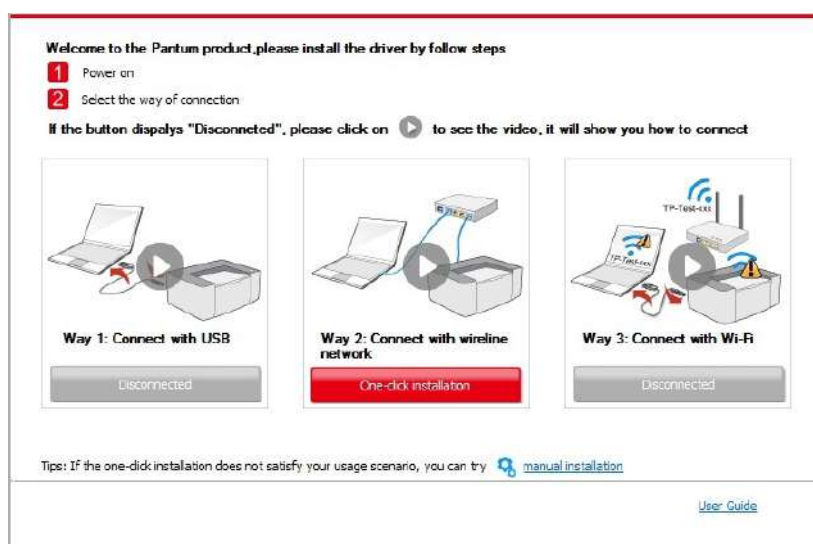



Note: • If the printer you need is not shown in the list, please click “Refresh” button to search again. If it is not found, please check if the printer and computer are in the same network. (Please see [Chapter 5.3](#) for how to check).

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option “Install the printer in the list with host ID”.
-

7. After the installation, click “Print & Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.3. Method III: Connect the printer via wireless network

Please check if the printer is connected with wireless network when installing the printer driver software. If disconnected, please install it with reference to [Chapter 3.1.1.3.1](#). If connected, please install it with reference to [Chapter 3.1.1.3.2](#).



Note: • You can print "Network configuration page" to confirm printer network connection status to see if printer is connected with network (Please see [Chapter 12.4](#) for how to print).

3.1.1.3.1. The printer is not connected with wireless network

3.1.1.3.1.1. Configure wireless network via USB cable and install driver

Since some computers are not provided with wireless network function, this section is divided into “Connect computer to router via Wi-Fi” and “Connect computer to router via wired connection” to introduce installation process.

I. Connect computer to router via Wi-Fi

1. Computer is already connected to router via Wi-Fi.
2. Connect the printer to computer via USB cable, then power the printer on.
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “ DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
 - Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.


4. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.
5. Click the “One-click installation” button in Method III to install driver software.





Note: • You can put your mouse cursor in the “One-click installation” button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.

- You can check the printer IP address through “Network configuration page” (Please see [Chapter 12.4](#) for how to print).

- Click “One-click installation” button if your software has searched only one printer, and enter into installation process to complete automatic network configuration and driver installation.

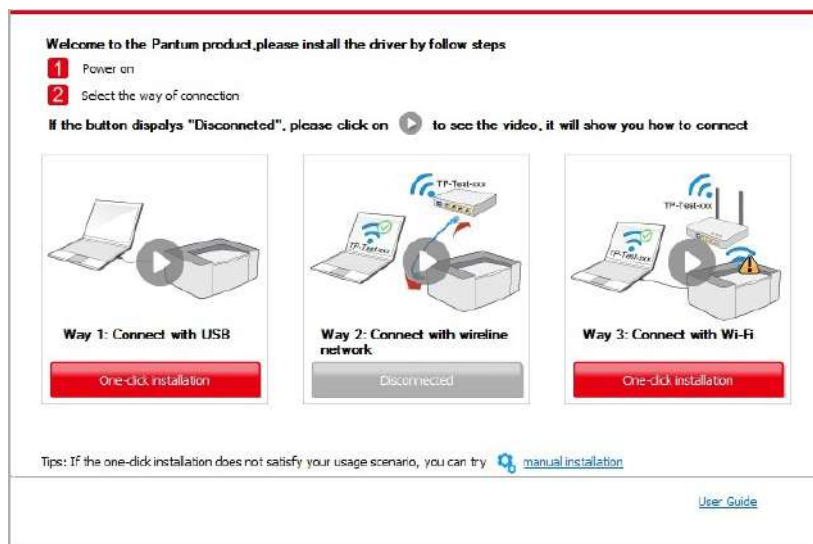

- If your software has searched several printers, click “One-click intallation” button, and the printer list interface will pop up. Please select “Configure printer with Wi-Fi via USB and install” and select USB printer, click “Confirm” button and enter into installation process to complete automatic network configuration and driver installation.

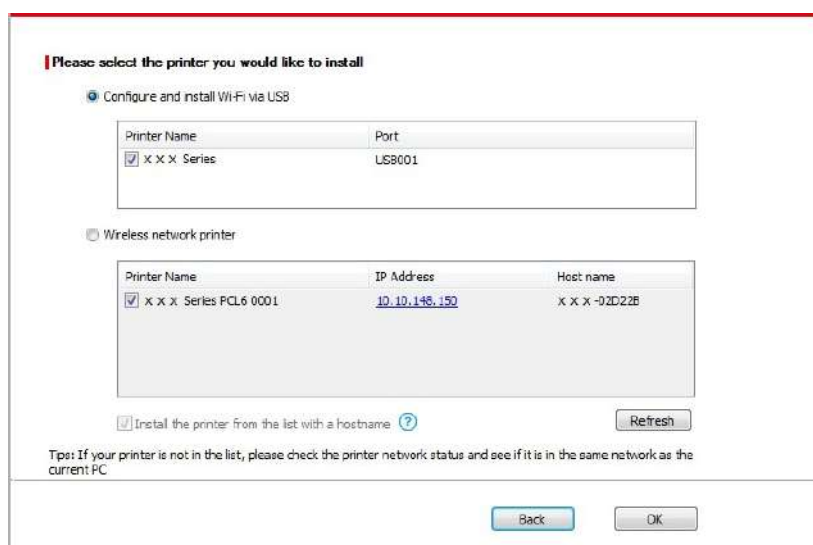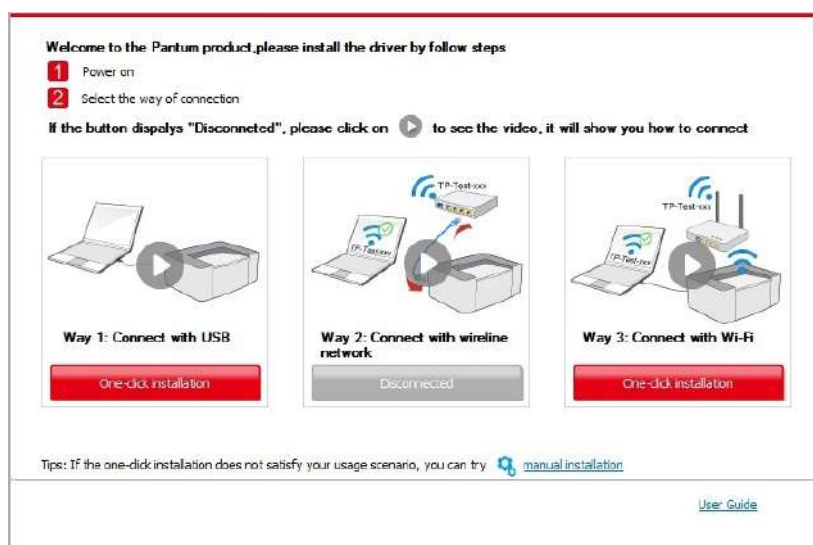

Note: • When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

6. After the installation, click “Print &Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

II. Connect computer to router via network cable

1. Connect computer to router via network cable.
2. Connect the printer to computer via USB cable, then power the printer on.
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
 - Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.




Note:• Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

4. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.
5. Please click on the “One-click installation” button in Method III and install driver software.



Note:• You can put your mouse cursor in the “One-click installation” button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.

- You can check the printer IP address through “Network configuration page” (Please see [Chapter 12.4](#) for how to print).

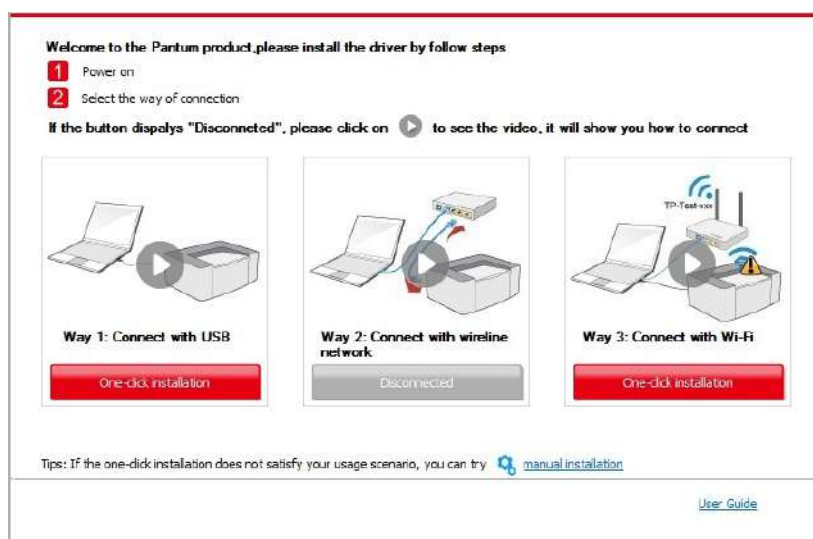

1. Please click on "Printing wireless network information page" to get the network name and encryption method. Please skip this step if you already know the network name and encryption method.

[Printing wireless network information page](#)

2. Please enter wireless network user name and password.

Network Name(SSID):

Encryption method:

Password:


☐ Show password:


- Click on the "One-click installation" button if your software has only searched only one printer, and the wireless network configuration interface will pop up, input the SSID and password that you need, then click "Confirm" button, and enter into installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

Welcome to the Pantum product, please install the driver by follow steps

1 Power on


2 Select the way of connection

If the button displays "Disconnected", please click on  to see the video, it will show you how to connect




Way 1: Connect with USB

[One-click installation](#)



Way 2: Connect with wireless network

Disconnected



Way 3: Connect with Wi-Fi

[One-click installation](#)

Tips: If the one-click installation does not satisfy your usage scenario, you can try [manual installation](#)

[User Guide](#)

- If your software has searched more than one printers, the printer list interface will pop up. You need to configure the current printer which is connected via USB cable to wireless network and install driver. Please select "Configure the print via USB and install" on the printer list interface and check the USB printer option. Click the "Confirm" button, and the wireless network configuration interface will pop up. Input the wireless SSID and password that you need, then click "Confirm" button, and enter into installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

Please select the printer you would like to install

☒ Configure and install Wi-Fi via USB

Printer Name	Port
<input checked="" type="checkbox"/> X X X Series	USB001

☐ Wireless network printer

Printer Name	IP Address	Host name
<input checked="" type="checkbox"/> X X X Series PCL6 0001	10.10.148.150	X X X -02D22B

☒ Install the printer from the list with a hostname [?](#) [Refresh](#)

Tips: If your printer is not in the list, please check the printer network status and see if it is in the same network as the current PC.

[Back](#) [OK](#)

1. Please click on "Printing wireless network information page" to get the network name and encryption method. Please skip this step if you already know the network name and encryption method.

[Printing wireless network information page](#)

2. Please enter wireless network user name and password.

Network Name (SSID):

Test-AP2

Encryption method:

WPA/WPA2

Password:

••••••••

☐ Show password:

[Back](#) [OK](#)



Note: • When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

6. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.3.1.2. Connect computer to printer via Wi-Fi direct and install the driver

Connect the computer to printer via a direct Wi-Fi connection. It is applicable to wireless network without infrastructure mode, but it still needs scenario of temporary use of printer via wireless network. You can directly connect the computer that has wireless function to the printer to realize printing function.

1. Turn the power of printer and computer on.

2. Connect computer to the Wi-Fi Direct network of the printer (please refer to [Chapter 5.2.2.2](#) for setup method).

3. Place the attached installation CD in the computer CD-ROM:


- Windows XP system: automatically run the installation procedure.
- Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
- Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
- Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.



Note: Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

4. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.

5. Click on the “One-click installation” button in Method III, and enter into installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

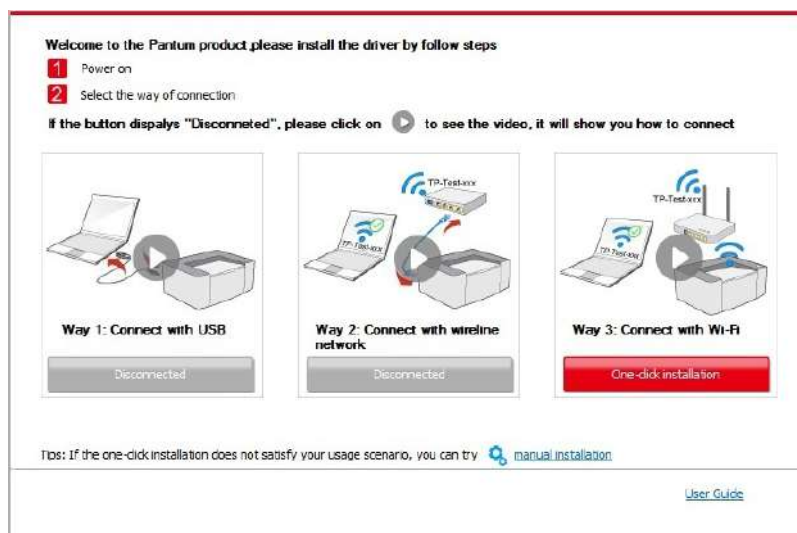



6. After the installation, click “Print & Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.3.2. The printer is already connected to wireless network

1. The printer is already connected to wireless network, you can print the “Network configuration page” to check. (See [Chapter 12.4](#) to for how to print).
2. Connect the computer to printer network.
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
 - Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.


4. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.
5. Click the “One-click installation” button in Method III to install driver software.





Note:• You can put your mouse cursor in the “One-click installation” button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.

- You can check the printer IP address through “Network configuration page” (Please see [Chapter 12.4](#) for how to print)

- Click on the “One-click installation” button to enter installation process if your software has searched only one printer. The process may need some time, and the duration is related to your computer configuration. Please wait patiently.

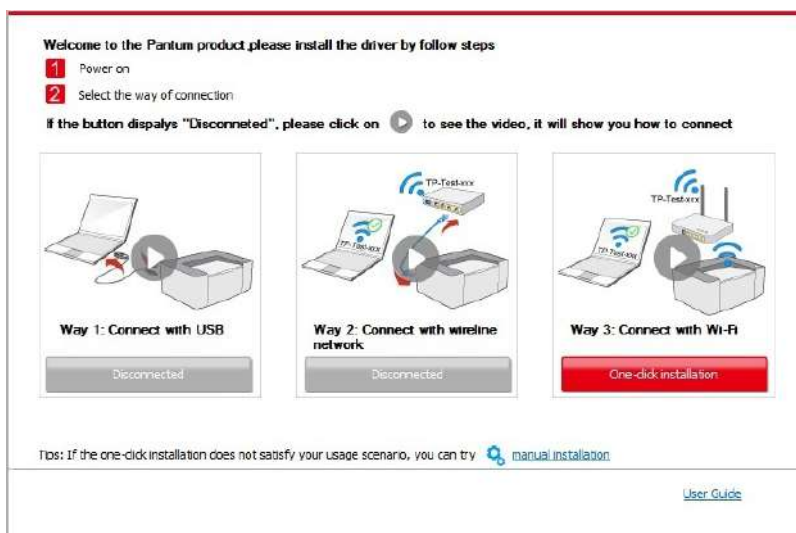

- If the software has searched several printers, the printer list interface will pop up. Please select the printer you need according to your printer wired network IP address or host ID .

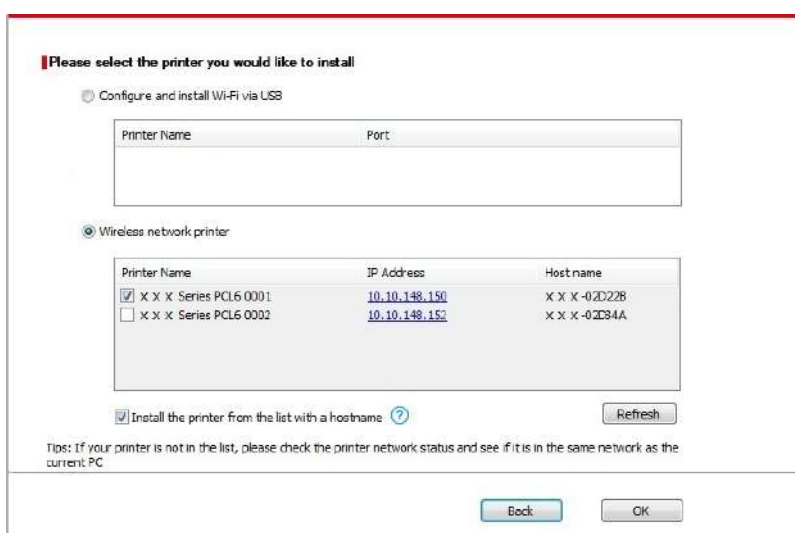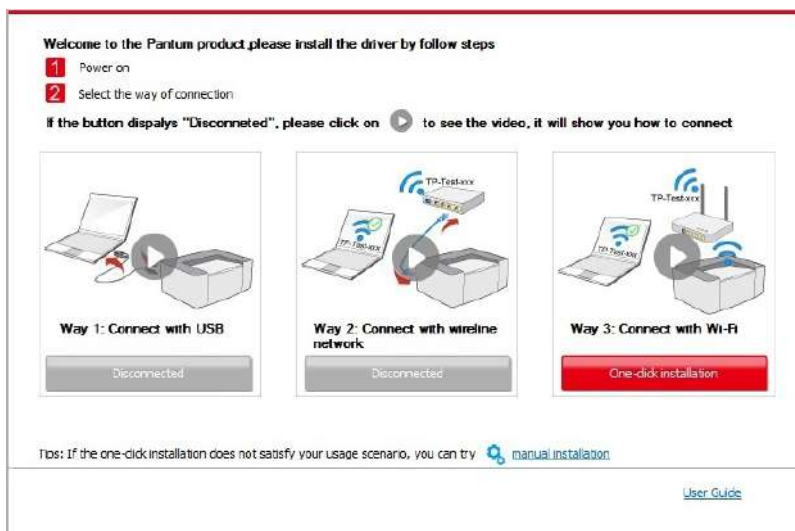

Note: • If the printer you need is not shown in the list, please click “Refresh” button to search again. If it is not found, please check if the printer and computer are in the same network. (Please see [Chapter 5.3](#) for how to check).

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option “Install the printer in the list with host ID”.

6. After the installation, click “Print & Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.2. Manual installation

- Before installing the drive, you need to learn about printer model by printing printer information page out and check the product name (please refer to [Chapter 12.4](#) for printing methods).

3.1.2.1. Installation via USB connection

1. Connect the printer to computer via USB cable, power the printer and computer on.

2. Place the attached installation CD in the computer CD-ROM:

- Windows XP system: automatically run the installation procedure.
- Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
- Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
- Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.




Note:• Some computers may be unable to auto play the CD because of system configuration. Please double click “Computer” icon, find “DVD RW driver”, then double click “DVD RW driver” to run the installation procedure.

3. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.

4. Click on the “Manual installation” at the bottom of driver installation interface, and enter into manual installation interface.

5. Please select installation language and printer model.

6. Select “Connect via USB” and click on “Install”.

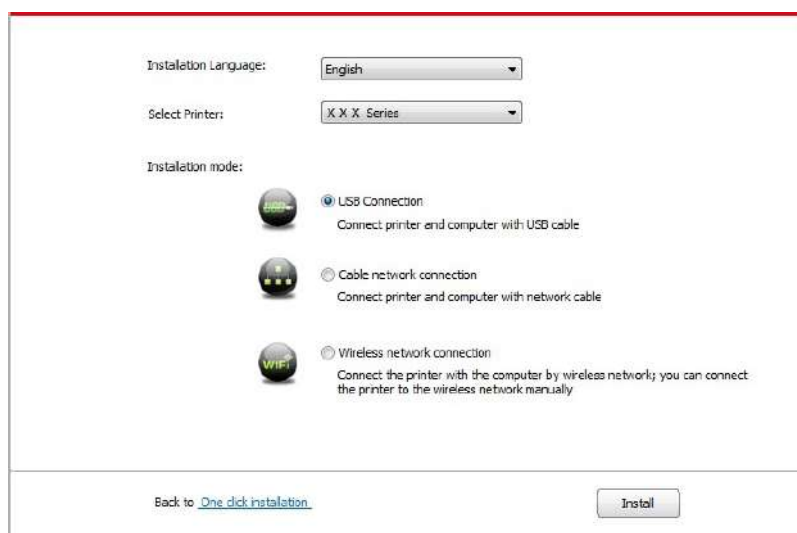

7. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.
8. After the installation, click “Print & Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.


3.1.2.2. Installation via wired network connection

1. Turn the power of printer and computer on.
2. Connect the computer to wired network.
3. Connect network cable to the network interface of printer, to make sure the printer is connected to computer network (please refer to [Chapter 4](#) for network setup).
4. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
 - Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.




Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click “Computer” icon, find “DVD RW driver”, then double click “DVD RW driver” to run the installation procedure.

5. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.
6. Click on the “Manual installation” at the bottom of driver installation interface, and enter into manual installation interface.
7. Please select installation language and printer model.
8. Select “Wireline network connection” and click on “Install”.

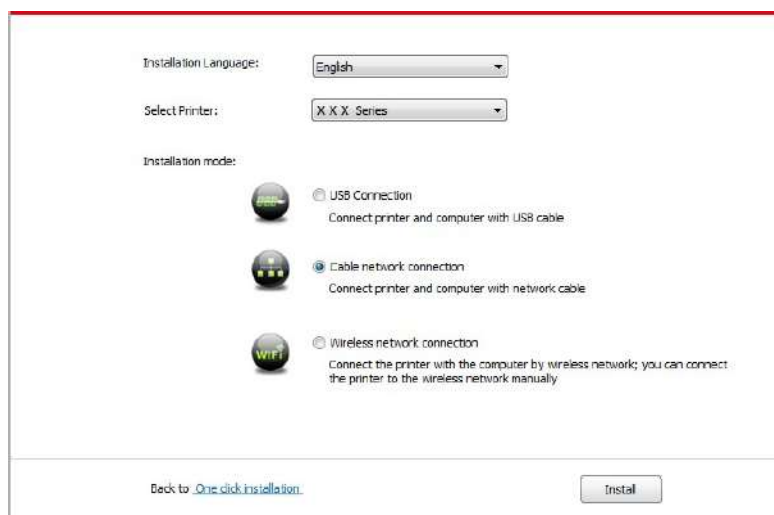

9. The installation software will search the printer automatically and the searching process may need some time.

10. After finishing searching, select the printer that needs to be connected and click “Next”.

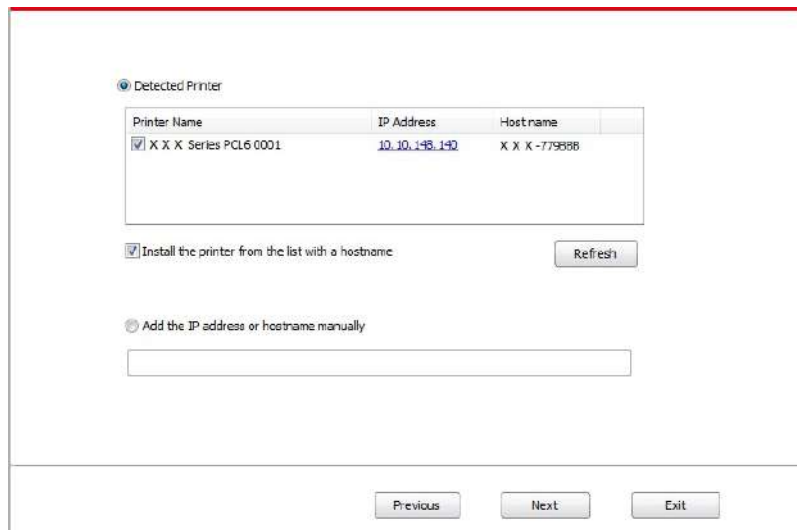

Printer Name	IP Address	Host name
<input checked="" type="checkbox"/> X X X Series PCL6 0001	10.10.148.142	X X X -779886

☒ Install the printer from the list with a hostname Refresh

☐ Add the IP address or hostname manually

Previous Next Exit



Note: • If the printer you need to connect is not in the list of printers searched, please click “Refresh” to search again.

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".
- If IP address or host name is added manually, you need to know the IP address of the printer connected or host name. If they are not made clear, please print the “NetConf Pg” and view “IP Address” and “Host name” (Please refer to [Chapter 12.4](#)).

8. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.

9. After the installation, click “Print & Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.2.3. Installation by wireless network connection mode

Wireless network connection type is divided into basic structure mode and Wi-Fi Direct mode (please refer to [Chapter 5](#) for details).

3.1.2.3.1. Installation in basic structure mode

1. Connect computer to access point (wireless router).
2. Connect the printer to computer via USB cable, then power the printer on.
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
 - Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

4. Click on the "I agree" button on the right bottom corner after reading the license agreement and enter into driver installation interface.
5. Click on the "Manual installation" at the bottom of driver installation interface, and enter into manual installation interface.
6. Please select installation language and printer model.
7. Select "Wireless network connection" and click on "Install".

The screenshot shows a printer installation window with the following fields and options:

- Installation Language:** A dropdown menu currently set to "English".
- Select Printer:** A dropdown menu currently set to "X X X Series".
- Installation mode:** Three radio button options, each with a printer icon:
 - ☐ **USB Connection**
Connect printer and computer with USB cable
 - ☐ **Cable network connection**
Connect printer and computer with network cable
 - ☒ **Wireless network connection**
Connect the printer with the computer by wireless network; you can connect the printer to the wireless network manually

At the bottom of the window, there is a link "Back to [One click installation](#)" and an "Install" button.

8. 8. Select “Yes, I want to configure the printer’s wireless network” on the wireless setup window popped out, and operate according to the prompts to set up the printer to wireless network (please refer to [Chapter 5.1.1](#) for setup method).



The installation program will determine whether wireless network of the printer is to be configured based on your choice in this step:

- if you need to configure or change wireless network of the printer, please select “yes” after the printer connects USB;
- if not, please select “no”.


☒ Yes, I want to configure the printer's wireless network.

☐ No, the printer has been connected to wireless network.

Previous Next Exit

9. The installation software will search the printer automatically after wireless network is configured successfully. The search process may need some time.

10. Select the printer needs to be connected and click “Next”.

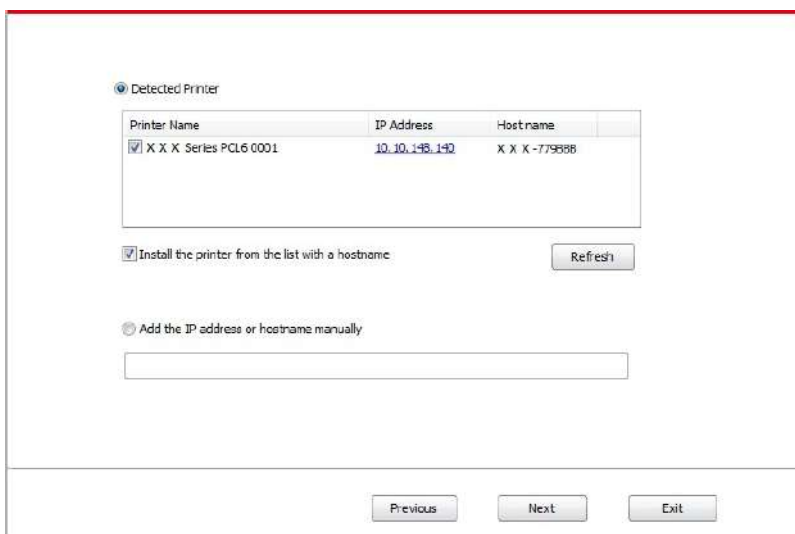

Detected Printer

Printer Name	IP Address	Host name
<input checked="" type="checkbox"/> X X X Series PCL6 0001	10.10.148.142	X X X -779888

☒ Install the printer from the list with a hostname Refresh

☐ Add the IP address or hostname manually

Previous Next Exit



Note: • If the printer you need to connect is not in the list of printers searched, please click “Refresh” to search again.

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

- If IP address or host name is added manually, you need to know the IP address of the printer connected or host name. If they are not made clear, please print the “NetConf Pg” and view “IP Address” and “Host name” (Please refer to [Chapter 12.4](#)).

11. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.

12. After the installation, click “Print & Test Page” button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.2.3.2. Installation in Wi-Fi Direct mode

1. Turn the power of printer and computer on.
2. Connect computer to the Wi-Fi Direct network of the printer (please refer to [Chapter 5.2.2.2](#) for setup method).
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up “Autoplay” interface, click “Autorun.exe” to run the installation procedure.
 - Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation procedure.
 - Windows 10 system: When the “DVD RW driver” window pops up from the right top corner of computer desktop, click anywhere in the window, then click “Autorun.exe” to run the installation procedure.



Note: Some computers may be unable to auto play the CD because of system configuration. Please double click “Computer” icon, find “DVD RW driver”, then double click “DVD RW driver” to run the installation procedure.

4. Click on the “I agree” button on the right bottom corner after reading the license agreement and enter into driver installation interface.
5. Click on the “Manual installation” at the bottom of driver installation interface, and enter into manual installation interface.
6. Please select installation language and printer model.
7. Select “Wireless network connection” and click on “Install”.

Installation Language: English


Select Printer: X X X Series

Installation mode:

- ☐ USB Connection
Connect printer and computer with USB cable
- ☐ Cable network connection
Connect printer and computer with network cable
- ☒ Wireless network connection
Connect the printer with the computer by wireless network; you can connect the printer to the wireless network manually

Back to [One click installation](#)

8. Select “No, the printer has been connected to wireless network” on the wireless setup window popping out, and then click “Next”.

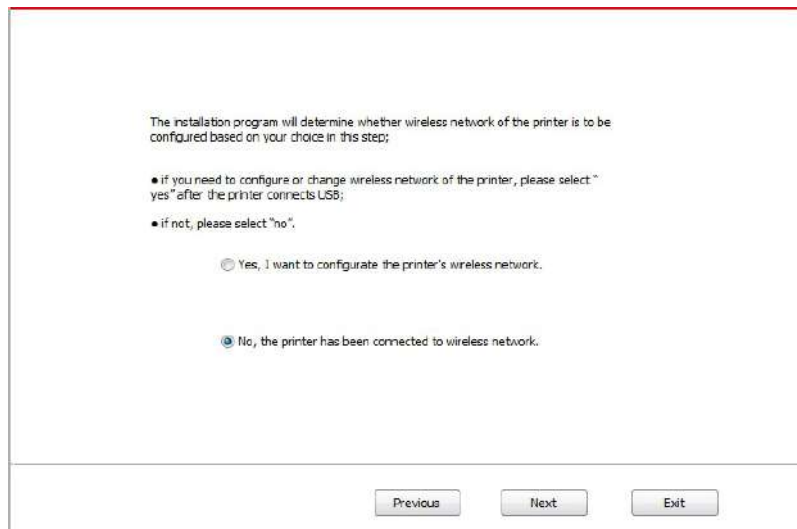

The installation program will determine whether wireless network of the printer is to be configured based on your choice in this step:

- if you need to configure or change wireless network of the printer, please select “yes” after the printer connects USB;
- if not, please select “no”.


☐ Yes, I want to configure the printer's wireless network.

☒ No, the printer has been connected to wireless network.

Previous Next Exit

9. The installation software will search the printer automatically and the searching process may need some time.

10. Select the printer needs to be connected and click “Next”.

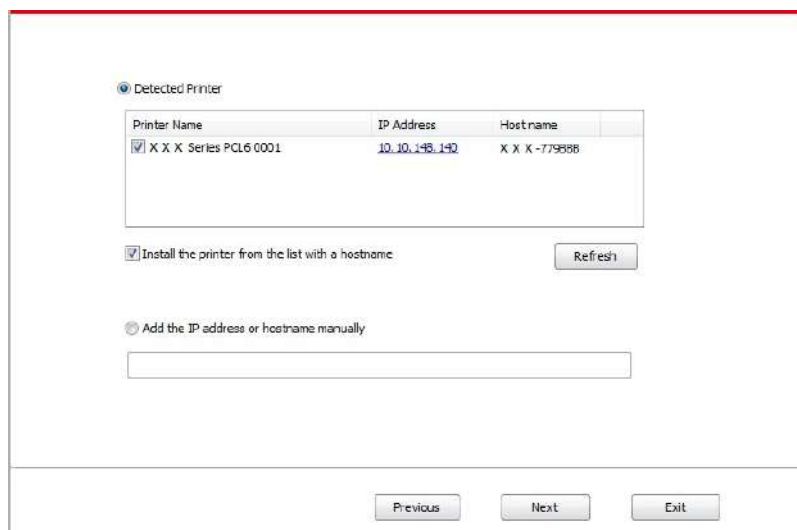

Detected Printer

Printer Name	IP Address	Host name
<input checked="" type="checkbox"/> X X X Series PCL6 0001	10.10.145.142	X X X -779888

☒ Install the printer from the list with a hostname Refresh

☐ Add the IP address or hostname manually

Previous Next Exit



Note: • If the printer you need to connect is not in the list of printers searched, please click “Refresh” to search again.

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

- If IP address or host name is added manually, you need to know the IP address of the printer connected or host name. If they are not made clear, please print the “NetConf Pg” and view “IP Address” and “Host name” (Please refer to [Chapter 12.4](#)).

11. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.

12. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.3. Method of driver unistallation

Windows 7 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.

1. Click the Start menu of computer and then click All programs.
2. Click Pantum, and then Click Pantum XXX Series.

Pantum XXX Series where XXX represents product model.

3. Click uninstall to delete the driver according to instructions on uninstall window.
4. Restart computer after finishing unloading.

3.2. Mac system driver installation

- Driver installation under Mac system is divided into 2 steps, driver installation and adding a printer. If you are going to print in AirPrint mode, there is no need to install a driver and you just need to add a printer directly.

- When you are installing a driver with wired or wireless network, you may need to know the Bonjour name of printer. Please print the “Network setup page” to view it. (Please refer to [Chapter 12.4](#)).

3.2.1.Driver installation

Mac 10.11 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.


1. Turn the power of printer and computer on.

2. Insert the CD accompanying with printer in the CD driver of your computer, and double click Pantum XXX Series installation package. (XXX in Pantum XXX Series represents product model.)




3. Click “Continue”.


4. Read licensing agreement and then click “Continue”.

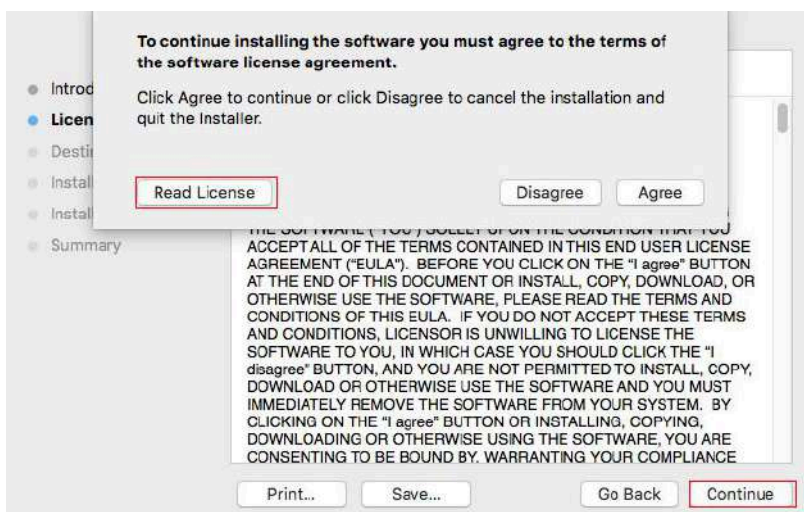

5. Click “Agree” on the prompt window popping out to accept the licensing agreement.
6. Click “Install”.
7. Input computer password and click “Install Software”.

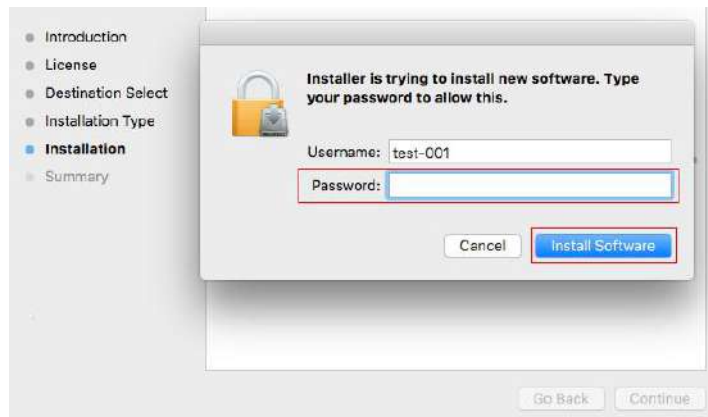

8. Click “Continue Installation” on the prompt window popping out.
9. The system will finish driver installation automaticall .
 - If using a USB cable to connect a computer with a Wi-Fi model printer, a wireless network configuration prompt window will pop up during driver installation, as shown in following picture.

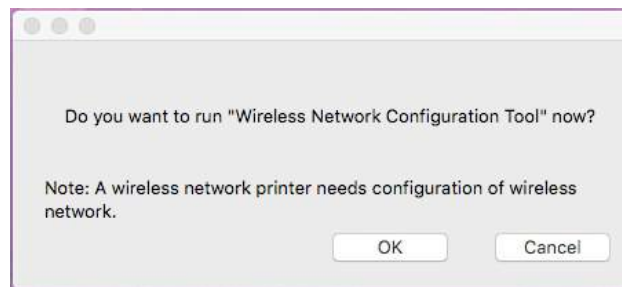


Note: • click “Yes”, you can configure printer’s wireless network via wireless network configuration tool (refer to [Chapter 5.1.1](#) for how to make configuration).When configuration is completed, unplug USB cable, and then on the pop-up “Add Printer” interface, you may add the network-connected printer(refer to [Chapter 3.3](#) for how to add printer).

• Click “No”, you can add a USB-connected printer on the pop-up “Add Printer” interface (refer to [Chapter 3.3](#) for how to add printer).


If using a USB cable to connect a computer with a non-Wi-Fi model printer, a “Add Printer” interface will pop up during the driver installation and you can add a printer here (refer to [Chapter 3.3](#) for how to add printer).

3.3.Add printer to Mac system

3.3.1.Add up the printer via USB

1. Connect the printer to computer with USB cable and then turn power on.
2. Enter the “System Preferences” – “Printers & Scanners” of computer.
3. Click  button to select “Add Printer or Scanner”.
4. Select printer and then select the corresponding printer mode from the “Use” menu popping out.
5. Click “Add”.

3.3.2.Add up the printer via wireline connection

1. Turn the power of printer and computer on.
2. Connect the computer to wired network.
3. Connect the network cable to the network interface of printer, and make sure the printer is connected to the computer network (Please refer to Chapter 4 for network setup).
4. Enter the “System Preferences” – “Printers & Scanners” of computer.
5. Click  button to select “Add Printer or Scanner”.
6. Select printer and then select the corresponding printer mode from the “Use” menu popping out.
7. Click “Add”.


3.3.3. Add up the printer via wireless connection

1. Turn the power of printer and computer on.
2. Make sure the wireless network connection between computer and printer is set up.




Note: • In case of basic structure mode, connect wireless network printer to the access point (wireless router). Please refer to [Chapter 5.1](#) for connection method.

- In case of Wi-Fi Direct mode, connect wireless client to wireless network printer directly. Please refer to [Chapter 5.2](#) for connection methods.

3. Enter the “System Preferences” – “Printers & Scanners” of computer.
4. Click  button to select “Add Printer or Scanner”.
5. Select printer and then select the corresponding printer mode from the “Use” menu popping out.
6. Click “Add”.

3.3.4. Add AirPrint printer

1. Turn the power of printer and computer on.
2. Make sure the connection between printer and computer is set up (USB connection or network connection).
3. Enter the “System Preferences” – “Printers & Scanners” of computer.
4. Click  button to select “Add Printer or Scanner”.
5. Select printer and select “Secure AirPrint” (data encryption) or “AirPrint” (no encryption) in the “Use” option box.
6. Click “Add”.



Note: • When the printer is connected to computer with USB cable, the system will recognize and add AirPrint automatically.

- If AirPrint printer of network connection is added, then the connecting USB cable should be disconnected first before adding the printer.
- AirPrint printer is named after the ending of “AirPrint”.

4. Wired network setup (applicable to wired network models)

In case printers support wired network printing, they can be connected to network to control printer to print in wired network mode.

4.1.Set IP Address

The IP address of the printer may be automatically obtained through DHCP function or set manually.

4.1.1.Automatic Setting

DHCP automatic setting function is enabled by default on the printer.

- 1.Connect the printer to the network through a network cable and complete the startup preparation work.
2. The printer will receive the IP address assigned by server automatically. It may take server minutes to receive IP address under the influence of network environment

You can check the IP address of printer by printing “Network setup page” out (please refer to [Chapter 12.4](#) for printing method) or check network information by viewing the control panel of printer (please refer to [Chapter 12.3](#) for viewing methods). If the IP address is not listed, please check network environment and then try again after waiting for several minutes.



Note: • If DHCP server fails to assign IP address automatically, the printer will get the link-local address assigned by printer automatically: 169.254.xxx.xxx.


4.1.2.Manual Setting

To set up IP address for printer through the control panel of printer manually, please refer to [Chapter 12.2](#) for details.

To set up IP address for printer through the embedded Web server manually, please refer to [Chapter 6.2.1](#) for details.


5. Wireless network setup (applicable to Wi-Fi models)

Wireless network connection type is divided into basic structure mode and Wi-Fi Direct mode. If you have problems with wireless network setup, please refer to [Chapter 5.3](#) Wireless Network Setup FAQs.

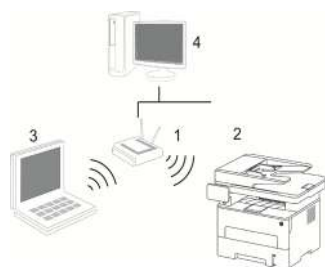

Basic structure mode: connecting to a wireless device via router

1. Access point (wireless router)
2. Wireless network printer
3. Computer connecting to access point via wireless network
4. Computer connecting to access point via network cable

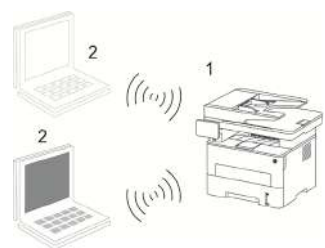

Wi-Fi Direct mode: wireless client is connecting to a printer with Wi-Fi function

1. Wireless network printer
2. Wireless client is directly connecting to a wireless network printer

5.1. Basic structure mode

You can connect a computer to your printer via access point (wireless router) as the medium. Access point (wireless router) connection is divided into wireless network setup and Wi-Fi Protected Setup (WPS).

Important: Before wireless network installation, you must learn about the service set identifier (SSID) and password of your access point in order to use them during wireless network setup. If they cannot be determined, please consult your network administrator or access point (wireless router) manufacturer.

5.1.1. Wireless network setup tools

If your computer has been installed with a driver and had been connected to wireless network, but the wireless network was changed, you can set it again with wireless network setup tools.

5.1.1.1. Preliminary preparations

1. Access point (wireless router).
2. A computer that has been connected to network.
3. A printer that has wireless network function.


5.1.1.2. Setup methods of wireless network setup tools

1. Take the wireless network setup tool in computer.

1) **Windows system:** Click the “Start menu” – “All programs” – “Pantum” – Product name – “Wireless network setup tool”.


2) **Mac system:** click “Go” - “Applications” – “Pantum” – “Utilities” – “Wireless Network Configuration Tool” on the computer Finder menu bar.

2. Use USB cable to connect and configure. Select “ es, I have an USB cable that can be used for installation” in the following interface. Click “Next”.

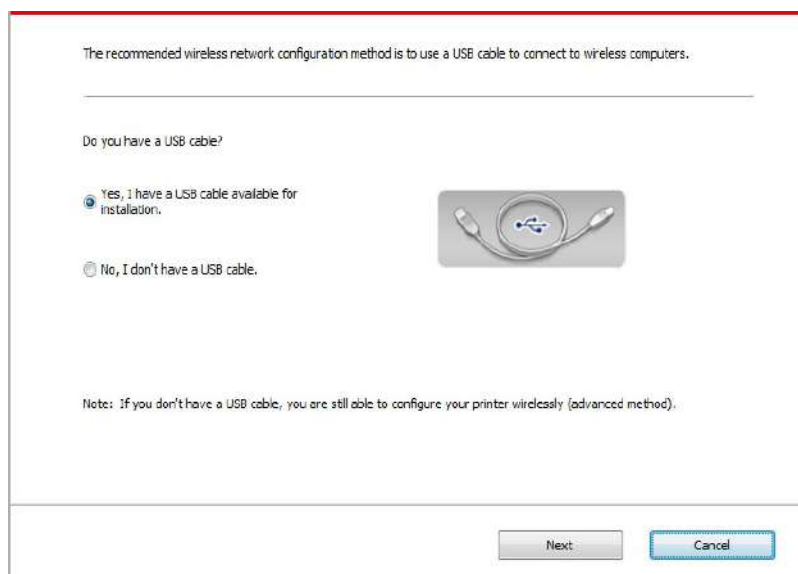

2.1 The computer has been connected to wireless network.

1) The currently wireless network currently connected to computer is selected as wireless network configuration tool by default. Complete configuration according to interface prompt.

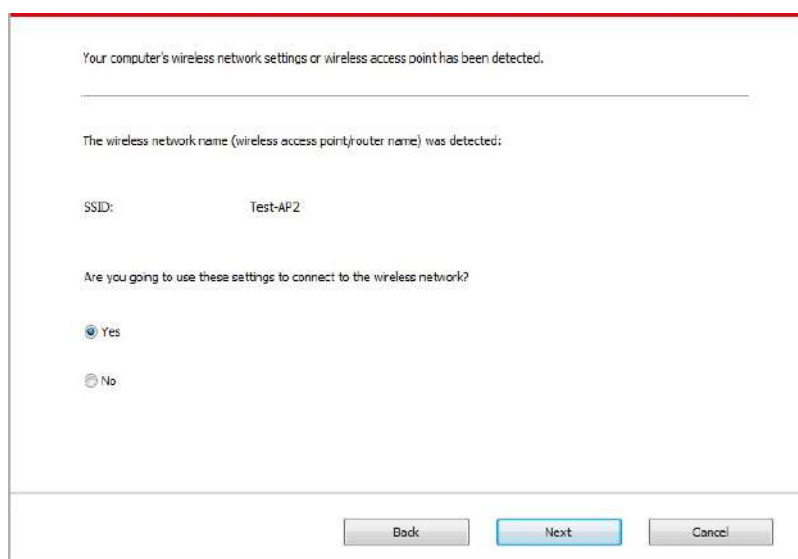



Note: • The SSID you selected should be consistent with the SSID of access point (wireless router) connected to your computer.

2) Please tick “No” to configure other wireless network needed to connect to. Complete configuration according to interface prompt.

Network Name	Encryption method	Signal Strength
Test-AP2	WPA/WPA2	100%
Test-AP3	WPA/WPA2	100%

Refresh

Network Name (SSID):
Test-AP3

Encryption method:
WPA/WPA2

Password: ☐ Show password


Back Next Cancel



Note: • At present, the printer supports 3 types of safe modes: none, WEP and WPA/WPA2.

- 1) None: There is no encryption method used.
 - 2) WEP: Send and receive data via security key by using WEP (Wired Equivalent Privacy). WEP key is applicable to 64-digit and 128-digit encrypted network and can contain numbers and letters at the same time.
 - 3) WPA/WPA2: it is the pre-shared key (PSK) of Wi-Fi protected access which connects wireless device and access point via TKIP or AES encryption (WPS-Personal). The working length of WPA/WPA2 is within the PSK of 8-63 characters.
- The display password is not ticked by default; if it is ticked, all passwords input can be seen in clear text.
-

2.2 The computer is not connected to wireless networkInput.
Input the SSID (case sensitive) and password of access point (wireless router) in the interface below. Complete configuration according to interface prompt.

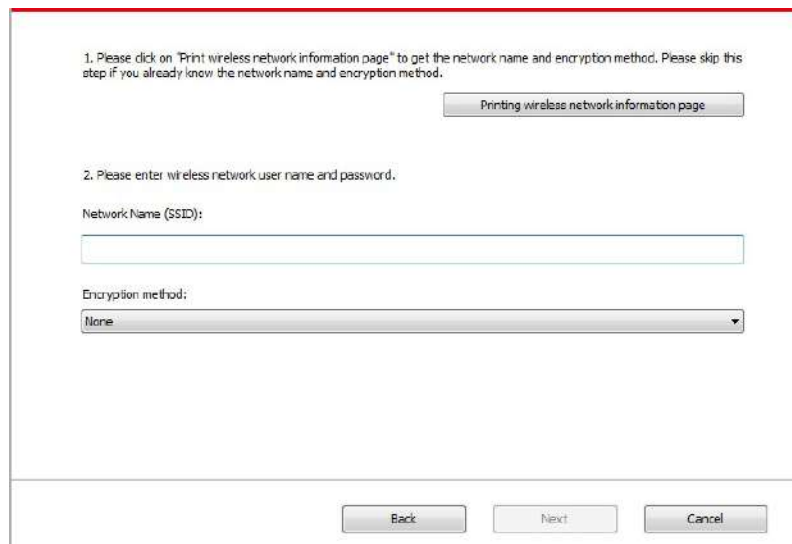

1. Please click on "Print wireless network information page" to get the network name and encryption method. Please skip this step if you already know the network name and encryption method.

Printing wireless network information page

2. Please enter wireless network user name and password.

Network Name (SSID):

Encryption method:

None

Back Next Cancel



Note: • If you do not know the SSID of access point (wireless router), please click "Print Wireless Network Information Page" to view the SSID of the needed access point (wireless router).

- If the printer cannot be used normally after wireless network setup is finished, please install the drive again. Please select "wireless network connection" as the installation method .

3. Use WPS connection .

Select "No, I don't have a USB cable" in the interface below and then click "Next".



The recommended wireless network configuration method is to use a USB cable to connect to wireless computers.

Do you have a USB cable?

☐ Yes, I have a USB cable available for installation.

☒ No, I don't have a USB cable.

Note: If you don't have a USB cable, you are still able to configure your printer wirelessly (advanced method).

Next Cancel

Operate as per real interface. (Please refer to [Chapter 5.1.2](#) for detailed WPS configuration.)



Note: • If the printer cannot be used normally after wireless network setup is finished, please install the drive again. Please select “wireless network connection ” as the installation method .


5.1.2.Wi-Fi Protected Setup (WPS) setup

If access point (wireless router) supports Wi-Fi Protected Setup (WPS), connect printer with wireless network through “Push button configuration (PBC)” and “Personal identification number (PIN)”.


5.1.2.1.Preliminary preparations

1. The access point (wireless router) supports Wi-Fi Protected Setup (WPS).
2. A printer that has wireless network function.


5.1.2.2. Use the “Button Configuration (PBC)” method

1. Turn on the power of printer and access point (wireless router).
2. Make sure the printer is in ready stat
3. From printer control panel navigate to: “  ” -Network set-Wireless conf.-PBC mode.
4. Operate according to the prompt in printer scree

5.1.2.3. Use the “Personal Identification Number (PIN)” method

1. Turn on the power of printer and access point (wireless router).
2. Make sure the printer is in ready stat
3. From printer control panel navigate to: “  ” -Network set-Wireless conf.-PIN mode.
4. Record 8-digit WPS PIN cod
5. Open Web browser, enter IP Add. of access point (wireless router) in Add. field.
6. Access to WPS setting, enter 8-digit PIN code and save.

5.1.3.How to disable the Wi-Fi network connected

1. From printer control panel navigate to: “  ” -Network set-Wireless conf.-Station.
- 2.Select “Close” button and save.

5.2.Wi-Fi Direct mode

You can connect wireless client (including the computer and mobile device with wireless network feature) to wireless network printer without using the access point (wireless router).

5.2.1.Preliminary preparations

1. Printer with the Wi-Fi Direct featur
- 2.2.Wireless client (including computer and mobile device with wireless network feature).

5.2.2.Wi-Fi Direct connection

Enable the Wi-Fi direct connection of the printer before Wi-Fi direct connection.


1.From printer control panel navigate to: “  ” -Network set-Wi-Fi dir.

2.Select “Custom” (or “Auto”) button and save.


5.2.2.1.Connection method of wireless client that supports Wi-Fi Direct feature (direct invitation to connect)

You must use mobile devices that support Wi-Fi Direct function for Wi-Fi Direct connection. The operating steps may differ because of the mobile device you are using.

1. Turn on printer power.
2. Turn on the mobile device and select setup to enter Wi-Fi connection interface.

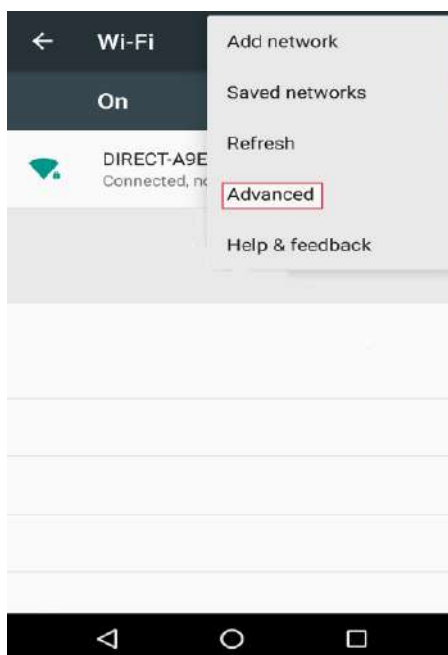

3. Select “Advanced” and then select “Wi-Fi Direct” in advanced WLAN interface.

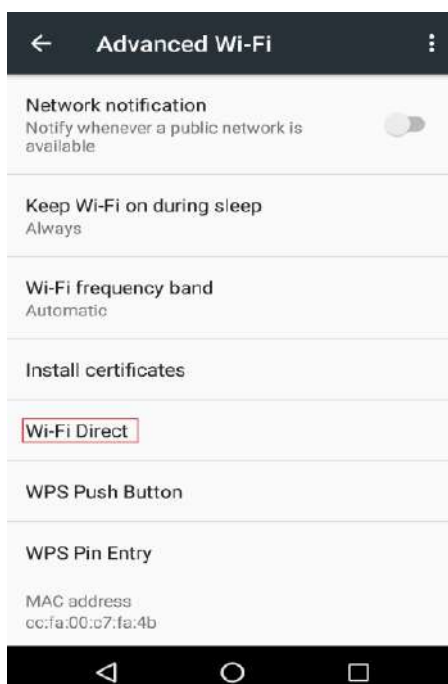


4. Select printer SSID on direct interface to launch a connection invitation.
5. When the panel inquires if connect or not, click "OK" button for confirmation and Wi-Fi Direct



Note: • In case of auto connection mode, the mobile device will start to connect automatically after initiating connection invitation without panel confirmation.


5.2.2.2. Connection method of wireless client that does not support Wi-Fi Direct function (input password to connect)

1. Turn on printer power.
2. From printer control panel navigate to: "  "-Network info-WiFi dir. info to check "Network name" and "Password".
3. Turn on the computer or mobile device with wireless network function; select the SSID of Wi-Fi Direct and input password to connect.



Note: • Initial password of printer for Wi-Fi Direct: 12345678.

5.2.3. How to disable the Wi-Fi Direct

1. From printer control panel navigate to: "  "-Network settings-Wi-Fi dir.
2. Select "Turn off" button and save.

5.3. Wireless network setup FAQs

1. The printer is not found

- If the power of compute , access point (wireless router) or printer is turned on.
- If the computer is connected to printer with USB cable.
- If the printer supports wireless network connection.

2. SSID cannot be found when network is connected

- Inspect if the power switch of access point (wireless router) is turned on.
- The printer cannot find the SSID of the access point (wireless router) you need to connect please check the SSID of access point and try to connect again.
- Every time when the setup of access point (wireless router) is changed, you must set up the wireless network of printer again.

3. Connection failure

- Please inspect if the safe mode and password of access point (wireless router) and printe is correct.
- Inspect the wireless receiving around printe . Signal receiving may be affected if the router is away from the printer or there is an obstacle between them.
- Turn the power of access point (wireless router) and printer off and then restart them and set up.

4. The following aspects should be inspected if the printer has problems while they are used in network:

- Inspect if the firewall software blocks communication. If the computer and printer are connected in the same network but they cannot be searched, the communication might be blocked by firewall software. Please refer to the user guide of firewall software to turn firewall off and then try to search the printer again.
- Inspect if the IP address assignment of printer is correct. You can inspect IP address by printing the network setup information page of printer out.
- Please refer to the following steps to check if printer and computer are in the same network:
 - 1) Select "Command prompt" as shown below.
 - a. Windows 8/10 system: Select "Search" button in the Start Menu and input "Command prompt" in search bar, then press the "Enter" button in the keyboard.
 - b. Windows 7/Vista/XP system: click "Start" menu-"All procedures"-"Attachment"-"Command prompt".
 - 2) Input ping and your printer IP address in popup window, and press "Enter" button
For example: ping XXX.XXX.XXX.XXX("XXX.XXX.XXX.XXX" is printer IP address)
 - 3) If RTT is indicated in the window, that is to say your printer and computer are in the same network. If RTT is not indicated in the window, please refer to [Chapter 5](#) to re-configure the printer wireless network.



Note: • Please refer to the user guide or consult the manufacturer for information related to access point (wireless router).

6.Web server

You can manage printer setup via the embedded Web server.

6.1.Visit the embedded Web server

1. Turn on the power of printer and computer.
2. Connect the printer to network to ensure that the printer is connected to the network where the computer is connected to (please refer to [Chapter 4](#) or [Chapter 5](#) for network setup method).
3. Input the IP address of printer in the address bar of Web browser to visit the Web server imbedded in printer.

View the IP address of printer via control panel (please refer to [Chapter 12.3](#)) or print the “NetConf Pg” out to view the IP Address of printer (please refer to [Chapter 12.4](#)).



Note: • Windows users are suggested to use Microsoft Internet Explorer 8.0 (or higher version) or Firefox 1.0 (or higher version), Mac users are suggested to use Safari 4.0 (or higher version). No matter what kind of browser you are suing, please ensure that JavaScript and Cookies are always enabled. Please ensure compatibility with HTTP 1.0 and HTTP 1.1 when other network browsers are used.

- If the computer cannot visit the Web server embedded in printer, then your computer and printer may be connected to different networks. Please inspect your network environment or consult your network administrator.
-

4. Click “Log in” option, input user name and password (the default user name is admin and the initial password is 000000) and click “Log in”.




Note: • For safety reasons, you are suggested to change the default password, which can be finished in the “User Management” interface.

6.2.Use Web server to manage printer

You can use the embedded Web server to manage printer.

1. View the basic information including product name, printer state and ink cartridge of printer.
2. Set up the network protocol parameters supported by printer.
3. Set up the wireless network connection of printer, and turn on/off wireless network and Wi-Fi Direct function.
4. Set up mail server client and acquire printer state via E-mail notification
5. It supports to configure e-mail address and FTP address to scan the file to be scanned directly to E-mail box or FTP server.

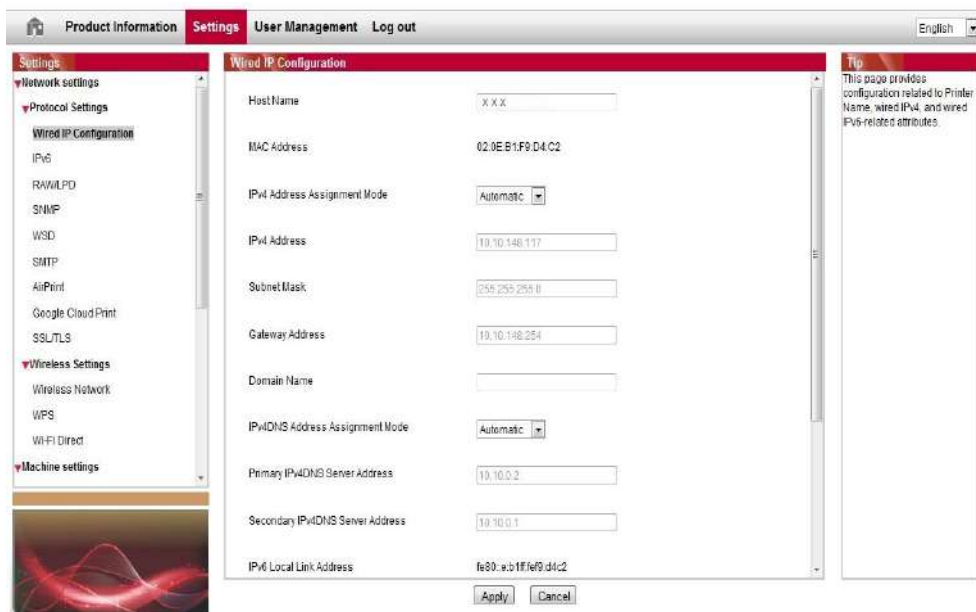

6.2.1.IP address setup

You need to connect your printer to network before IP address setup.

1. In case of wired network model, connect the printer to wired network by connecting to its network interface with network cable.
2. In case of wireless network model, the printer can be connected to wireless network via wireless network setup tools or Wi-Fi Protected Setup(WPS) (please refer to [Chapter 5.1](#)).

6.2.1.1.IPv4 setup

IPv4 address of the printer is divided into DHCP auto assignment and manual setting, and the DHCP auto assignment function is on by default. You can set up the IPv4 address of printer manually to set up fixed IPv4 address for the printer.

1. Turn on printer power to connect printer to network.
2. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
3. Click “Settings” – “Network settings” – “Protocol Settings” – “Wired IP Configuration”
4. Set the IPv4 address assignment mode as “Manual”.
5. Input “IPv4 Address”, “Subnet Mask” and “Gateway Address”, and then click “Apply”.

6.2.1.2.IPv6 setup

1. Turn on printer power to connect printer to network.
2. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
3. Click “Settings” – “Network settings” – “Protocol Settings” – “IPv6”.
4. Tick “Enable IPv6 protocol” and “Enable DHCPv6” (ticked by default) and then click “Apply”.

You can refresh the browser and view the “IPv6 Local Link Address” and “Stateful Address” in “Wired IP Configuration” interface.



Note: • The printer supports using the following IPv6 addresses for network printing and management (please refer to [Chapter 12.4](#) and print “NetConf Pg” view IPv6 address).

- IPv6 local-link address: local IPv6 address set up by oneself (addresses beginning with FE80).
 - Stateful address: IPv6 address set up by DHCPv6 server (if there is no DHCPv6 server in network, the “Stateful Address” cannot be assigned).
 - Stateless address: IPv6 address set up by network router automatically.
-

6.2.2. Wireless setup

You can set up the wireless network, wireless IP setup, Wi-Fi Direct and WPS via wireless setup page. Before setup, please log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).

6.2.2.1. Wireless network

1. Click “Settings” – “Network settings” – “Wireless setup” – “Wireless Network”.

1) The wireless network is defaulted on; please select “Off” option box and then click “Apply” if it needs to be turned off.

2) If you need to set up wireless network, please click the SSID of access point (wireless router) in search list, input secret key and click “Apply”.

6.2.2.2. Wireless IP setup

Only when the wireless network of printer is turned on, the Wireless IP Configuration can be displayed on Web server.

1. Click “Settings” – “Network settings” – “Wireless setup” – “Wireless IP Configuration”

1) DHCPv4 is ticked by default. If IP address needs to be set up manually, please cancel the DHCPv4 checkbox ticked and input the “IPv4 Address”, “Subnet Mask” and “Gateway Address” that you need to set up and then click “Apply”.

6.2.2.3. WPS setup

1. Click “Settings” – “Network settings” – “Wireless setup” – “WPS”.

1) Select the “WPS Startup Method” you need, and then click “Apply” and operate according to page prompt.

6.2.2.4. Wi-Fi Direct setup

1. Click “Settings” – “Network settings” – “Wireless setup” – “Wi-Fi Direct”.

1) The Wi-Fi Direct defaults to be disabled; to enable it, please select the connection method “Auto” or “Manual” and then click “Apply”.



Note: • If Auto selected, the mobile terminal will realize automatic connection upon initiating the connection invitation without the need of confirmation on panel.

- If Manual selected, the mobile terminal cannot realize connection until initiating the connection invitation prior to confirmation on panel.
-

6.2.3. Machine setup

You can add mail address contacts, set up e-mail notification, set up sleep time and recover factory settings via machine setup page.

6.2.3.1. Set up e-mail notification

If you set up e-mail notification, an e-mail will be sent to the mail address specified by you when abnormality such as paper out occurs. You can receive emails only if you made correct email setup. Please consult your network administrator for detailed setup steps. You need to log in the embedded Web server before setting up email notification (please refer to [Chapter 6.1](#) for login method).


I. Set up SMTP client

1. Click “Settings” – “Network settings” – “Protocol Settings” – “SMTP”.
2. On SMTP page, input SMTP server address, set up the mailbox login name and password and then click “Apply”.

II. Add recipient address

1. Click “Settings” – “Machine settings” – “Address Book” .
2. Click “Add”, input recipient address and then click “Apply”.

III. Set up email notification

1. Click “Settings” – “Machine settings” – “E-mail Notification”
2. Click  button and select the email addresses you want to add in the list of contacts popping out.

You can also tick “address X” (such as address 1) and input the email addresses you want to add.

3. Tick the email addresses and notification contents you want to notify and then click “Apply”.

6.2.3.2. Configure the E-mail address book

If you want to scan a file to an e-mail address, you need to configure the e-mail address book first and then scan the file to the assigned e-mail address. The e-mail will not be received before proper setting on the e-mail box; for specific setting steps, please consult your network administrator.

I. Set the E-mail address book

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click “Settings”, “Machine Settings” and then “E-mail Address Book” to enter the setting interface of e-mail address book.
3. Click “Create” to pop out a window as below and edit the contact name and input the e-mail address, and then click “Apply”.



Note: • If some groups have been created, you may click to check a corresponding group to add the newly created e-mail address into it.

The 'New' dialog box has an orange header with the word 'New' and a close button. It contains three input fields: 'Contact Name' (empty), 'Email Address' (empty), and 'Group No.' (containing a dropdown menu with 'qunzu' selected). An 'Apply' button is located at the bottom right.

II. Set the e-mail group


1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click “Settings”, “Machine Settings” and then “E-mail Group” to enter the setting interface of e-mail group.
3. Click “Create” to pop out a window as below and edit the group name and check the e-mail address to be added in the contact name (e-mail address) listbox, and then click “Apply”.

The 'New' dialog box has an orange header with the word 'New' and a close button. It contains a 'Group name' input field (empty) and a 'Contact Name(Email Address)' listbox. The listbox contains one item: 'ceshi(123456@qq.com)' with a checked checkbox. An 'Apply' button is located at the bottom right.

6.2.3.3. Configure the FTP address book

If you want to scan a file to the FTP server, you need to configure the FTP address book first. When scanning, you may send the image scanned to the FTP server. Before configuring the FTP address book, you may need to ask your network administrator for the server IP address, port number, login name, password and server name.

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click “Settings”, “Machine Settings” and then “FTP Address Book” to enter the setting interface of FTP address book.
3. Click “Create” to pop out a window as below and set relevant parameters; after settings completed, and then click “Apply”.

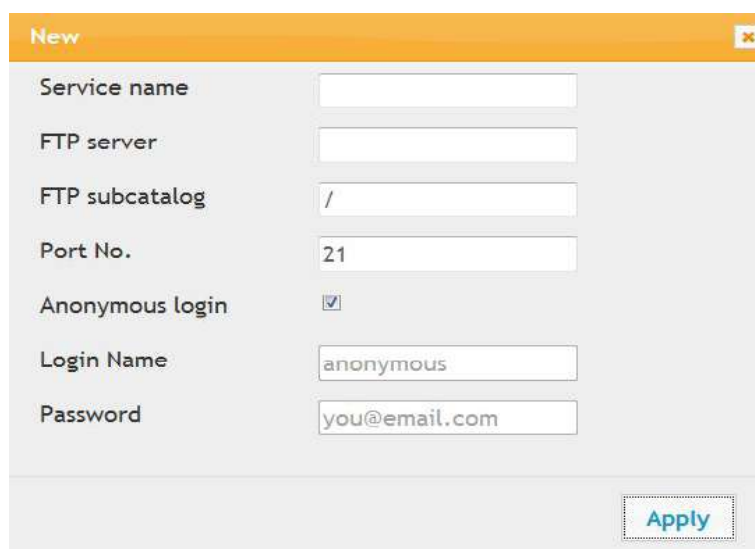

6.2.3.4. Sleep time setup

The default sleep time of printer is 5 min and if you want to change it, you can set up via the embedded Web server (the printer installed via network connection).

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click “Settings” – “Machine settings” – “System”.
3. Select sleep time according to you need and then click “Apply”.

6.2.4. Recover factory settings via Web server

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click “User Management” and input the correct “User name” and “Password”; then, click “Restore to Factory Settings”. After completion, the printer will reboot automatically.





Note:

- After factory settings of printer are recovered, user name of the administrator will be recovered to admin and the login password will be recovered to 000000.
- You can also recover factory settings via keys on the control panel of printer, please refer to [Chapter 12.1.3](#).
- If factory settings of your printer are recovered, the sleep time will be recovered to 5min automatically.

7.Print

7.1.Print Function

You can set the print function through “Start”-”Devices and Printers”- select corresponding printer- right click – set print function in “Printing preferences”. Some functions are as follows:

Functions	Diagram
Automatic Two-Sided Printing	
Collate Print	
Reverse Print	
N-in-1	
Poster Print(for Windows Operation System only)	
Zoom Print	
Custom Size	



Note: • Windows 7 is taken as example in the above description.

- You can realize poster printing feature by selecting 2x2 poster printing in multipage.
- You can enable printing preference and click the help button to view detailed function description. Please refer to [Chapter 7.2.5](#) for the method to open help document.

7.2.Print Settings

7.2.1.Print parameter settings

You can set up printing parameters with the following two methods before sending printing work (such as paper type, paper size and paper source).

Operating system	Temporary printing setup change	Permanent default setup change
Windows 7	1. Click “File” menu – “Print” – “Select printer” - “Printer properties” (the detailed steps may differ because of multiple operating systems).	1. Click “Start” menu- “Control Panel” – “Devices and Printers”. 2. Right click on the printer icon, select “Printing preference” and then change setup and save it.
Mac OS	1. Click “File” menu – “Print”. 2. Change setup in the window popping out.	1. Click “File” menu – “Print”. 2. Change setup in the window popping out and click to save the preset. (Select preset every time before printing, or print according to default setup.)



Note: • Priority of App setup is senior to printer setup.

7.2.2Automatic Two-Sided Printing

The printer supports automatic two-sided printing of plain paper. Paper size supported by the automatic two-sided printing: A4,Letter, Legal, Oficio, Folio,16K.




- Note:** • Trying the automatic two-sided printing may damage the printer if some paper media are not suitable for automatic two-sided printing.
- Auto duplex printing does not support poster printing.
 - Please refer to [Chapter 2](#) for paper loading and type of mediums that can be printed via auto feed tray.

7.2.2.1. Duplex printing unit setup


For the purpose of achieving the best printing result, you can set up the paper size of duplex printing unit. As for duplex printing of A4 and 16K papers, the slide should be adjusted to the A4 position; as for Letter, Legal, Folio and Oficio duplex printing, the slide should be adjusted to the Letter position.

Setup steps of duplex unit are:


1. Draw out duplex unit.

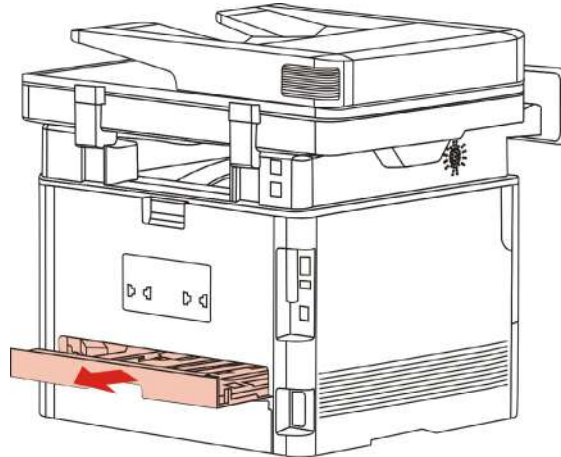


2. Make the backside of duplex unit up.

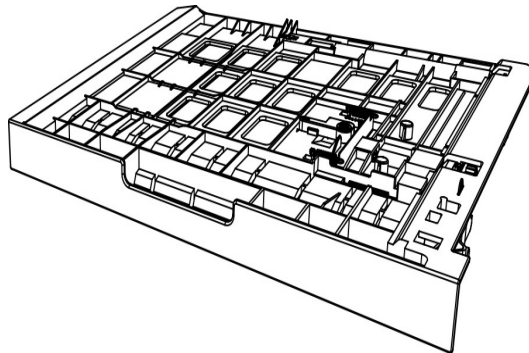

3. Adjust paper size slide to A4 or Letter position to finish setting up.

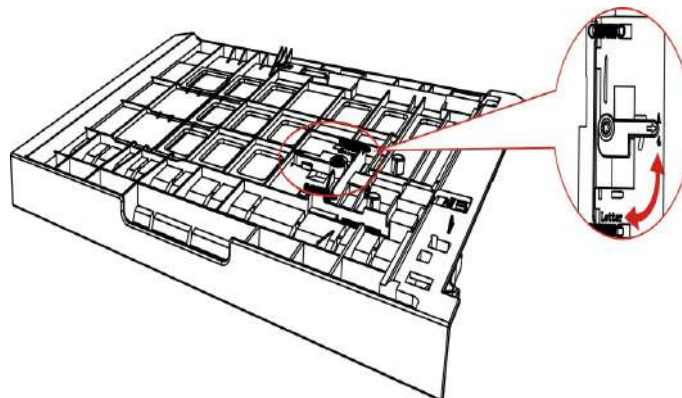


4. Install the duplex unit in the printer.

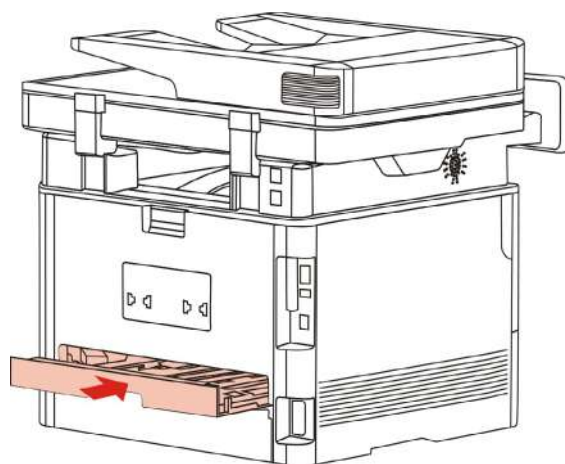


7.2.2.2. How to carry out auto duplex printing

1. Open the print job to be printed from the application (such as a Notepad).
2. Select Print from the File menu.

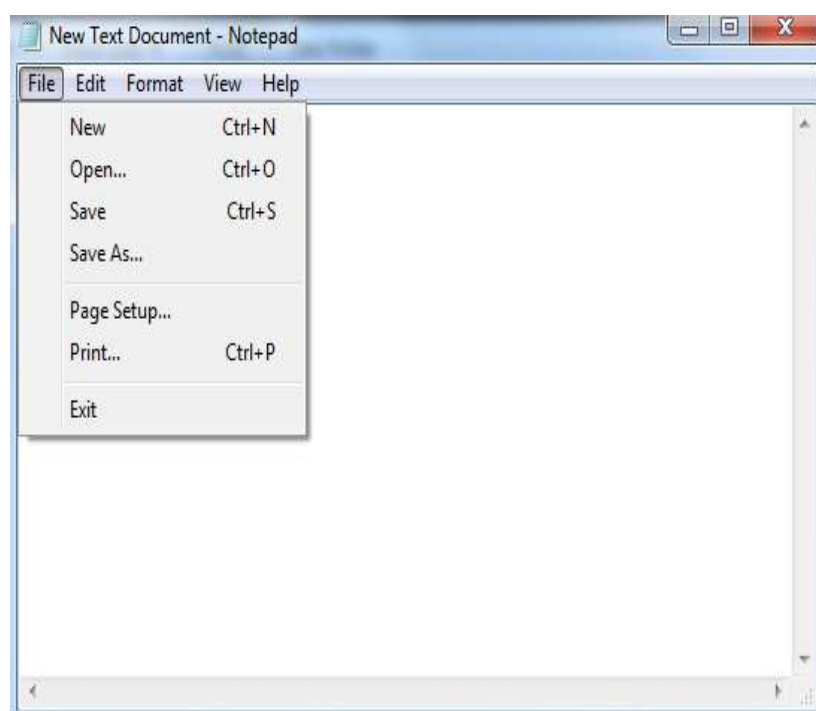


3. Select printer of the corresponding model.

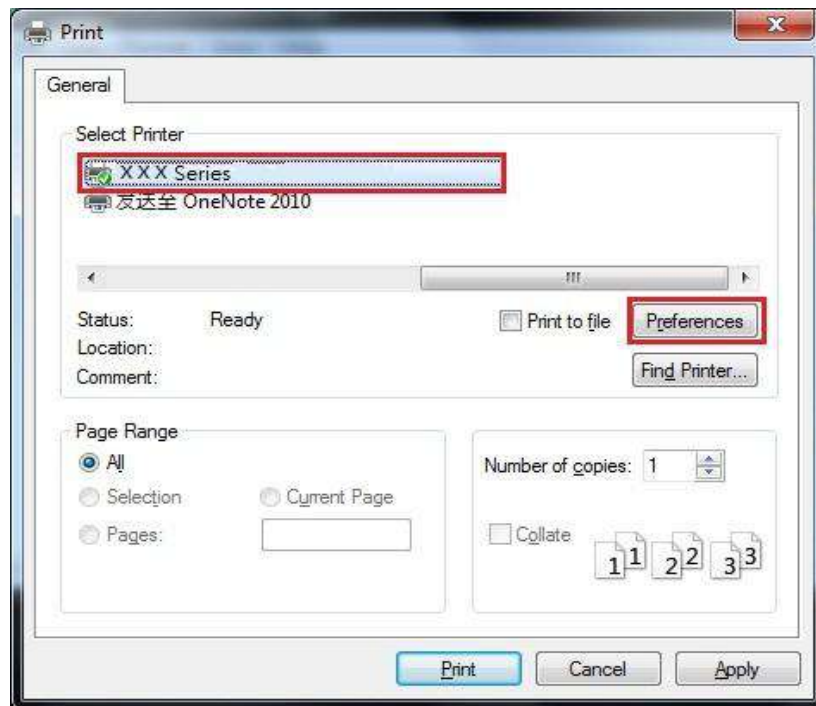


4. Single click “Preferences” for printing setup.

5. Select the “Duplex” in “Basic” tab and then select “Long Edge” or “Short Edge”.

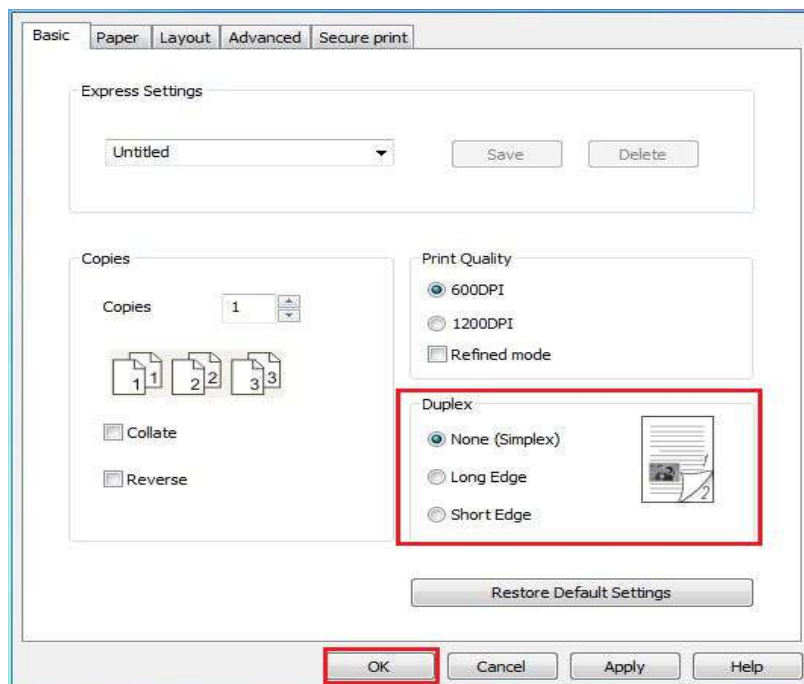


6. Single click “OK” to finish printing setup. Click “Print” to realize auto duplex printing

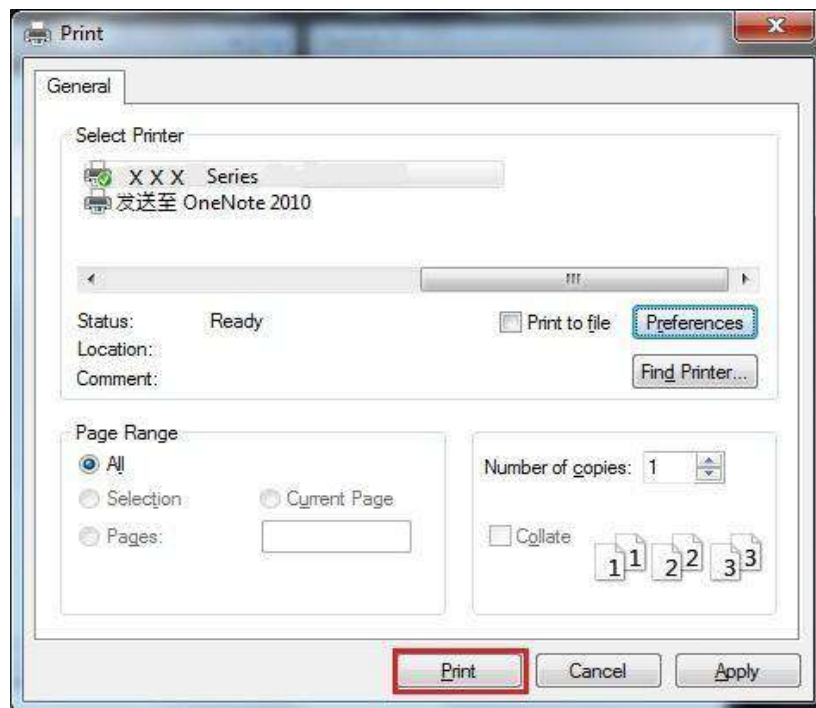

7.2.3. Fine mode printing

The Fine mode is applicable to engineering drawings and fine lines printing

Set up fine mode in the basic page of printer preference . After setup, fine printing mode can be realized.

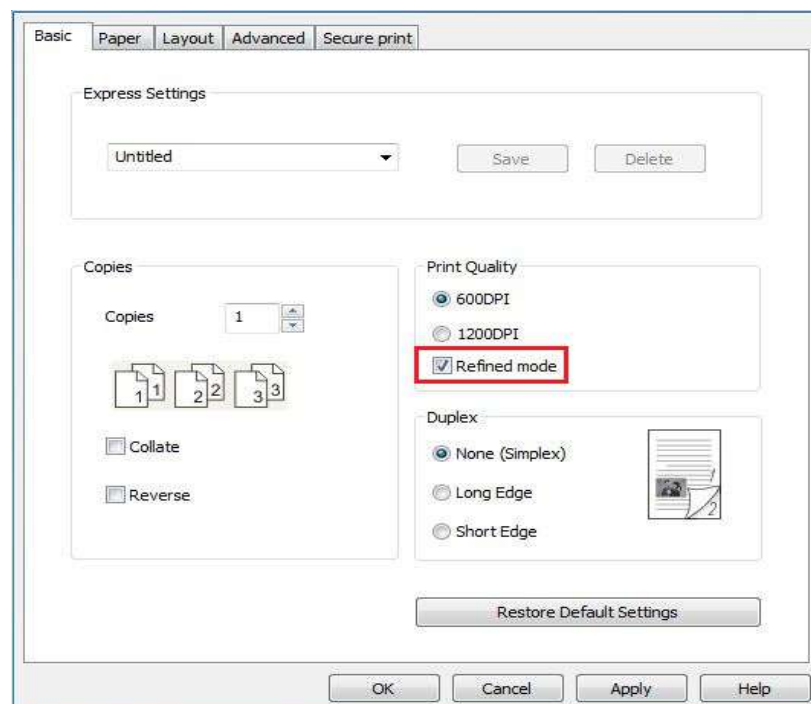


7.2.4.Mute printing

If the Mute Printing is set, the printing noise will be reduced but the printing will slow down to some extent.

The operating steps of mute printing are as follows (applicable to printers that are installed via USB connection)

Windows 7 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.



1. Enter the “Start menu” – “Control Panel” –view “Devices and Printers”.
2. Right click printer and select “Printer properties” in the pull-down menu.
3. Enter the “Secondary Settings” option.
4. Tick “Mute printing” and click “Ok” to finish setup

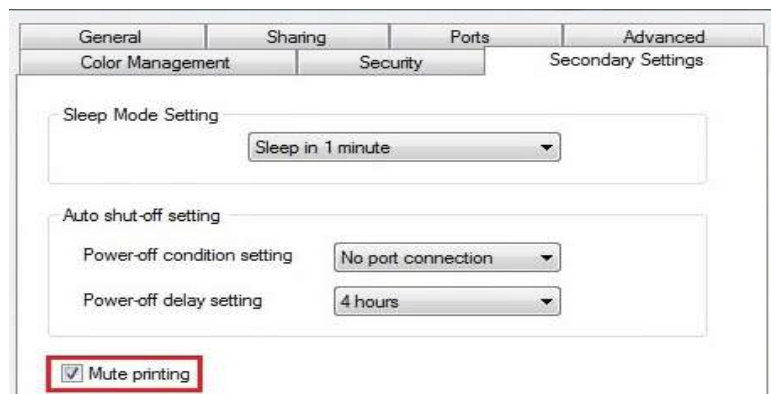

5. Open the printing work from the App, select a printer of the corresponding model and then set up printing according to needs.
6. Click “Print” to realize mute printing.

7.2.5.Open Help Document

You can open the “Printing preferences” and click “Help” button (for Windows Operation System only). The help document contains the user guide where you can find the information on print settings.

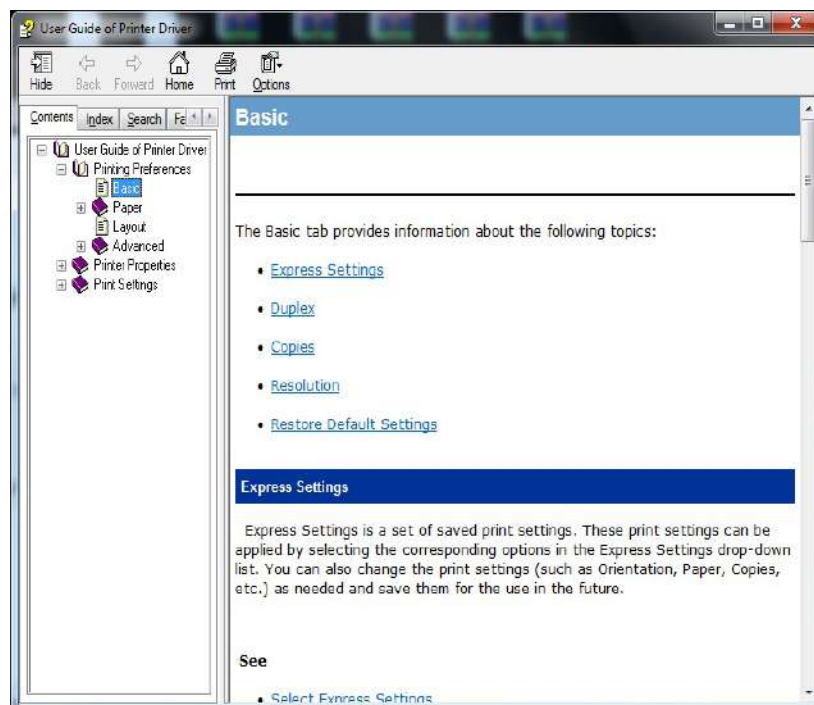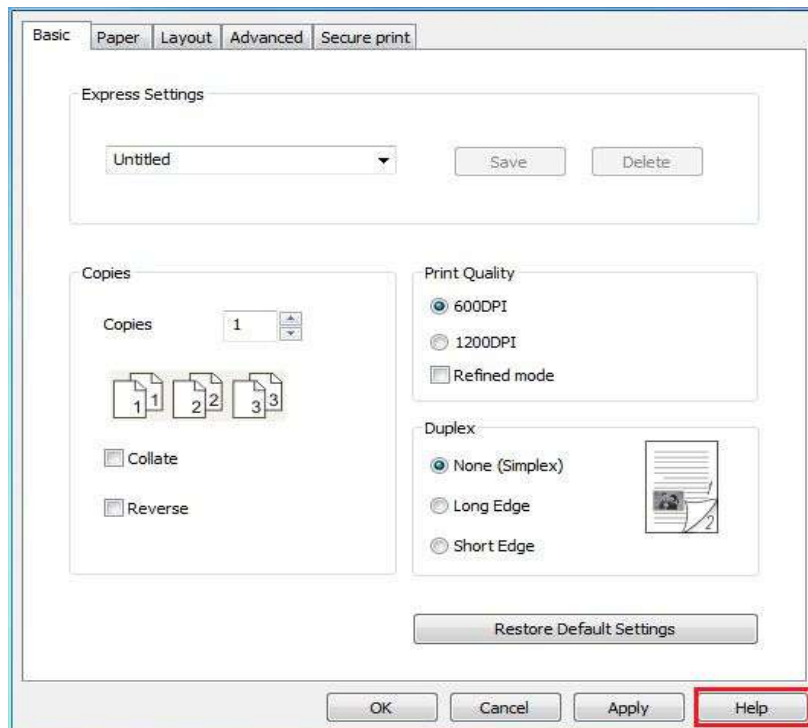


7.3.Printing Mode

The printer can print with auto feed tray and manual feed tray. The defaulted state is auto selection, and if there is printing medium in the manual feed box, papers in manual feed tray will be used with priority.

7.3.1.Printing with the Automatic Feeder Tray

Before printing, please make sure mediums of corresponding quantity have been installed inside the auto feed tray, and there is no printing medium in the manual feed tray.

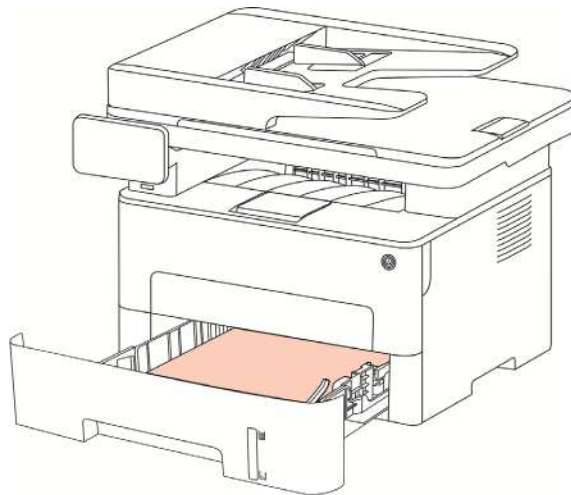


Note: • For precautions on loading paper, see [Chapter 2](#).

• For the type of media to be printed with the automatic feeder tray, see [Chapter 2.1](#).

7.3.2.Printing with manual feed tray

When you put papers in the manual feed tray, the printer will enter manual feed mode.

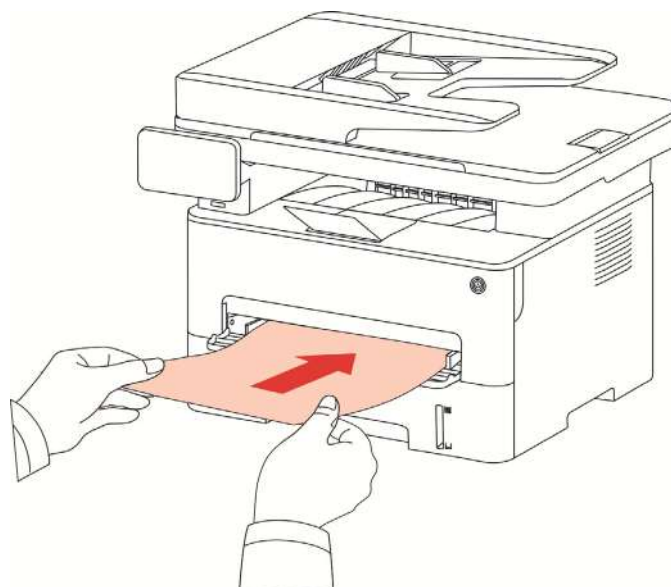




Note: • Manual feed mode means that papers will be fed from the manual feed tray first if there are papers being put inside it.

- Generally, the manual feeder tray is used to print on special paper, such as envelopes, transparencies, etc., and only one piece of paper can be loaded each time.
- Please refer to [Chapter 2](#) for putting papers inside manual feed tray.
- Please refer to [Chapter 2.1](#) for type of mediums that can be printed via manual feed tray.


7.4.USB print

The printer supports direct print from USB and quick document print without the need of computer transmission.


1. Insert the USB stick into the front USB disk interface of the printer.

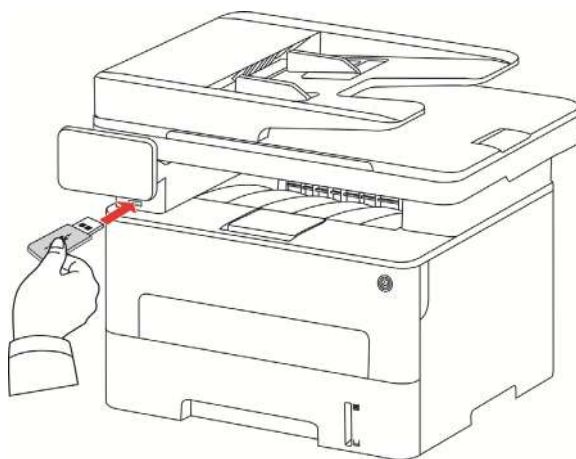

2. Once the USB flash disk is inserted, the USB flash disk drive interface will automatically pop up. Select “USB Flash Disk Print”.

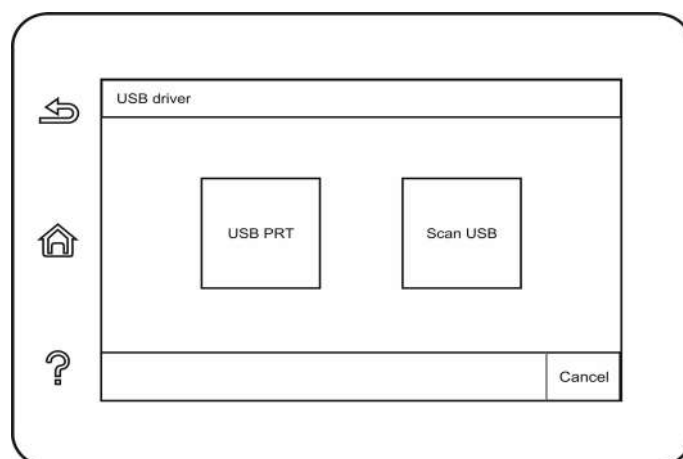

3. Select document to be printed and set print properties as required.

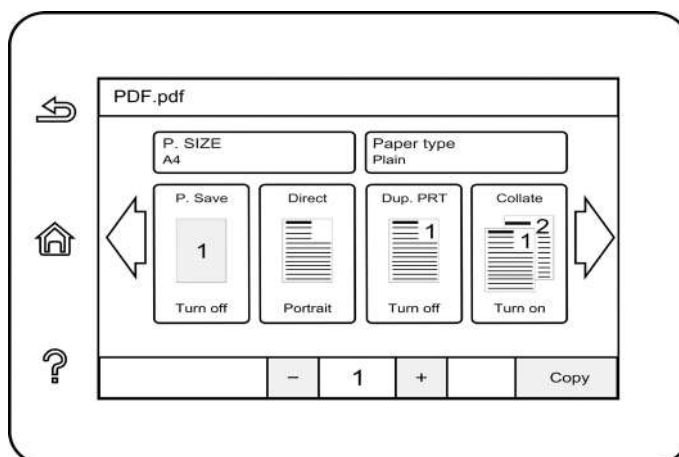

4. Click "Print" after setting.




Note: • Formats of USB memory device supported by the printer's USB port include MS-DOS (FAT), FAT16 and FAT32.

• Document formats supported by USB print include: .pdf, .jpeg.

7.5. Secure printing

You can save print job in the printer's memory through PC setting until you enter password in printer control panel to start such job.

1. Open document, click File-Print.
2. Click Property, Preferences, Option or Setting.
3. Select "secure printing" in "Print preference" and tick "secure printing".
4. Enter a 4-digit number in the "Password" action field, which will be saved as a validation password for secure printing.

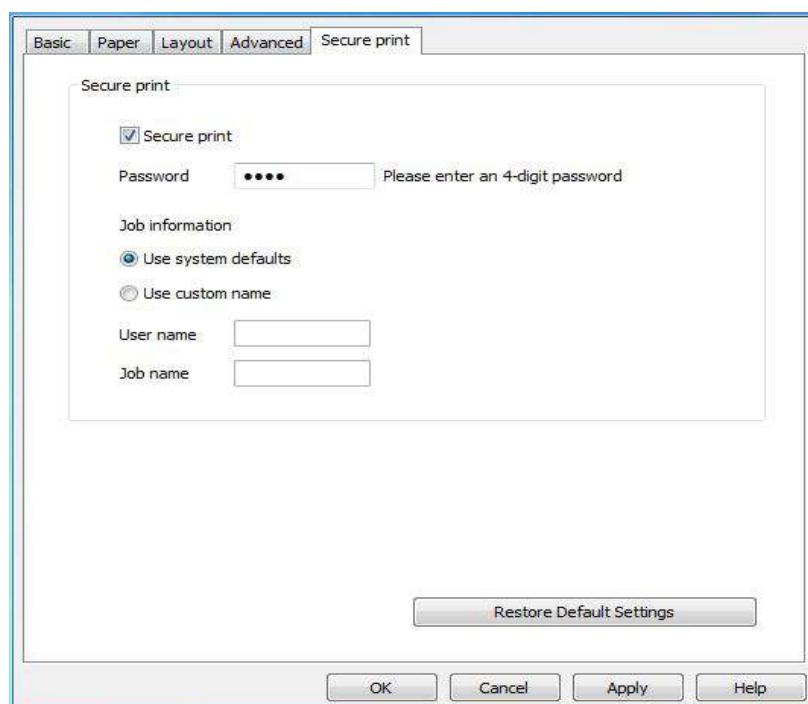

5. Click "OK".
6. Then click "Print" to send a secure printing job.
7. Select "Secure Print" in the control panel of the printer, and select the user according to the secure printing job information you have set.



Note: • The default job information is "Use System Defaults", and the user name of the secure printing job is the computer user account name (click Start-Control Panel-User Account on PC to view the computer user account name).
• The job name is the name of the printed document.

The screenshot shows a control panel titled "PWD PRT". On the left, there are three icons: a left arrow, a house, and a question mark. The main area contains a list of jobs: "Job1", "Job2", and "Job3", each with a right arrow icon. To the right of the list is a vertical double-headed arrow. At the bottom right, there is a "Back" button.

8. Select document to be printed, enter document print password, make a print according to interface prompt.


The screenshot shows the "PWD PRT" interface with a password entry screen. On the left, there are three icons: a left arrow, a house, and a question mark. The main area contains a text input field and a numeric keypad with buttons for digits 1-9, 0, and a backspace key (X). At the bottom, there are "Back" and "OK" buttons.

The screenshot shows the "PWD PRT" interface with a document preview. On the left, there are three icons: a left arrow, a house, and a question mark. The main area contains a document icon with a lock, the text "User name: Job1", and "File name: Word". At the bottom, there are "Delete" and "Print" buttons.



Note: • After printing is done successfully, this secure printing job will be deleted.

- You can extend the storage capacity of secure printing by inserting a USB flash disk into the back USB interface of the printer.

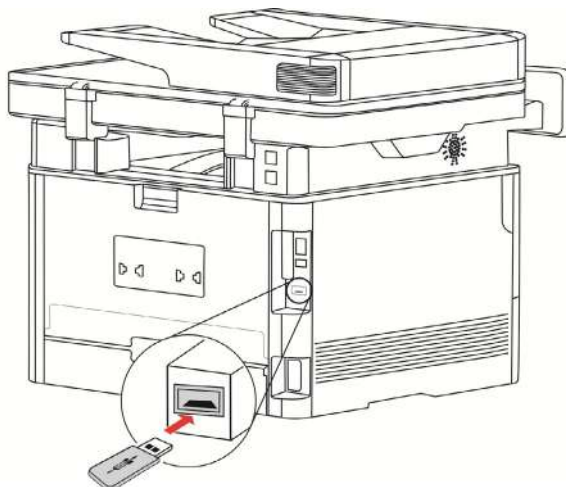

- If wrong passwords are entered 3 times consecutively, the interface of user secure printing job list will appear. You can enter the password again in the password input interface.
 - All secure printing data in the USB flash disk and memory will be cleared if the printer is restarted.
 - Supported USB flash disk formats: MS-DOS(FAT) / FAT16 / FAT32.
-

7.6. Google Cloud Print

This printer is compatible with Google Cloud Print™ (Google Cloud Print is a service provided by Google Inc.).

It is compatible with Google Cloud Print™ (Google Cloud Print is a service provided by Google Inc.). With Google Cloud Print, you can use the application program or service supporting Google Cloud Print for printing in any place. For information on how to use Google Cloud Print, please download the operation manual on the website <http://www.pantum.com>.

7.7. Cancel printing

If you want to cancel the operation during printing, please press “Cancel” key on the printer’s control panel.

8. Copying

8.1. Copying function

Copy		Instructions
Common copying	Multipage	Print a multi-page document to a piece of paper.
	Clone	Print several identical images to a piece of paper.
	Poster	Print a one-page original to pieces of paper.
	Collated copy	Collate copies of an original.
	Duplex copying	Duplex copying of the original can be achieved.
	Image quality	Set the definition mode to improve the copying effect.
	Intensity	Adjust deep-light copying effect by setting intensity.
	Resizing	Reduce or enlarge the size of image copied.
	Paper Size	Set the paper size.
	Paper type	Set paper type.
ID copy	Arrangement mode	Set the ID copy layout.
	Intensity	Adjust deep-light copying effect by setting intensity.
	Paper Size	Set the paper size.
Receipt copying	Intensity	Adjust deep-light copying effect by setting intensity.
	Paper Size	Set the paper size.

8.2. Copying method

1. Click “Copy” button/“ID copy” button/“Bill copy” button in control panel.
2. Put an original into the ADF with its front upward (only for plain copying) or on the glass platen with its front downward. (For how to put an original, please see [Chapter 2.5.](#))
3. Click “Copy” button to copy.
4. Place the original text in the glass platen, scan this page, then give a prompt of “Scan next page”. When there is another page to scan, take away the previous one, put the next one in the glass platen, click “Scan next page”. After scanning all the pages, click “End scan”.

8.3. Copying cancel

To cancel copy job, click “Cancel job” button.

8.4. Common copying setting

Change related setting through setting menu for better copy result.

1. Select “Copy” button in printer control panel;
2. Determine copy setting, click “Copy” button to copy.



Note: • The image quality, intensity, resizing and paper setting can keep valid after options are set.

- Settings on all-in-one, clone, poster, collated copy and duplex copy will be restored to defaults after completing the copying, switching among panel keys or rebooting the machine.

8.4.1. Image quality

Select corresponding image quality mode for original document used in order to improve copying effect.

There are 4 modes in total:

Auto: default mode, applicable to text and image originals.

Text + image: applicable to originals with mixed text and image.

Image: applicable to original image.

Text: applicable to original text.



Note: • The image quality mode supports “**automatic**” mode only after “**poster**” and “**collated copy**” are set.

8.4.2. Intensity

Adjust deep-light copying effect by setting intensity.


8.4.3. Resizing

When original document is copied, resize image copied.

The resizing includes “fixed” and “manual adjustment” and the default value is 100%

1. Fixed resizing: 100%, 141% A5->A4, 122% A5->B5, 115% B5->A4, 97% LTR->A4, 94% A4->LTR, 86% A4->B5, 81% B5->A5, 70% A4->A5.

e.g.: 70% A4->A5:

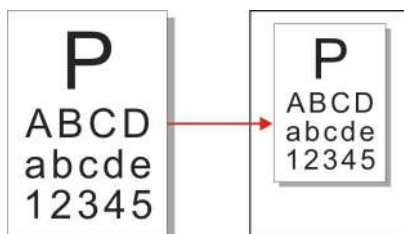


2. “Manual adjustment” applies to copying with glass platform only, the adjustment scope of which is 25%-400% and 5% can be adjusted each time after “direction key” is pressed once.

8.4.4. Multipage

With setting on all-in-one feature, a 2- or 4-page document could be copied to one piece of paper. Copying with the ADF and the glass platen are both supported.

The multipage includes 3 modes:

(1) Two-in-one:

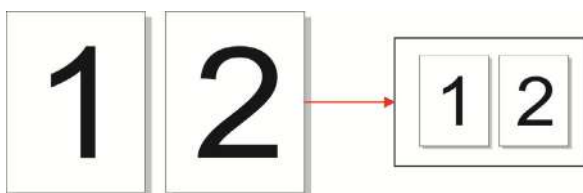

(2) Horizontal four-in-one:



(3)vertical four-in-one:




Note: • "Multipage" and "resizing function" cannot be set at the same time.

8.4.5.Clone

Through setting on clone feature, you may print multiple original images on one piece of paper. Copying with the ADF and the glass platen are both supported.

The clone copying includes 3 modes:

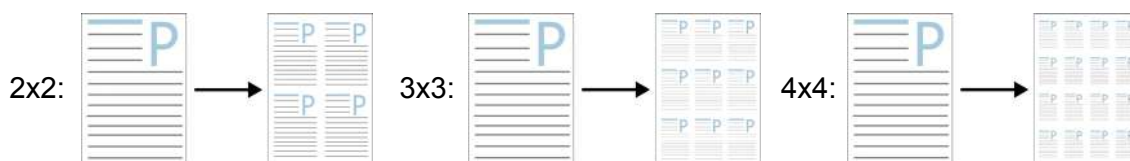


Note: • The "clone" and "resizing function" cannot be set at the same time.

8.4.6.Poster

Poster setting enables the printing of one piece of original document on several pieces of paper. The "Poster" feature supports only copying with the glass platen.

The poster copying includes 3 modes:

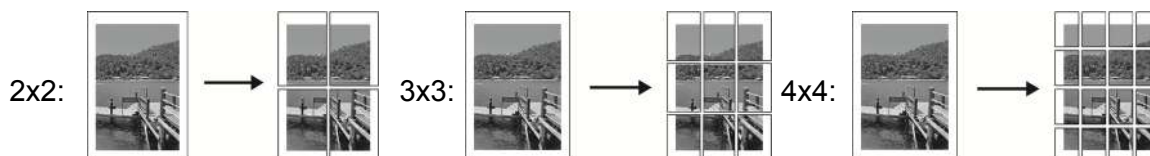


Note: • The "poster" and "resizing function" cannot be set at the same time.

8.4.7.Collated copy

The "Collated Copies" feature supports only copying with the automatic document feeder (ADF).

The collated copy includes 2 modes:

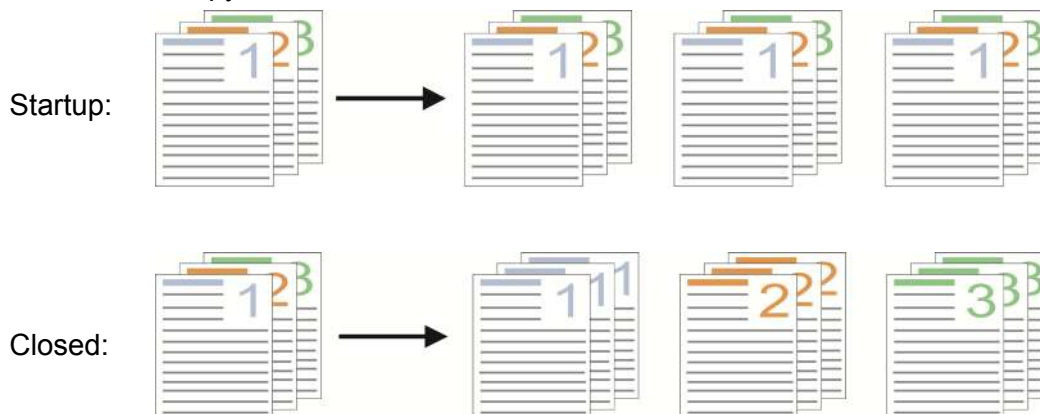


8.4.8. Duplex copy

You can use flat plate and ADF for Auto Duplex copy, ADF supports auto duplex copy.

There are 4 modes in total for duplex copying:


1. One-sided → One-sided:

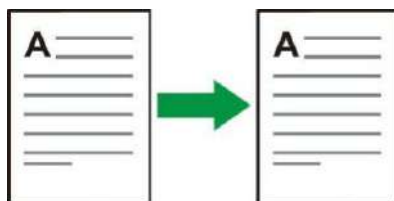


2. One-sided → Two-sided:



3. Two-sided → One-sided:

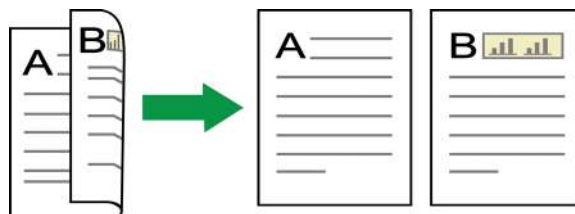

4. Two-sided → Two-sided:

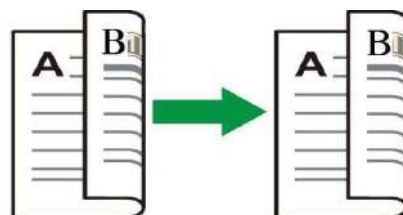

8.4.9. Paper setting

Select the paper size and paper type of original copying in Paper Settings menu.

Paper dimension: A4, Letter, B5, A5, A6, Executive, Legal and Folio.

Paper type: common paper, thick paper, envelope paper, film paper, card paper, tagboard and thin paper.



Note: • After “multipage” and “clone function” are set, “paper dimension” supports “A4” and “Letter” only.

• For copying with the ADF, only plain paper is available in "Paper Type".


8.5. ID copy setting

Change related setting through setting menu for better copy result.


1. Select “ID Copy” button in printer control panel.
2. Determine copy setting, click “Copy” button to copy.

8.5.1.Arrangement mode


ID copy supports four layouts:

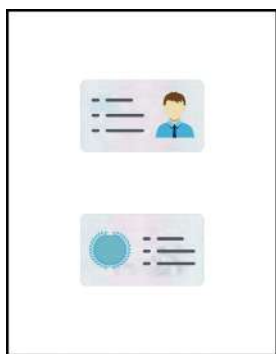


Whole page up-down

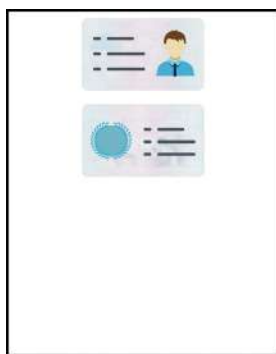

Half page up-down

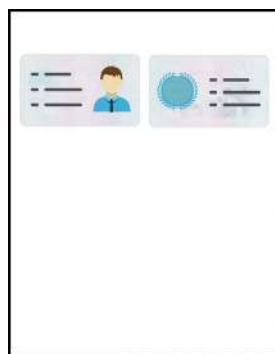

Half page left-right


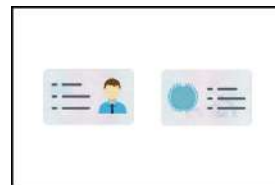


A5 left and right

Position:

Half page up-down: default mode; put ID card at “orange left half area” of glass platform.

Half-page up and down, half-page left and right or A5 left and right: put the ID card in the “blue area” in glass platen.

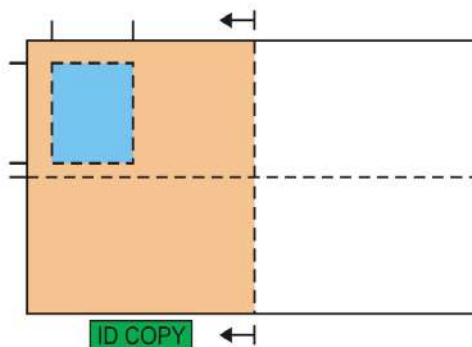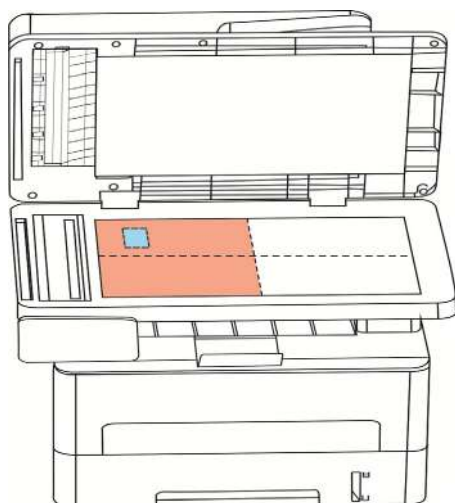

Note: • After setting, the arrangement mode can keep valid before startup; after startup, the arrangement mode will recover to default setting.

8.5.2.Intensity

Adjust copy luminosity through “Luminosity” setting.

8.5.3.Paper dimension

If arranged in modes of “Full Page Up and down”, “Half-page Up and down” and “Half-page Left and right”, the paper size supports “A4” and “Letter” only; if arranged in mode of “A5 Long Edge”, the paper size supports “A5” only. Please follow instructions on panel to put the paper vertically for printing.

8.6. Receipt setting

Change related setting through setting menu for better copy result.

1. Select “Bill copy” button in printer control panel;
2. Determine copy setting, click “Copy” button to copy.

8.6.1.Intensity

Adjust copy luminosity through “Luminosity” setting.

8.6.2.Paper setting

The receipt copying supports A4, Letter, B5, A5, A6 and Executive paper dimension.

9. Scan

Before scanning, please be sure a printer driver has been installed in the computer.

9.1. Scanning mode

9.1.1. Windows system scan

You may scan with the scanning application in PC via USB, wired or wireless connection. Please be sure the printer has been properly connected before scanning.


9.1.1.1. Pantum Scan Application

Operation Steps:

1. Double click on “Pantum Scan Application” on the computer, the icon is shown as below:



2. The prompt window is shown as below:

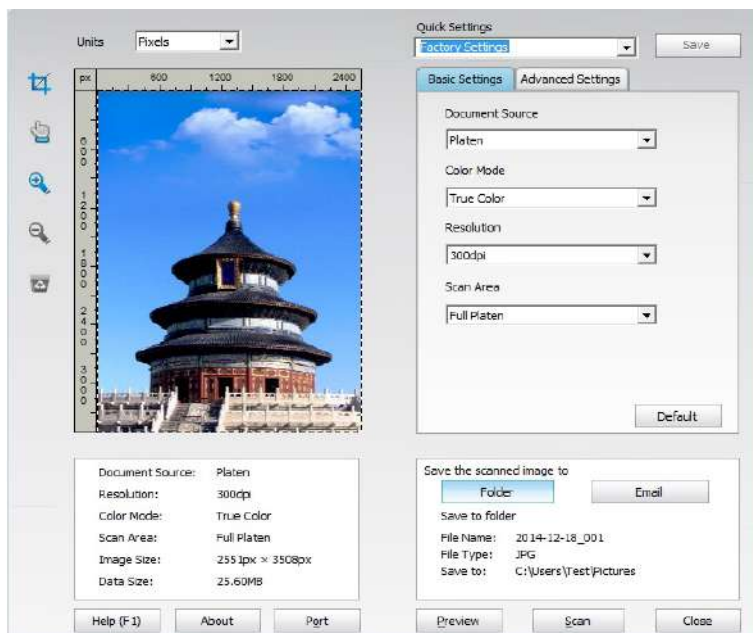

3. Set Scan in the right list. Click “Scan” on the bottom right corner and start scan.



Note: • Pantum scan application software can scan pictures and support 5 formats of files: BMP, JPG, TIF, PDF, and PNG.

- You may click "Help (F1)" to open the help document of the scanning application to learn more scanning setting information.


This product complies with the TWAIN and Windows Image Application (WIA) standard. If using the application which supports TWAIN and WIA standard, users can use the scan function and directly scan the images to the open application. The handbook requires Office Software (Word and Excel) and Photoshop ,for example, to show the operation.

9.1.1.2. TWAIN Scan Driver


9.1.1.2.1. Office Software (Word and Excel)

Operation Steps:


1. Open the Office software (Word or Excel).
2. Keyboard shortcuts: Alt+I+P+S to open the application's window.

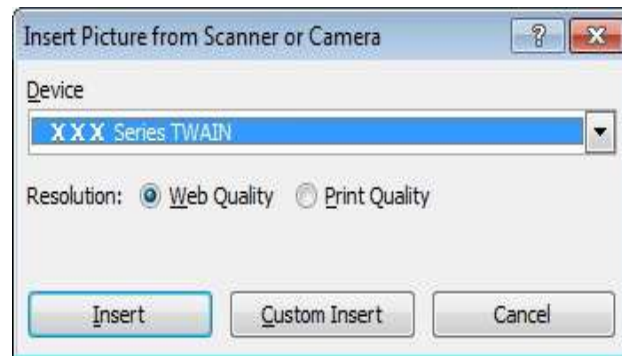


3. Click on "Device" option and select TWAIN Scan, click the "Custom Insert" button below.

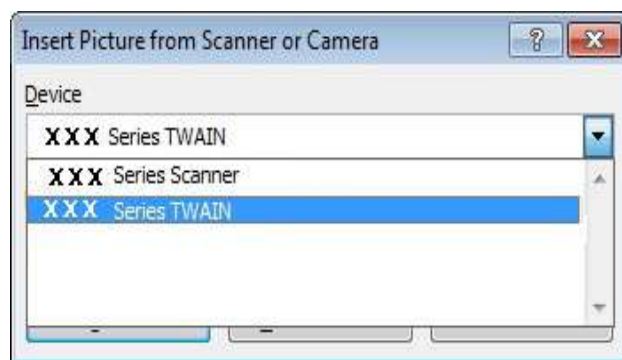

4. After the window pops up, set the scan information in the right list of "Basic Setting" and "Advanced Setting". Click on "Scan" and start scan.

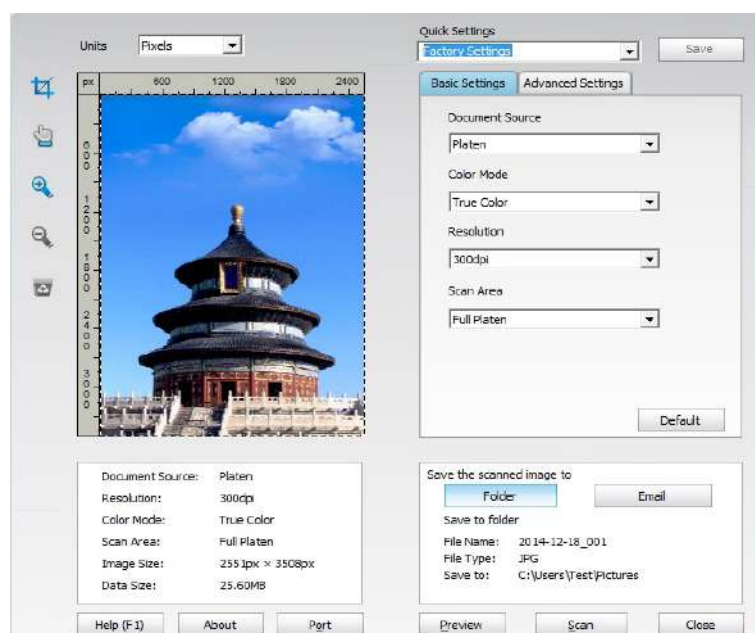


If you desire to change a scanning port, please click “Port” at the lower part of above picture to select a scanning port, as shown below:

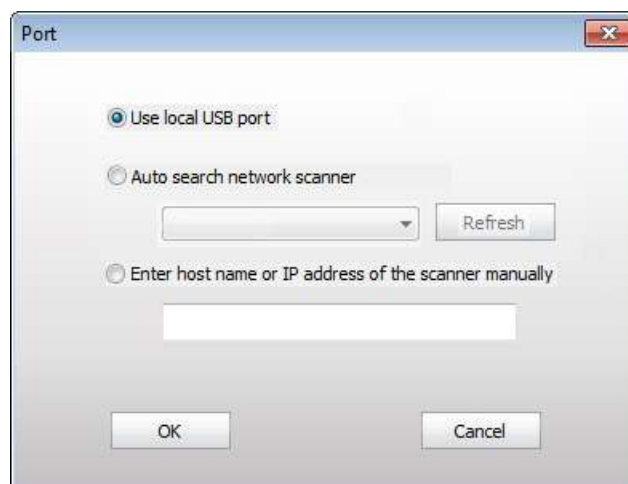

9.1.1.2.2. Photoshop

Operation Steps:

1. Launch Photoshop, click on “File” – “Import” on the top left corner and select TWAIN Scan, as is shown below:

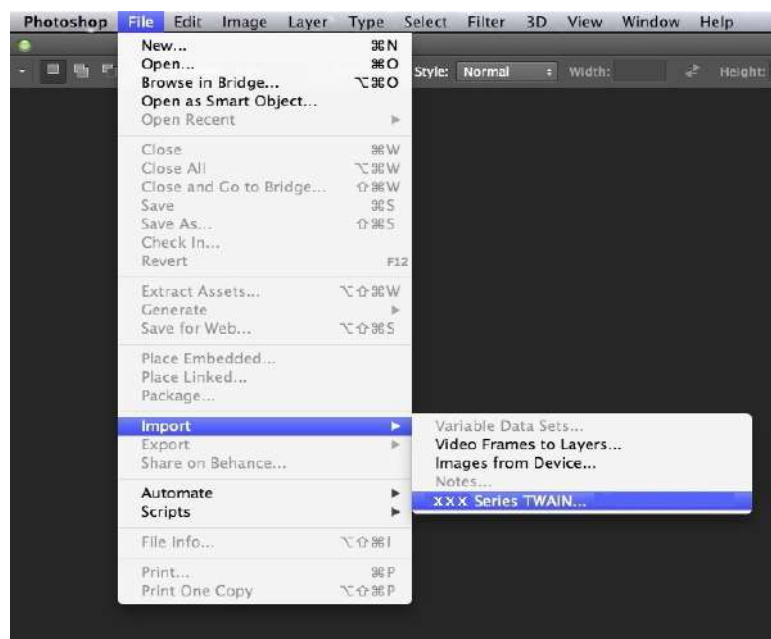

2. After the window pops up, please refer to Step 4 of [9.1.1.2.1](#) to see the specific operation steps.


9.1.1.3. WIA Scan Driver

9.1.1.3.1. WIA1.0 Scan (Windows XP / Windows Server 2003)


1. Office Software (Word and Excel)

Operation Steps:


- 1) Open the Office software (Word or Excel).
- 2) Keyboard shortcuts: Alt+I+P+S to open the application's window.

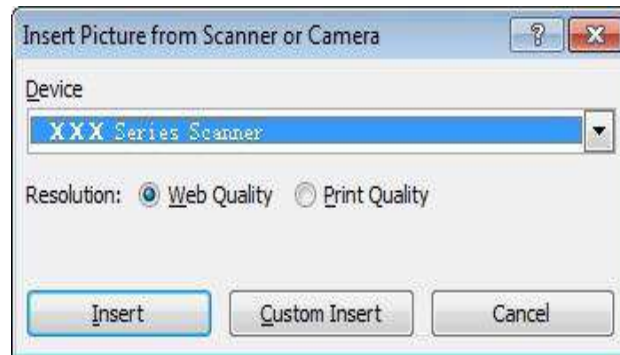


3) Click on "Device" and select WIA Scan, click the "Custom Insert" below.

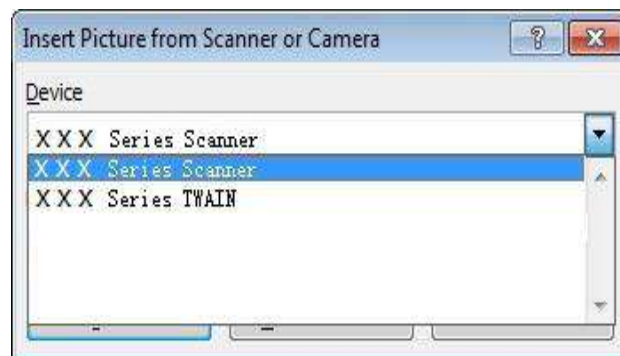

4) The prompt window as is shown below, set the scan information.

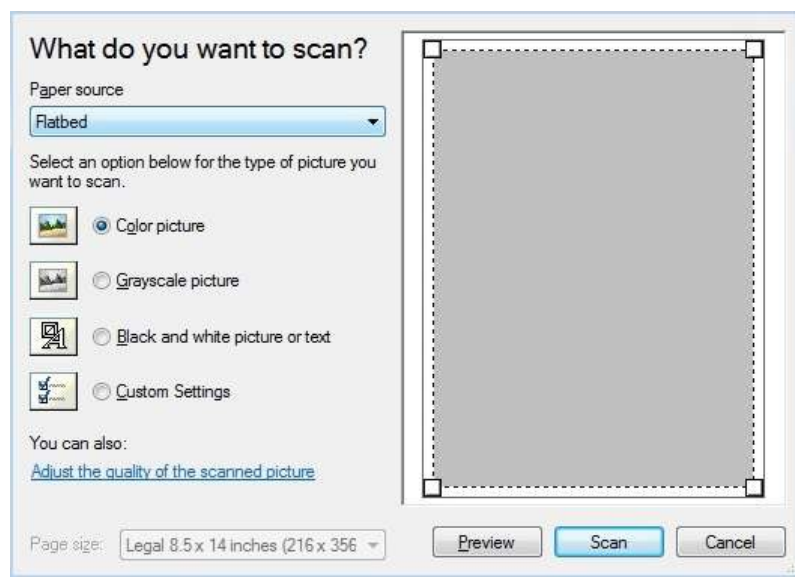


5) Click on “Adjust the Scanned Image Quality” on the bottom left corner of the above picture, the advanced properties interface will pop up, then users can set the scan; After finishing the settings, click on the “OK” button, then “Scan” button to start scan.

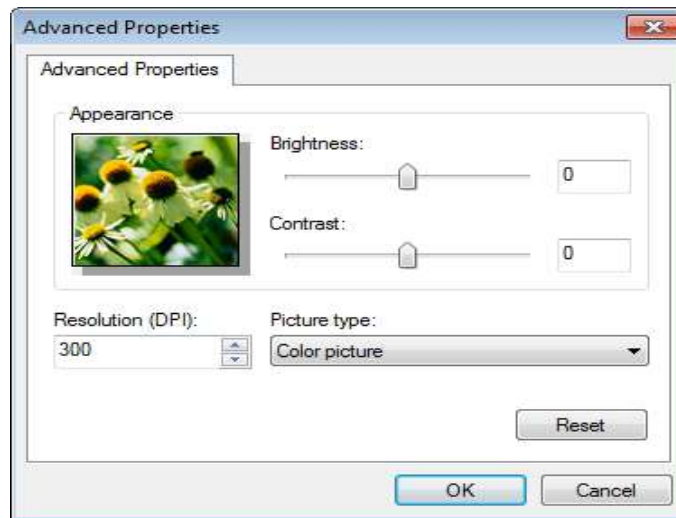

2. Photoshop

Operation Steps:

1) Launch Photoshop, click “File”- “Import” on the top left corner and select WIA Scan, as is shown below:

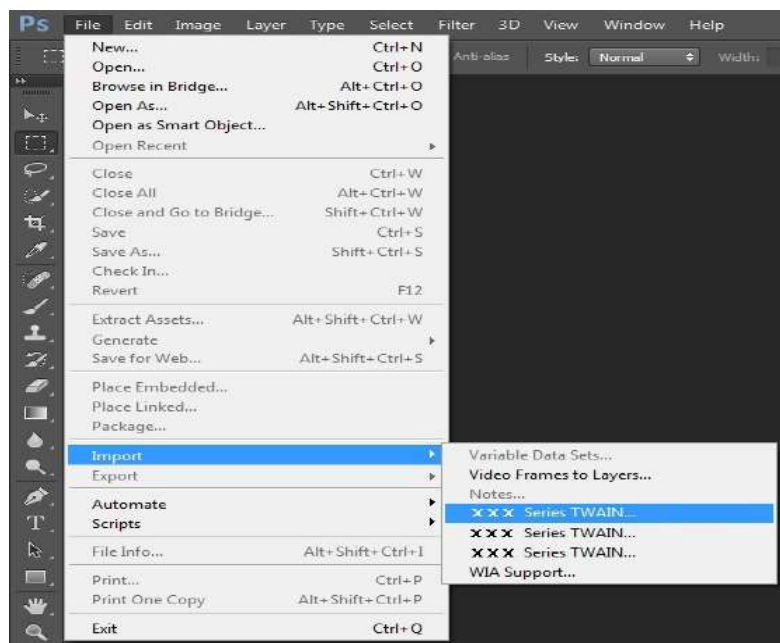


2) After the window pops up, please refer to Step 4 and Step 5 of [9.1.1.3.1](#) to see the specific operation steps.


9.1.1.3.2. WIA 2.0 Scan (Windows Vista / Windows Server 2008 and later versions)

Operation Steps:


1. Click on “Start”- “All Programs”- “Device and Printer” on the left bottom of the desktop.

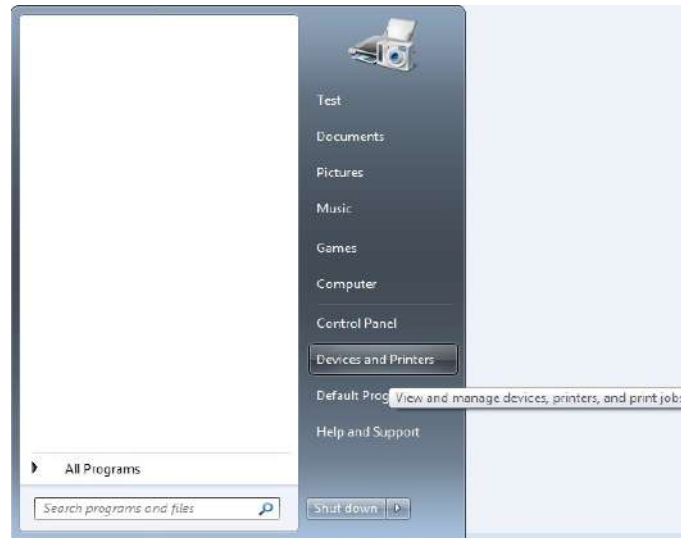


2. When the pop-up window appears, select the printer you want to use, and right click the mouse.

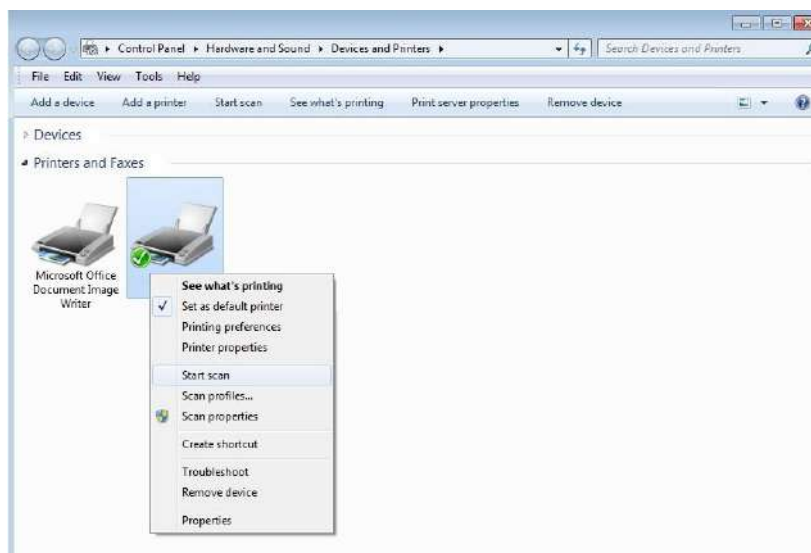

3. Click on “Start Scan” in the above option bar.

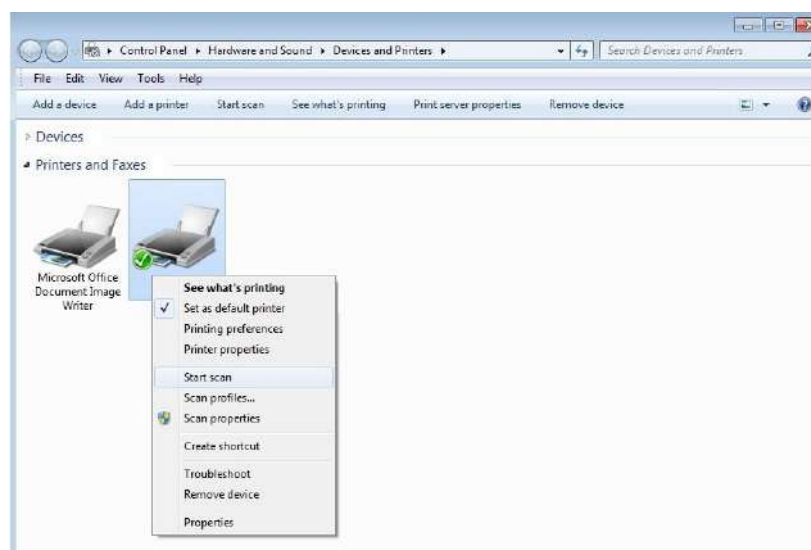

4. After the window pops up, set the scan and click “Scan” on the bottom right corner and start scan.

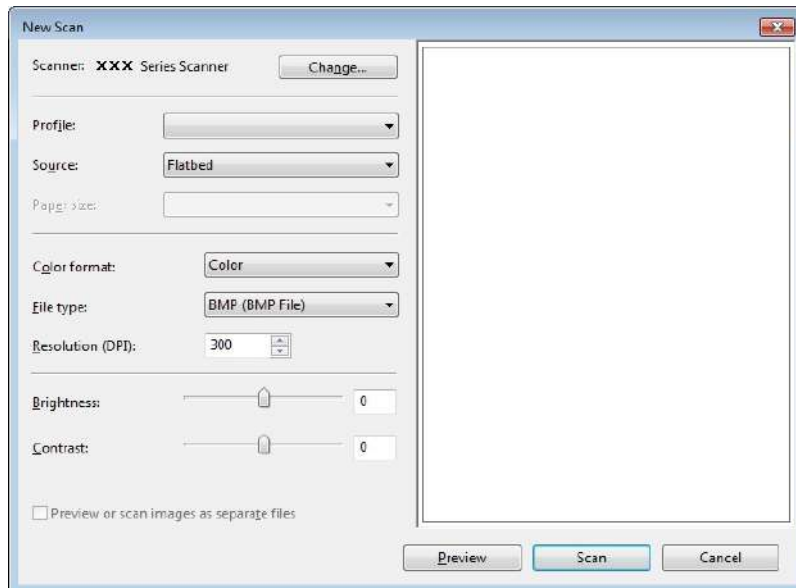

9.1.2. Mac System Scan

9.1.2.1. ICA Scan

9.1.2.1.1. Open ICA via “Print and Scan”

Operation Steps:


1. After installing the printer driver, click “System Preferences” icon on the bottom left corner of the computer desktop.




2. After the window pops up, click on “Print and Scan”.



3. After the window pops up, click on “Scan”.

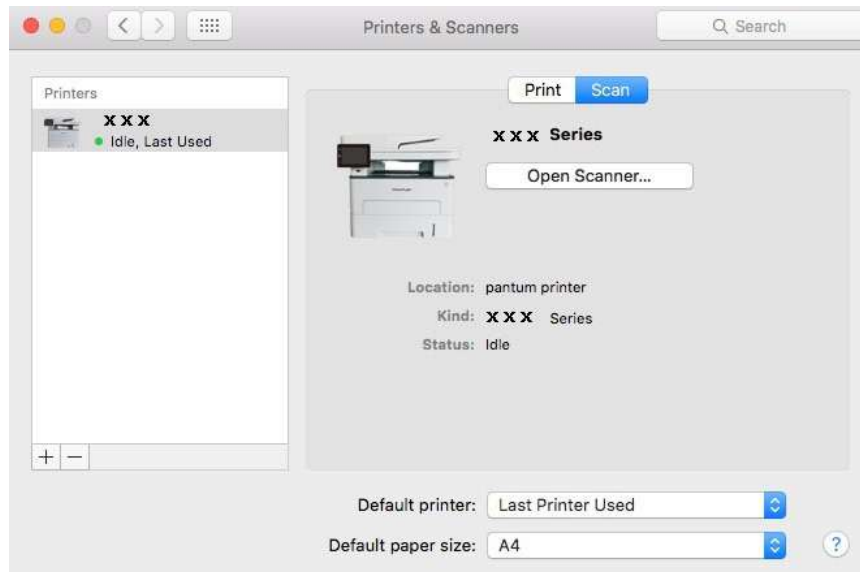

4. Click on “Open Scanner” and the scan window will pop up.

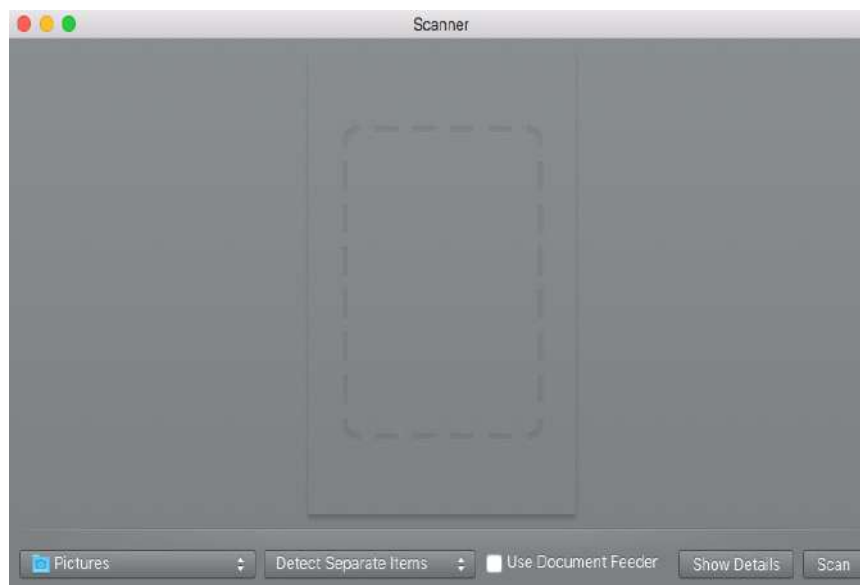

5. Click on “Show Details” on the bottom right corner to set the scan parameters.



6. Click on “Scan” on the bottom right corner and start scan.

9.1.2.1.2. Call CIA through applications

Operation Steps:

1. Click on “Finder” icon on the bottom left corner of the computer desktop, or use keyboard shortcuts command+shift+C to open the window. Find “Image Capture” in “Applications” (or conduct keyboard shortcuts command+shift+A to directly switch to “Applications”) and click to launch the application.



2. After selecting the printer in the left list, set the scan parameters in the right list. Click on “Scan” on the bottom right corner and start scan.




9.1.2.2. TWAIN Scan

Take Photoshop as an example.

Operation Steps:

1. Launch Photoshop, click on “File” – “Import” on the top left corner and select TWAIN Scan, as is shown below:

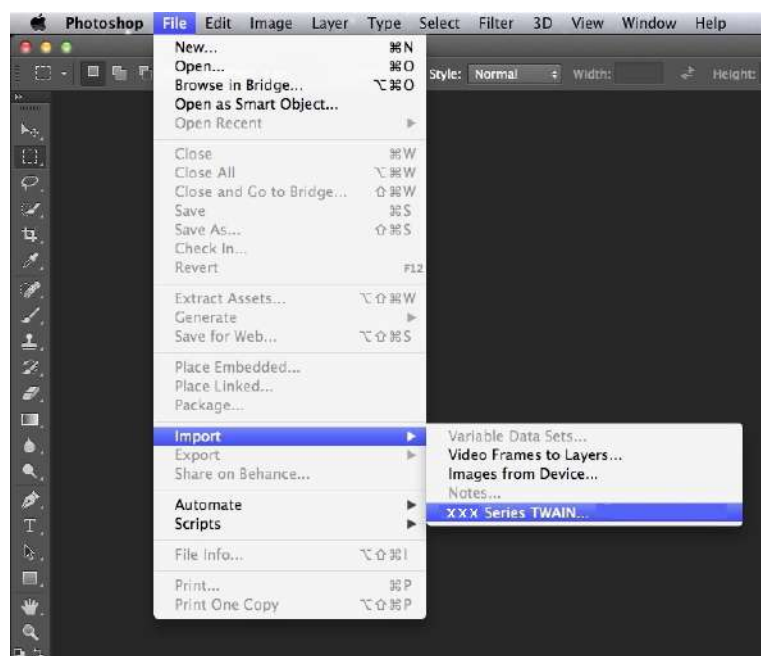

2. After the window pops up, please refer to Step 4 of [9.1.1.2.1](#) to see the specific operation steps.

9.1.3. Push Scan

This section is mainly to introduce how to scan file to PC, E-mail, FTP and USB with the printer's control panel.



Note: • Stored document types supported by “Scan to PC/Email/FTP” include PDF, TIFF and JPEG; those supported by “Scan to USB” include PDF and JPEG.

9.1.3.1. Scan to PC

You may operate the printer's control panel to scan a file to PC. (Only support connection method of USB connection line.)

1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
3. Click “Scan-Scan to PC” in printer control panel.
4. Select proper scan setting, click “Scan” button to make a scan.

9.1.3.2. Scan to E-mail

You may scan a black-white or color file as an appendix to the e-mail application, with specific operation steps as follow:

1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. Please see [Chapter 6.2.3.1](#) to configur the SMTP Client.
3. Please see [Chapter 6.2.3.2](#) to configur the e-mail address book.
4. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
5. Click “Scan-Scan to Email” in printer control panel.
6. Select proper scan setting, click “Scan” button to make a scan.

Please follow these instructions on the settings for group emails:

Set the group name for group e-mail sending by webpage, and set the members, i.e.the receivers, in the group of group email. After finishing scanning, firmware will send the scanned documents to the mail server. Then mail server sends the documents to every member of the group.

9.1.3.3. Scan to FTP


Be sure the user is in an Internet-connected environment in scanning files to FTP server. If you want to scan large files you may need to input the server address, user name and password to log in the server, with specifi operation steps as below:

1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. Please see [Chapter 6.2.3.3](#) to configur the FTP address book (for machine with the fax feature, alternatively, see [Chapter 12.7](#)).
3. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
4. Click “Scan-Scan to FTP” in printer control panel.
5. Select proper scan setting, click “Scan” button to make a scan.

9.1.3.4. Scan USB drive

This printer supports scanning files to USB without a computer. Before operation, please make sure the USB has enough storage space. The specific operation steps are as follows:

1. Insert the USB into the printer's front USB interface.

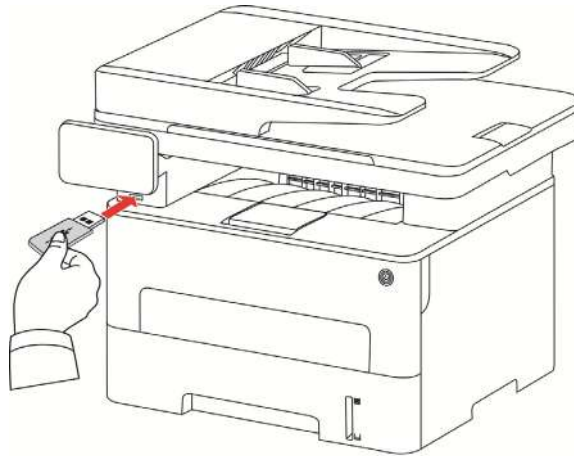

2. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
3. Click "Scan-Scan USB" in printer control panel.
4. Select proper scan setting, click "Scan" button to make a scan.

The printer will create a folder named PantumScan in which all scanned files are saved in PDF or JPG.




Note: • USB formats supported: FAT and FAT32 for Windows system and MS-DOS (FAT) for Mac system.

9.2. Scanning function

This machine supports ADF automatic duplex scanning. Take Pantum scanning application software as an example:

1. Place the original in ADF (see [Section 2.5.2](#) for specific operation).
2. Recall “Pantum Scanning Application” (see [Section 9.1](#) for specific operation).
3. The Scan Setting window will pop up, Select “Document Feeder (Auto Duplex)” under “Document Source” on the right side.

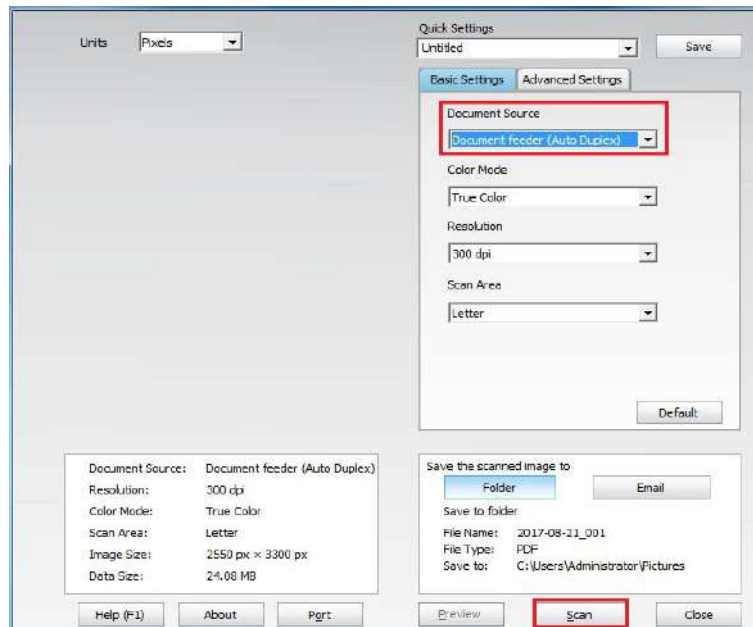

4. After setting the scanning parameters, click “Scan” in the lower right corner to start scanning.





Note: • This machine also supports ADF automatic duplex scanning. You can “Enable” or “Disable” this function on the Scan Setting interface of the control panel.

9.3. Cancel Scan Job

To cancel a job during document scanning, click “Cancel job” in printer control panel.

10. Fax

10.1. Connect Devices

- “” port is used to connect fax with telephone line.
- “” port is used to connect external telephone



Note: • It is recommended to use the traditional analog phone service (PSTN: Public Switched Telephone Network) in connecting telephone line. If a digital environment (for examples, DSL, PBX, ISDN or VoIP) used, please be sure to use a proper filter and configure digital settings correctly. For more information, please contact your digital service provider.

10.2. Fax Settings

Fax setting interface includes the following functional setting:

No.	Options	Description
1	Resolution	You may select the faxing definition from options of “Standard, Fine, Super Fine and Image”. It defaults to “Standard”.
2	Original Size	You can select the desired size of the document to be Faxed. The available options are A4, Letter and Legal.
3	Luminosity	You can adjust the luminosity of Fax documents manually or automatically.
4	Fax Name	Input the fax name and save it.
5	Fax Number	Input the fax number and save it.
6	Group Sending	With the feature of multi-address sending, it supports inputting several numbers to be faxed one by one, with the ability of up to 20 fax numbers sent to at the same time.
7	Delay Sending	With the feature of delay in sending, you may set the fax number and delay time of sending (within 24 hours), making the fax sent upon the time set. 30 fax jobs at most supported now.
8	Forward the Received	After enabling "Forward to Fax", please set the number to be forwarded; upon receiving the fax, it will forward to the number set immediately; if enabling "Forward and Print" at the same time, the printer will automatically print a copy of fax job for saving after receiving the fax.
9	Send Settings	You can use the options in Send Settings to set the parameters for sending Fax.
10	Receive Settings	You can use the options in Receive Settings to set the parameters for receiving Fax.


11	Compatibility	If Fax is sent or received abnormally due to disturbance on telephone line, try to switch to VOIP compatibility mode.
12	Country / Region	To adapt to different telephone lines in different countries, settings on different countries or regions are needed.
13	Fax Report	You can use the options in Fax Report to print the Fax report as you need.
14	Active Job	Query for the list of all Faxes for Delay sending and you can press the Cancel button to delete a Delay sending job.
15	Communication record	Inquire the latest 30 times of Fax sending/ receiving.
16	Contacts	You can edit the contacts, group numbers, and print the contacts as well as the list of group numbers from Contacts.

10.3. Fax Functions

10.3.1. Send Fax

10.3.1.1 Auto fax sending

1. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
2. Click “Fax” button in control panel to enter fax functional interface, enter fax number through numeric keys.

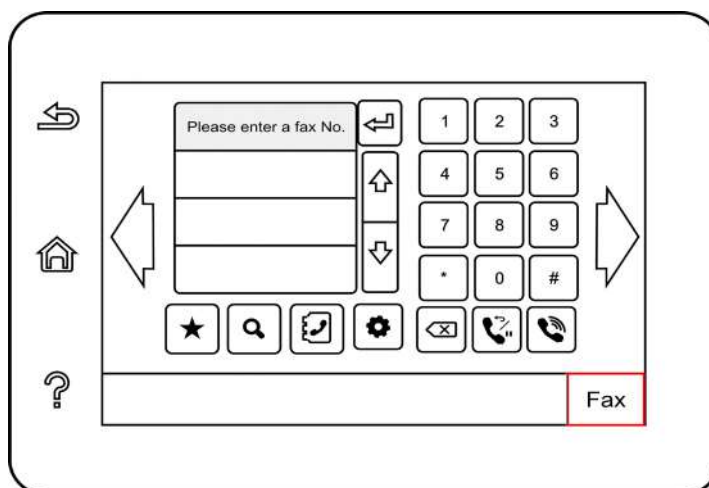


3. Click “Fax” button to scan document.
4. Fax will be sent automatically after scanning.



Note: • In order to prevent damage to this product, do not use a manuscript with correction tape, correction fluid, paper clips or staples on it. In addition, do not load photos, small manuscripts or brittle manuscripts into the automatic document feeder.

10.3.1.2 Manual fax sending

1. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
2. Click “Fax” button in control panel to enter fax functional interface.
3. Click “Hands free” button or pick up the telephone receiver, enter fax number.

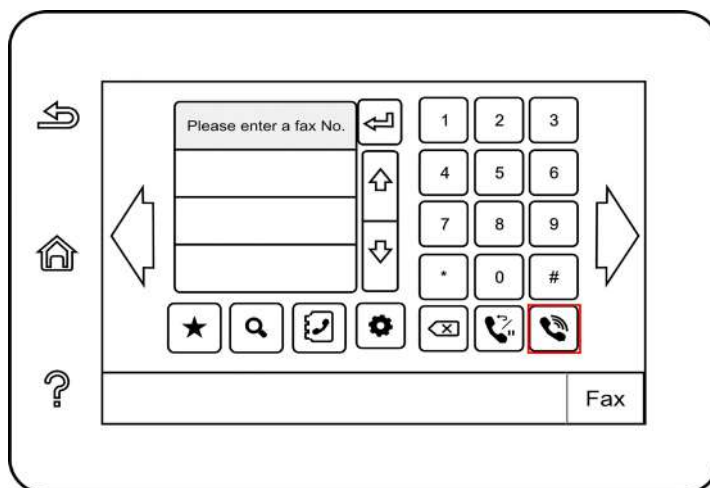

4. Re-click “Fax” button after hearing the fax warning tone to confirm to send
- If the called party answers the telephone, both parties can make a voice communication. Click “Fax” button after hearing the fax warning tone of the called party to confirm to send fax.

10.3.2. Receive Fax

You have two ways to receive Fax, and the default for the printer is Fax mode.

Fax mode: determine each call from the calling party as a fax. When arriving the ring count set, it gives fax receiving signals and receives the fax automatically.

Telephone mode: define each call from the calling party as a telephone call, it is required to answer the telephone manually, then click “Fax” button in control panel to receive fax.

10.3.2.1. Auto receiving under fax mode

In receiving the fax, the machine answers the call with the set ring count and then receive the fax automatically. The ring count defaults to 4 times.

Please refer to [Chapter 10.2](#) to modify ring count.

To adjust the ring volume, please see [Chapter 12.1.8](#).

10.3.2.2. Manual receiving under telephone mode

Under telephone mode, there are 3 ways to receive a fax when there is a fax call:

1. Click “Fax” button in control panel to allow the printer to receive fax.
2. Put down the telephone receiver or click “Hands free” button in control panel, then re-click “Fax” button to allow the printer to receive fax.
3. Use remote receiving method (only for external telephone), and after picking up the receiver, press “*90” on telephone panel and then the machine begins to receive.



-
- Note:** • The default remote code is “*90” which can be modified by users through “Fax”-“Fax setting”-“Receive set.”-“Remote code”.
- Received fax job may not be printed in case of low cartridge, please renew cartridge or turn “Continue to print in low cartridge” function on in fax receiving setting.
-

10.3.3. Set the compatibility of interference VoIP telephone line

If the fax is sent or received abnormally due to interference to telephone line, please improve the fax receiving and sending with the following methods.

1. Switch to VOIP Compatible mode with panel setting.

Please follow steps below to set :

1. Click “Fax” button in control panel, then click “Setting” button to enter “Fax setting” interface.
2. To shift to VoIP compatible mode, click “General setting-Compatibility”, select “VoIP”.
3. Try to resend the fax in off-peak hours.
4. Consult your VoIP provider on if the network setting on fax transmission could be optimized.

10.3.4. Other Fax Functions

1. Group Sending

This printer supports sending one original to several fax numbers, with the ability of up to 20 fax numbers sent to at the same time.

2. Delay Sending

You can enable Delay sending of Fax through the Control Panel. When this process is complete, the printer will scan the document to the memory, and get back to Ready state.

3. Active Job

You may check or delete the delay sending jobs stored currently with the “Active Job” menu.

4. Receive and forward

Fax may be forwarded. Forwarding fax to another fax or designated Email address is supported.

- 1) Forward to Fax

Select “Fwd to fax”, input and confirm receiver’s Fax No. When fax job is received, the product will dial preset Fax No. and forward the fax job. If forwarding fails due to line occupation, faults and other causes, the forwarded content will be automatically printed in one copy for backup (If re-dial is set, it prints after re-dial). Select “Fwd & Print”, to enable auto printing of all forwarded to fax.

2) Fwd to Email

Select “Fwd. to Email”, input and confirm Email address. When fax job received, the product will send the fax file to the Email address as an attachment. The forwarded content will not be automatically printed in case of Email faults or network problem. Select “Fwd & Print”, to enable auto printing of all forwarded to Email.

5. Automatic Redial

If the number you have dialed is busy or is not responding when you send a Fax, the machine will automatically redial the number. You can set the redial attempts and interval.



Note: • Consult network administrator for network settings of fax forwarded to Email.

- Forwarding of fax to Email may fail due to Email accounts setting, Email server setting, anti-spam and other network reasons. No fax file may be auto printed for backup. It is recommended to select “Fwd & Print” .
- See [Chapter 6.2.3.1](#) for SMTP Settings of the Email Server.

6. Auto Shrink

When the paper size of the received Fax does not match the size specified in the printer, the received Fax will be shrunk according to the user-defined paper size to match the paper size in the printer.

If you disable the Auto Shrink option, the Fax will be printed at full size across multiple pages. Auto Shrink is turned on by default.




Note: • Make sure that the default paper size setting is consistent with the size of the medium loaded in the paper tray.

- Receive in memory: in case of paper out or paper jam, This printer support storing all faxes under receiving into its memory automatically; after handling the paper out or paper jam, it will print all of them automatically.


7. Speed dial

You may edit the quick-dial and group-dial numbers in the address book for quickly dialing in sending a fax.

1) Speed Dial Number

Click “” button in fax interface to enter search interface, enter speed dial to allow the system to search automatically. If the speed dial has been saved, related Info. will display, then click “Fax” button to make a fax; if not, it says this is a null number. 200 speed dials can be saved at maximum.

2) Group Dial Number


Click “” button in fax interface to enter “Contacts” menu, select “Group call”, select one group in group call interface, click “Group dial” to make a group fax. 10 group dials can be saved at maximum, 99 numbers for each group at maximum.

10.4.PC-Fax


PC-Fax function allows you to send a document from your computer as a Fax. PC-Fax supports Windows system only. In this chapter, a Word file is taken as the example to show you how to operate.

10.4.1.Sending Fax with PC-Fax

1. Open the document to be faxed.
2. Click “File” and then “Print”.
3. Select a printer named after the end of Fax and then click “Printer Properties”; next, set “Paper” and “Quality” of PC-Fax sending on the “Fax Settings” popup.

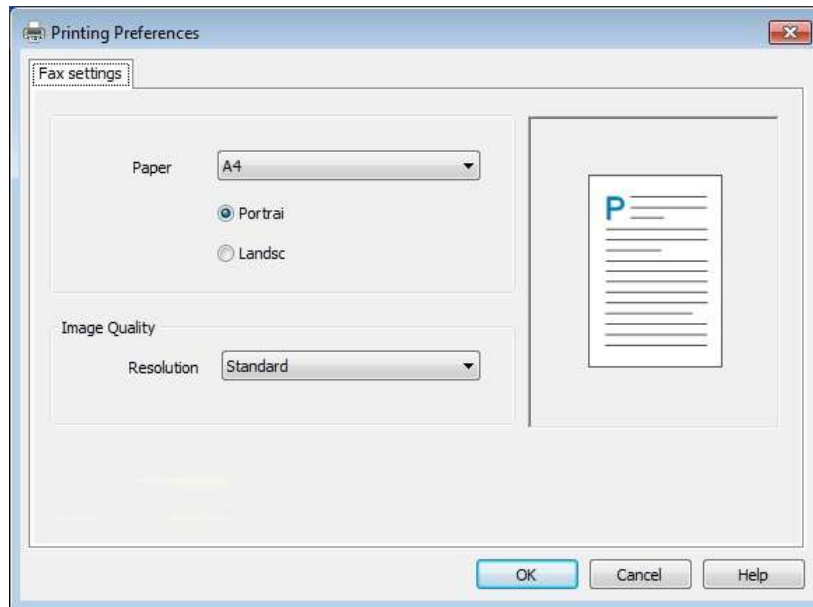

4. Click “Print” to present the “Send Fax” interface.

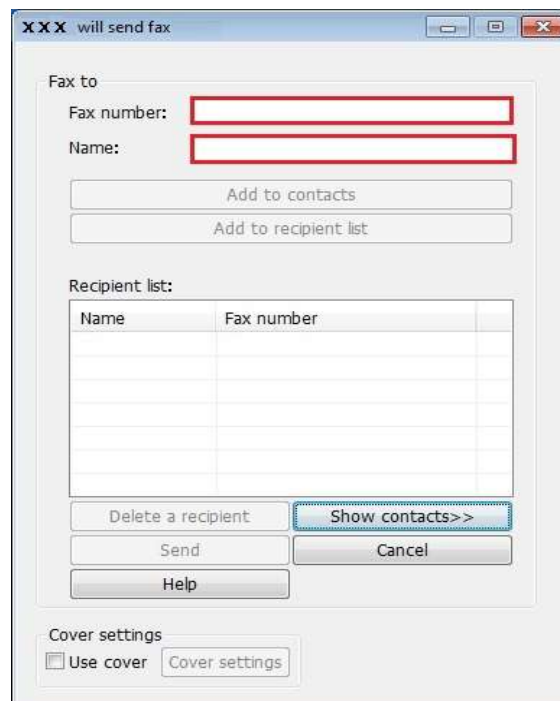

5. Enter the Name and Fax Number, then click Add to recipient list; If you want to send the Fax to multiple addresses, you can continue to enter their Name and Fax Number, then click Add to recipient list.
6. Click Send to start sending the Fax.

11.Mobile Print/Scan/Fax

11.1."Pantum" APP

Pantum APP is a free application with mobile printing, scanning and faxing functions, allowing you to print or fax photos, files, pages and scan photos or files directly from mobile terminal. Your printer may not support all of above mentioned functions, so please select relevant function of Pantum APP for use according to your printer type. Please be sure the application has been installed and connected to wireless network properly before use.

11.1.1. Operating systems supported

Pantum APP is applicable to Android 4.4-8.0, and iOS 7.0 or later.

11.1.2. How to download Pantum App

How to download it for Android mobile device:

1. You can download it from its official website <http://www.pantum.com>
>Service & support > Driver download >Select printer model > Download and install.
2. You can use Google Play Store > Apps > to search Pantum Mobile Printing > Download and install.

How to download it for iOS mobile device:

Click the App Store icon > Search interface > input "PANTUM" or "Pantum print" in the search bar > Download and install on the interface of iOS device to download.

11.1.3.How to use this "Pantum" APP


11.1.3.1.For Android Devices

11.1.3.1.1.Preliminary preparations

1. A printer that has wireless network function.
2. Android mobile device.

11.1.3.1.2. Operation steps

1. Turn on printer power.
2. Click "PANTUM" icon on the main screen of an Android device and the following interface will pop out.

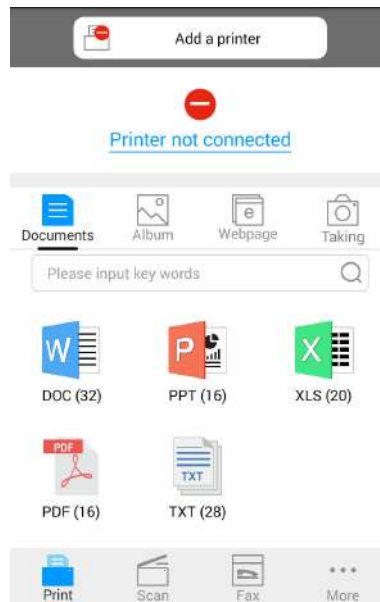

3. Click "Add a printer" button at the top of interface, then select the way according to your habit to add the printer.

4. Select the function you need and set it up to meet your function needs.



-
- Note:**
- If printing fails, please inspect if the Android device is connected to the wireless network where the printer is connected to.
 - If the Android mobile device did not detect any printer, check whether the printer is powered on and the printer is turned on.
 - For more details, please refer to the mobile print user guide attached.
-


11.1.3.2.For iOS Devices

11.1.3.2.1.Preliminary preparations

1. A printer that has wireless network function.
2. iOS mobile device.

11.1.3.2.2. Operation steps

1. Turn on printer power.
2. Connect the iOS mobile device with wireless network of the printer (Please refer to [Chapter 5](#) for how to connect).
3. Click “PANTUM” icon on the main screen of an iOS device and the following interface will pop out.

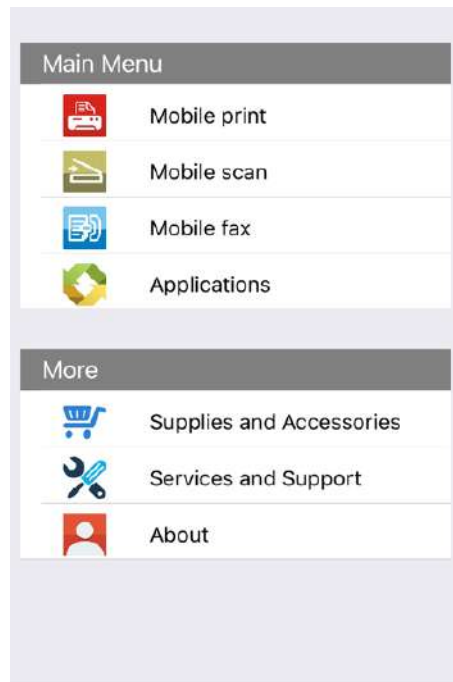

4. Select the function you want and then do relevant settings to meet your functional demands.



Note:

- If failure of operation, please check if your iOS mobile device has access to the wireless network into which your printer is connected.
- If the iOS mobile device did not detect any printer, check whether the printer is powered on and the printer is turned on.

11.2.Mopria mobile print

Mopria mobile print requires installing Mopria Print Service on the Android device. You can print photos, emails, webpages and files.

11.2.1.The operating systems and applications which support Mopria mobile printing

1.Mopria mobile printing is suitable for Android4.4 or higher version.

2.Mopria mobile printing is supported by applications, e.g. Microsoft Office

1.01(16.0.4201.1006) or higher version, Adobe Reader (V11.7.1) or higher version.

For more information about applications which support Mopria printing, please visit:

<http://mopria.org/spotlight-wall>

11.2.2.How to download Mopria Print Service

1. Download Mopria Print Service from Google Play and install it on the Android device.

2. For Chinese users, please download the Mopria printing service at <http://cn.mopria.org> for downloading and installing this APP.

11.2.3.Preliminary preparations

1. A printer that has wireless network function.

2.Android mobile device.

11.2.4.How to use Mopria mobile printing

Before printing, please set the Mopria print service as “ON”.

1.Tap the “settings” of the Home Screen on Android mobile device, and select “print”.

2.Set the “Mopria print service” as “ON”.

All other printing plug-ins should be shut down when you use Mopria mobile printing function.

The printing steps may varied by applications, taking Adobe Reader as an example for explanation.

1. Turn on printer power.

2.Connect the Android mobile device with wireless network of the printer (Please refer to [Chapter 5](#) for how to connect).

3. Open the files you need to print with Adobe Reader on the Android device.

4. Click  .

5.Tap “print”.

6.Please make sure the Pantum printer is selected.

If you selected other printer (or failed to select any printer), please tap the pull-down menu of printer, and select your Pantum printer.

7. Set printing parameters, e.g. print pages.

8. Tap “print”.



Note: • If printing fails, please inspect if the Android device is connected to the wireless network where the printer is connected to.

- If the Android device cannot detect any printer, please inspect if power of the printer is turned on and if the printer is turned on.
-

11.3.NFC function

NFC function allows non-contact point-to-point data transmission between electronic devices. To use this function, you need to install the Pantum printer App on a mobile phone that supports NFC, or conduct Mopria mobile printing after finishing Wi-Fi Direct connection through NFC function.



Note: • NFC recognition may not be used normally affected by the material of phone cover.

- Touch time and distance may differ because of the mobile phones used.
-

11.3.1.Preliminary preparations

1. Printer with Wi-Fi Direct function.

2. Android 5.0 or higher version mobile devices support NFC function and Wi-Fi Direct function.

11.3.2.How to use NFC function to print

1. Inspect if the NFC and Wi-Fi Direct function are enabled on the mobile device and if Wi-Fi Direct function of printer is enabled. (Please refer to [Chapter 12.2](#) for how to enable Wi-Fi Direct function).

2. Knock gently the NFC mark that indicates the NFC antenna (on the back of the mobile device generally) on the printer and then wait for several seconds; then, the printer application will start and the mobile device will connect to the printer.



Note: • For some mobile devices, NFC antenna may not be on their backsides. Before touching, please check the position of the NFC antenna of your mobile device.

- If the mobile device is not installed with Pantum App, the Pantum App download link will pop out automatically. Try again after downloading and installing the App.
-

3. Select the content to be printed and set printing parameters according to needs.

4. Click print and the printer will start to print.

11.4.AirPrint mobile print

Only printers that support AirPrint function can realize AirPrint printing. Please check if there is AirPrint mark on the packaging of the printer, in order to identify if the printer supports AirPrint function.

11.4.1.Operating systems supported by AirPrint mobile print


Applicable to iOS 7.0 or higher versions.

11.4.2.Preliminary preparations

1. A printer that has wireless network function.
- 2.iOS device mobile printing.

11.4.3.How to use AirPrint mobile printing

The printing steps may varied by applications, taking PDF as an example for explanation.

1. Turn on printer power.
 - 2.Connect the iOS mobile device with wireless network of the printer (Please refer to [Chapter 5](#) for how to connect).
 3. Open the files you need to print in the format of PDF on the iOS device
 4. Click .
 - 5.Tap “print”.
 - 6.Please make sure the Pantum printer is selected.
- If you select other printers (or no printer), please click printer option and then select your Pantum printer.
7. Set printing parameters such as number of copies to print.
 - 8.Tap “print”.



Note: • If printing fails, please inspect if the iOS device is connected to the wireless network where the printer is connected to.

- If the iOS device cannot detect any printer, please inspect if power of the printer is turned on and if the printer is turned on.
-

12.General Settings

This Chapter mainly introduces some general settings.




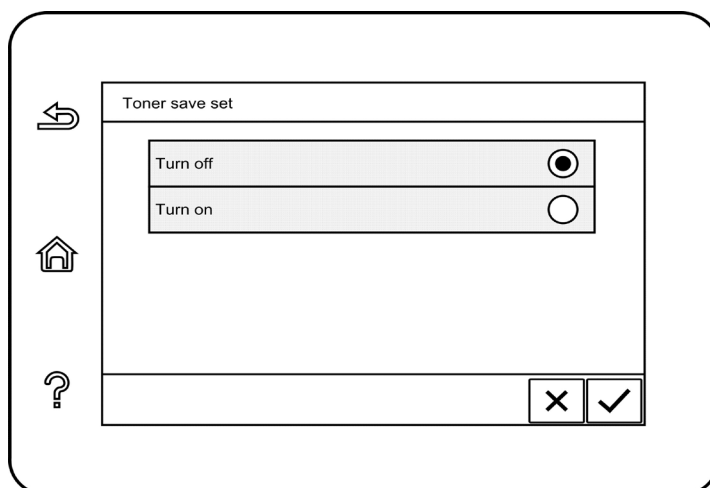
Note: • The panel appearance may be a little different due to difference in type or function.
All diagrams are only for reference.

12.1. System Settings

12.1.1. Ink saving setting


You can select the save toner mode which can reduce toner consumption and reduce printing cost. When save toner mode is “on”, the printed color will be lighter. Save toner mode is “off” by default.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Toner save set” to turn toner saving mode on.



12.1.2.Language Setting


“Language Setting” is used to select the language to be displayed on the control panel.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Language set” to set language.

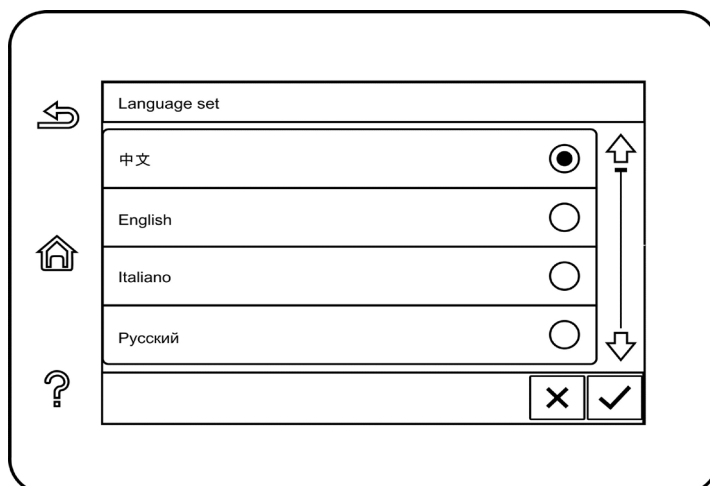

12.1.3. Restore Factory Settings

 “Restore factory settings” is used to recover the default settings of printer. The printer will restart itself automatically after recovering factory settings.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Restore set” to reset to defaults.

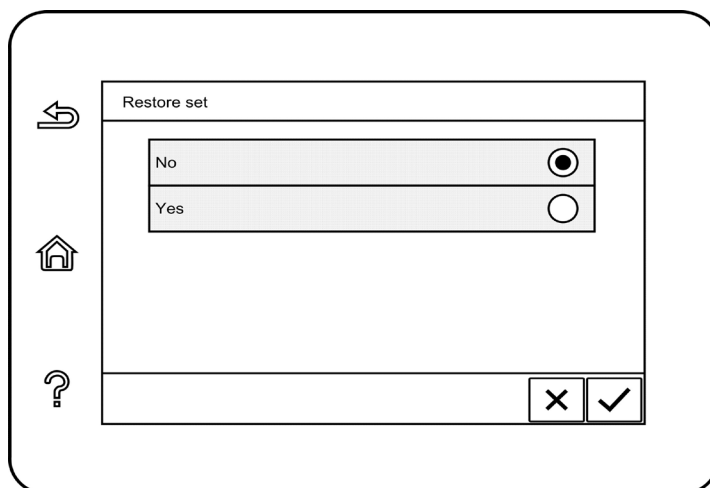


Note: • Factory settings of network printer can be recovered via embedded Web server (please refer to [Chapter 6.2.4](#)).

12.1.4. Sleep Time Setting

 Sleep mode can reduce the energy consumption of printer effectively, and “Sleep time setting” can be made in the idle time before the device enters sleep mode.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Sleep time set to set sleep time.

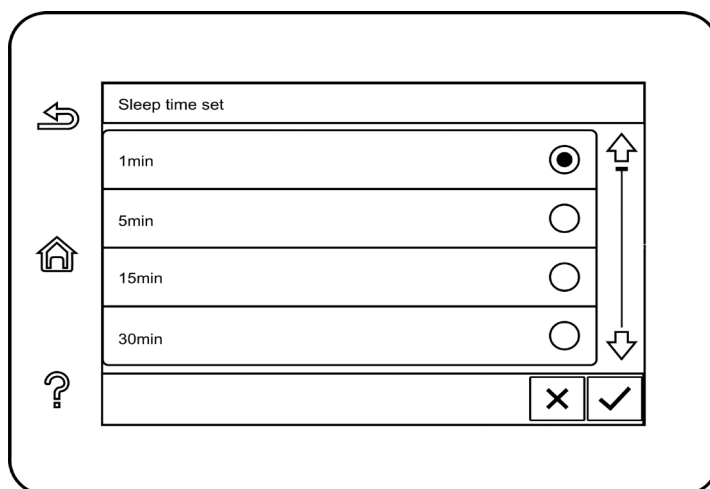


Note: • In sleep mode, the printer can be woken up by pressing any key or sending printing work.

12.1.5. Mute printing

 
Set mute mode to realize low speed printing with low noise. When mute mode is “on”, printing will be in a low speed. This mode is “off” by default.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Mute printing” to turn silent print mode on.

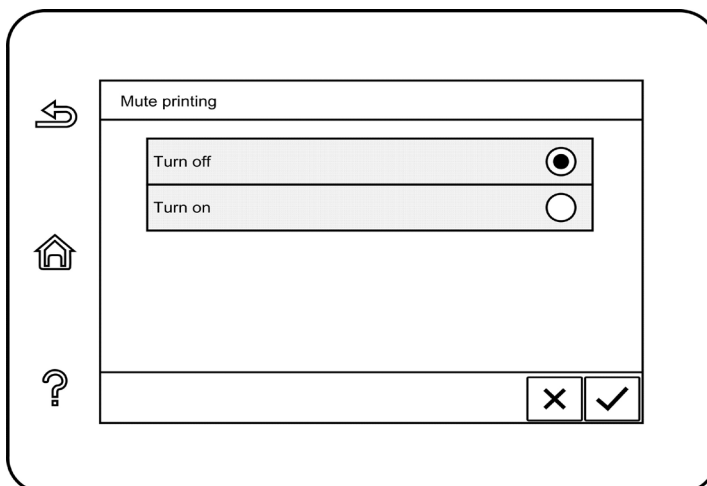

12.1.6. Auto shut-off setting

“Auto shut-off setting” to set off condition and off delay of printer.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Auto off set” to set off conditions and delay.

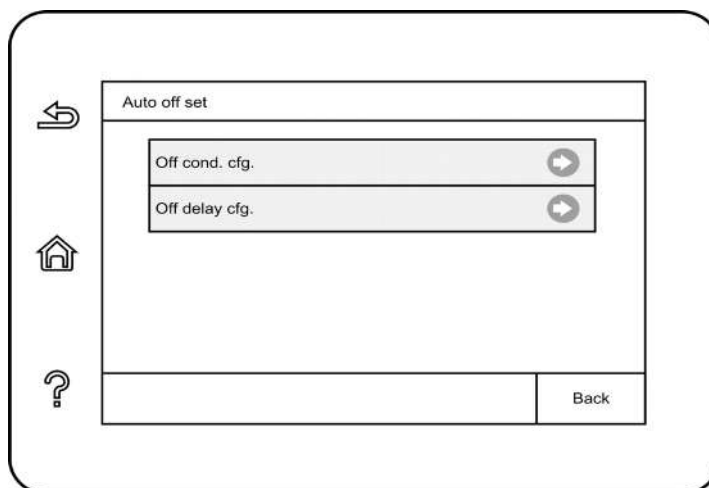


Note: • Individual countries (or regions) do not support auto off setting.

12.1.7. Sound/volume

 
You may set the up and down of sound/volume or shut down.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Sound/Volume” to set “Warning tone”, “Ring tone”, “Fax tone” and “Total volume”.

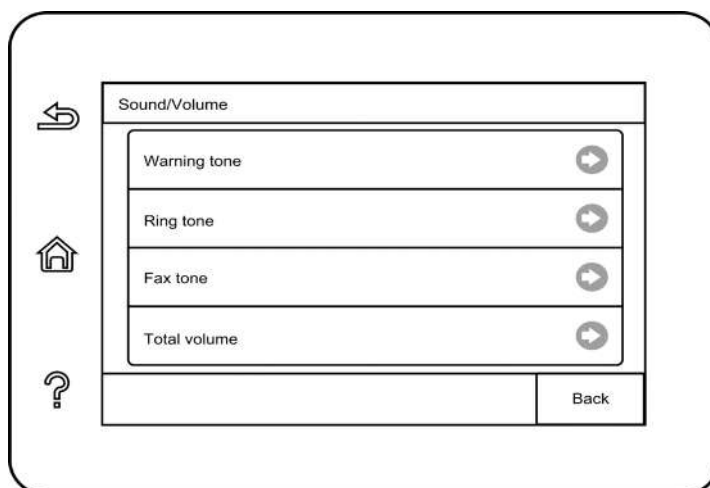

12.1.8. Time/date

 
You may set the time and date with the Time/Date option.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “System Setting”-“Time/date” to set “Date”, “Time”, “Time Zone”, “Date format” and “Time format”.

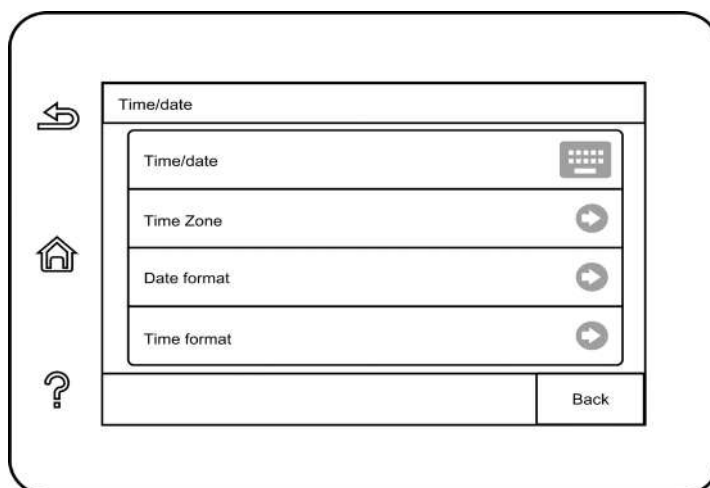

12.2. Network Settings

 
You can check or set network through Network set.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “Network set” to set “Wired config.”, “Wireless conf.” and “WiFi Direct”

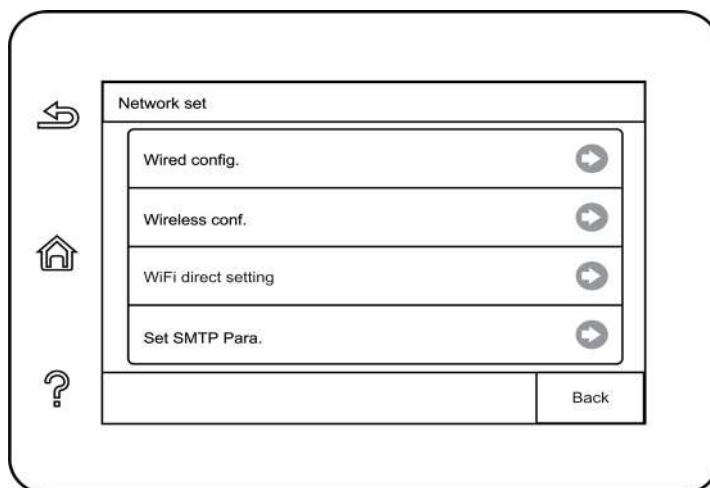

12.3. Network Information


You can check the network status through Network Information.


1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “Network info” to check “Wired config. info”, “Wireless conf. info” and “WiFi Direct info”.

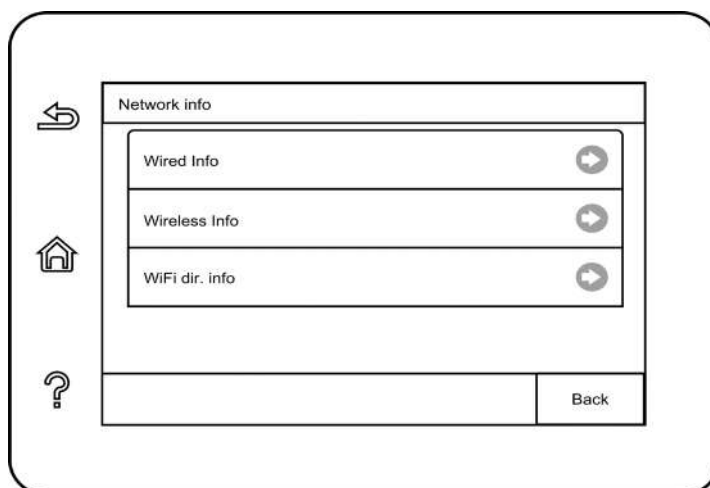

12.4. Print information report

You can print information report by operating control panel. These pages can help you to learn about product information, and diagnose and solve product failures.

1. Click “” button in control panel to enter “Menu setting” interface.
2. Click and select “Info. report” to enter Info. report print, thus you can print product report as required.

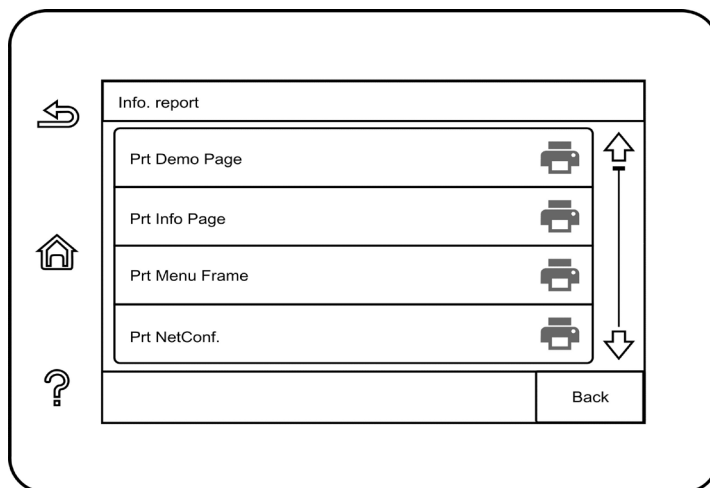


Product reports that could be printed include Demo page, information page, menu structure page, network configuration, e-mail address, group e-mail, FT address and Wi-Fi hotspot.



Note: • The product report above is the most complete version, and may be different from the product report of model that you actually use.

12.5. Consumable information

You can view the consumable information via the control panel of the printer.

1. Click “” button in control panel to enter “Menu setting” interface.
2. Click “System Settings” - “Consumable Information” to view the toner cartridge model, remaining toner, etc.

12.6. Configure the e-mail address book

1. Click and select “Scan”-“Scan to Email” in control panel to enter Scan to Email setting interface.
2. Enter Email Add. into input box, click “Add” button to add Email Add. into Email Add. book.
3. Click and select “Email Add.” to check, edit, delete and add Email Add. to group.
4. Click and select “Group Email to check, establish, edit and delete group Email.



Note: • The address book members cannot be added to the group before creating a group e-mail.

• You will not receive the e-mail without proper settings on your e-mail box. For specific setting steps, please consult your network administrator.

12.7. Configure the FTP address book


1. Click and select “Scan”-“Scan to FTP” in control panel to enter Scan to FTP setting interface.
2. Enter FTP Add., FTP port, user name and password into input box, click “Add” button to add FTP Add. into FTP Add. book.
3. Click and select “FTP Add. book” to check, edit and delete.




Note: • Before configuring the FTP address book, you may need to consult your network administrator for the server IP address, port number and FTP name.

12.8. Online upgrade

This printer supports firmware upgrade with its control panel without a computer .

1. Switch on the printer and then connect it to network.
2. Click “  ” button in control panel to enter “Menu setting” interface.
3. Click and select “System Setting”-“Online upgrade” to upgrade firmware

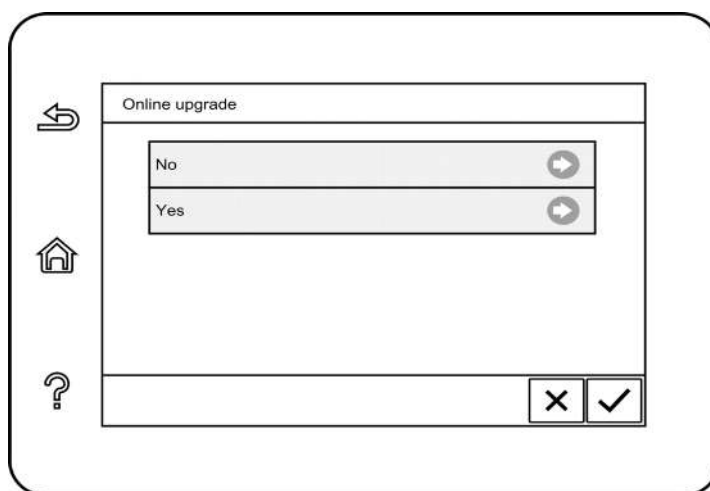

Note: • Perform upgrading according to the prompts and restart the printer. If the firmware download fails, restart the printer and then perform operation again.

13. Routine Maintenance



Note: • Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.


13.1. Cleaning the Printer




Note: • Cut off the power supply of the printer before cleaning.

- Please use mild detergents.
- Some parts of the printer are still in high temperature within a short time after use. To prevent burns, please don't directly touch places labeled with high temperature warning in contact with internal components after opening the printer's front or rear cover.
- Be careful with printer screen when operating against pressing harshly or damaging touch screen. Clean the screen with soft dry cloth or cloth with mild detergent or ethyl alcohol rather than any organic solvent, acidic or alkaline solution.


1. Use a soft cloth to wipe the outside of the printer clean.

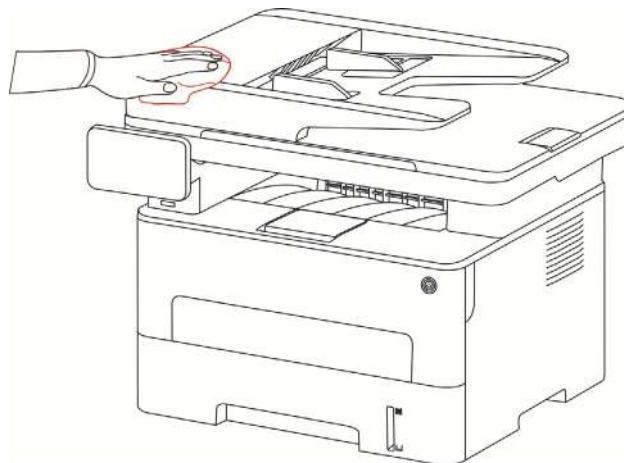

2. Lift the scanner cover, and gently wipe the glass platen and automatic duplex document feeder CIS (D-CIS) with soft cloth.

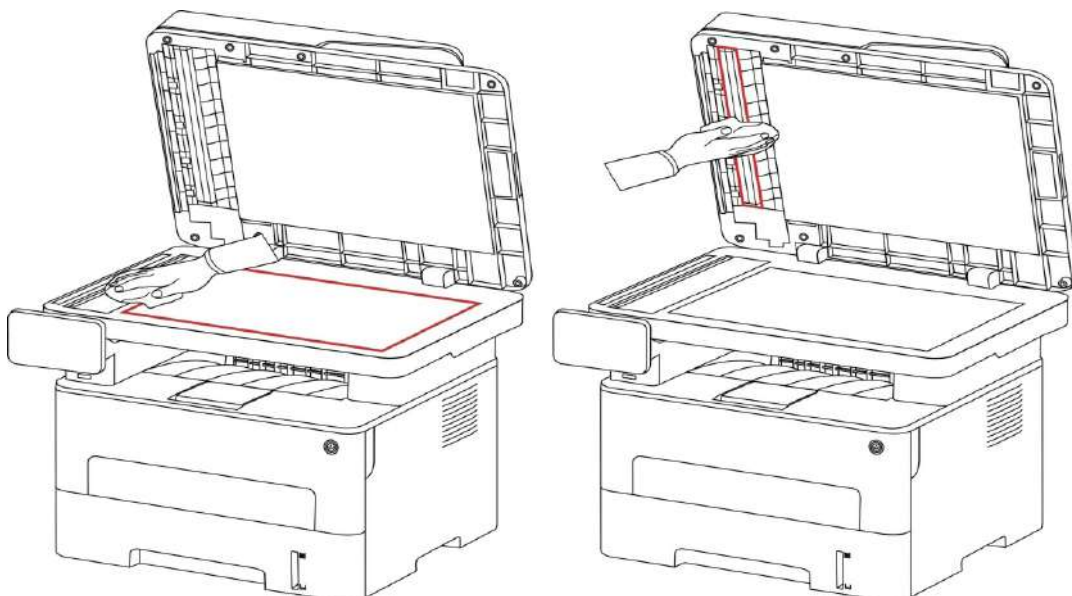


3. Open the front cover and take the laser toner cartridge out along the track.

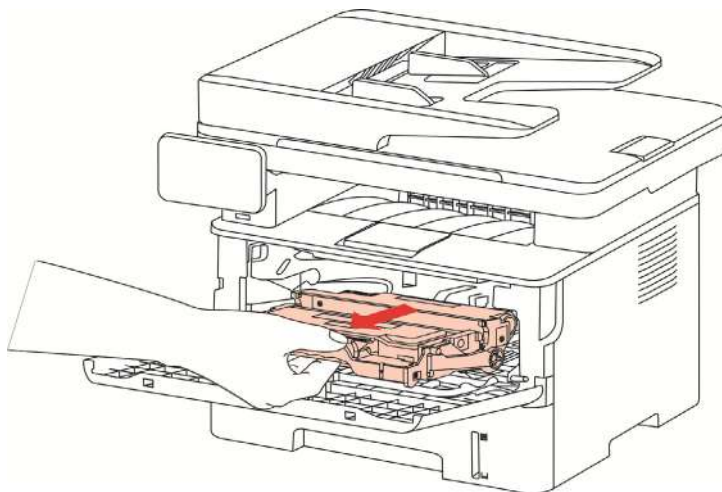


Note: • When removing the toner cartridge, put the toner cartridge in a protective bag or wrap it with thick paper to avoid direct light damaging the toner cartridge.


4. Clean the inside of the printer by gently wiping the shaded area, as shown in picture, with a dry and lint-free cloth.

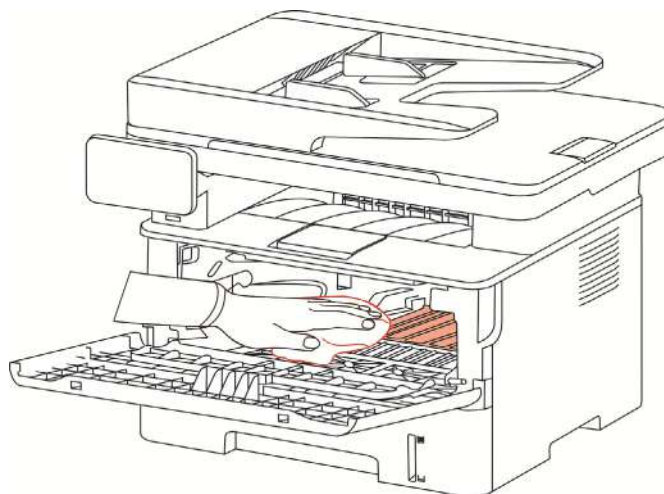


5. Wipe the LSU lens of printer gently with dry lint cloth.

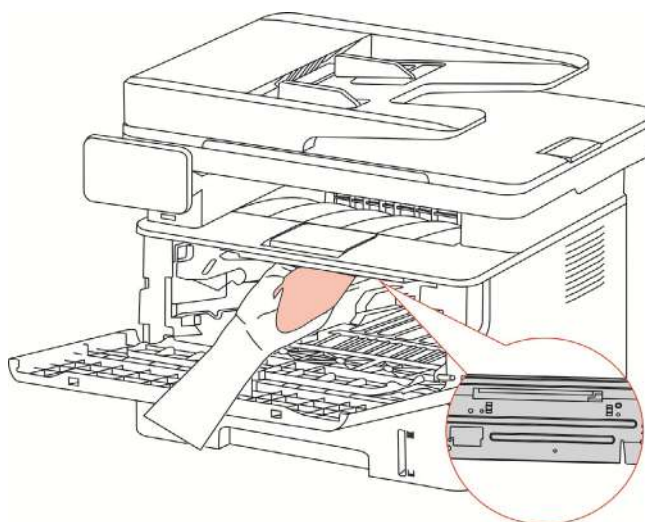

6. Open the auto feed tray and wipe the pickup roller gently with dry lint cloth.

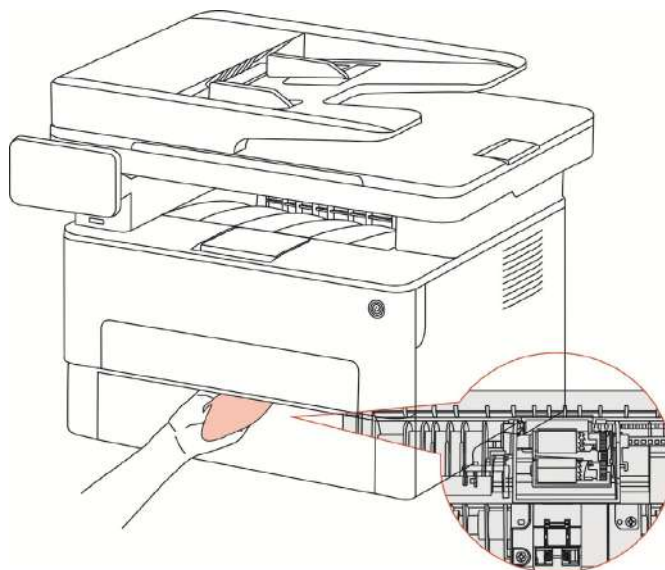

Note: • the machine with the ADF should be regularly cleaned, removing dirt on the top cover of the ADF. Please wipe the place as shown in figure with a soft cloth.

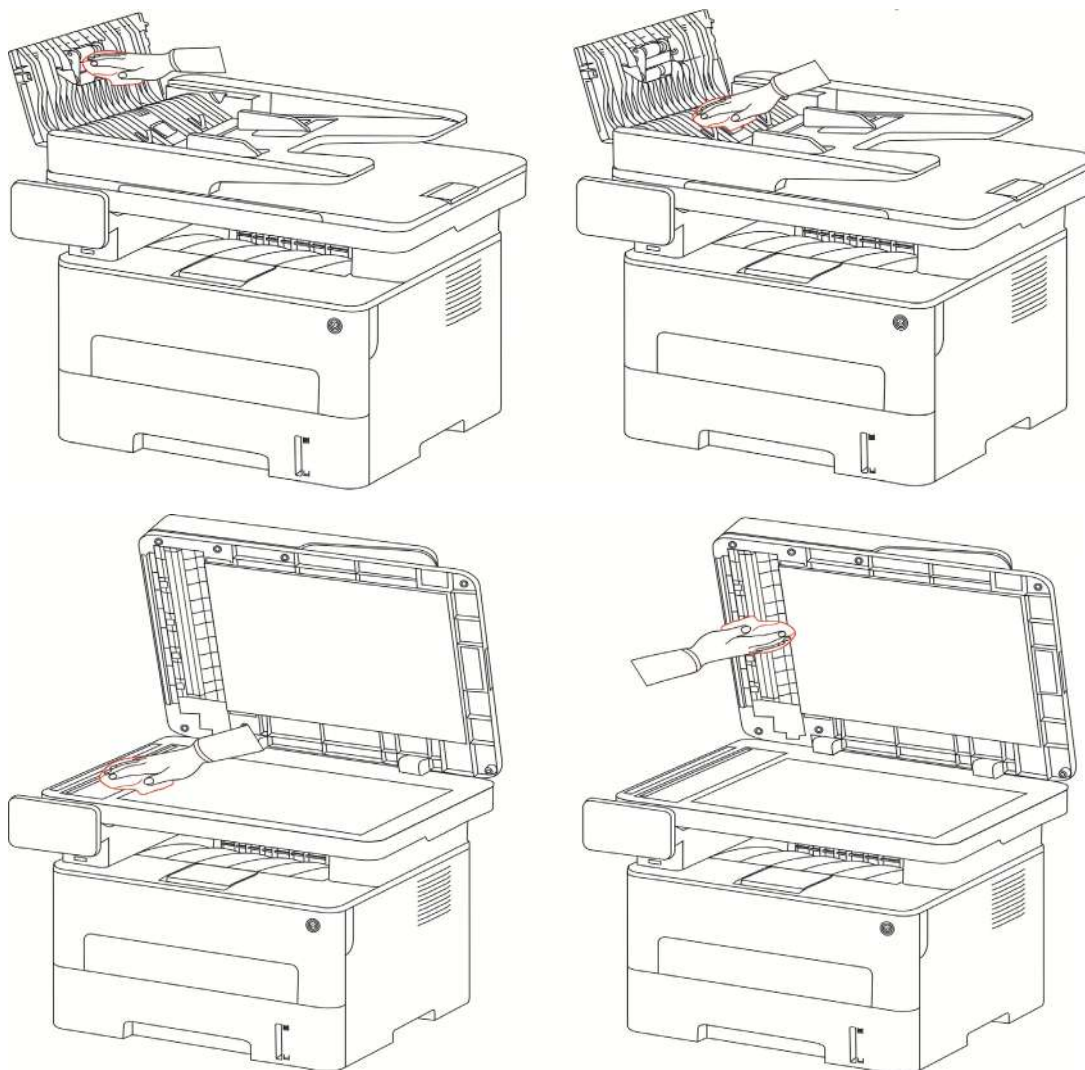

13.2.Toner cartridge and drum component maintenance

13.2.1.About toner cartridge and drum component component

1.Cartridge, use and maintenance of the drum assembly.

Please use the original toner cartridge for better printing quality.

Please pay attention to the following items while using the toner cartridge:

- Please keep the toner cartridge in a dry and dark place.
- Do not refill the toner cartridge without permission; otherwise, the damages caused will not be included in the scope of warranty of the printer.
- Please place the toner cartridge in cool and dry places.
- Please do not place the toner cartridge near ignition sources, as the toner inside it is inflammable and may cause fire
- Please pay attention to toner leakage while it is taking out or disassembled. In case of toner leakage, skin contact with toner or spattering into eyes or mouth, please wash it with clear water immediately, or see a doctor if feeling unwell.
- When placing the cartridge, please stay away from children may contact area.

2. Service life of toner cartridge

- The service life of toner cartridge is depending on the toner quantity needed by printing.
- When a prompt that “The Toner Cartridge life Expired” appears on the display, it indicates its service life expires. So please replace it.

3. Service life of drum component

- When a prompt that “The Drum Unit life Expired” appears on the display, it indicates its service life expires. So please replace it.

13.2.2.Replace toner cartridge and drum component




Note: Please pay attention to the following matters before replacing toner cartridge:


- Since there may be toner on the surface of toner cartridge, please pay attention while taking it out to avoid spattering.
 - Please place the toner cartridge taken out on paper to avoid large-scale spattering of toner.
 - When installing, do not touch the surface of the toner cartridge, so as to avoid scratching it.
-

Toner cartridge replacement steps:


1. Power off the printer.

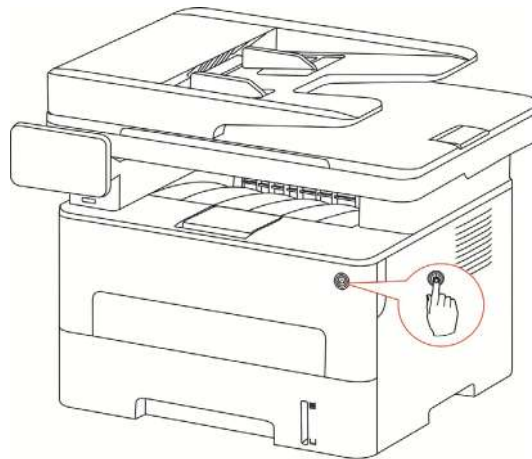


2. Open the front cover and then remove the laser toner cartridge along the guide rail.

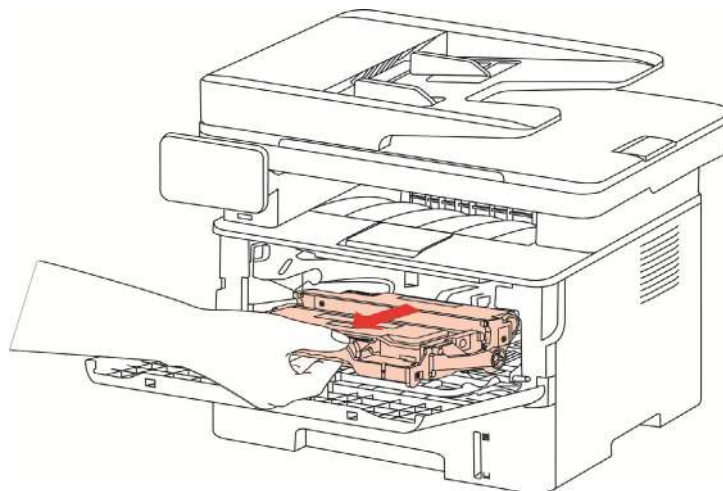


3. Press the blue button on the left side of drum component with left hand and lift the toner cartridge handle with right hand at the same time to take the toner cartridge out.

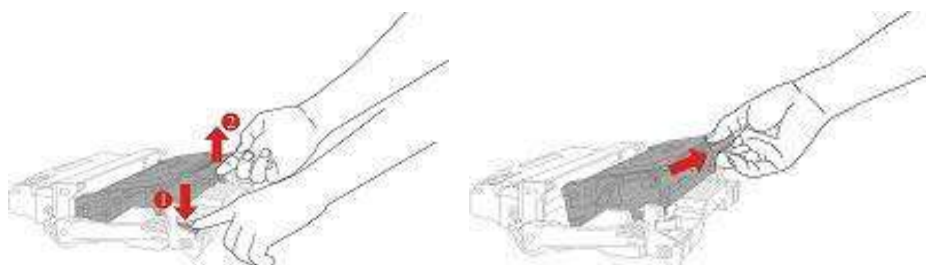


4. Open the package of the new toner cartridge and hold the toner cartridge handle to shake it left and right for 5 – 6 times, so that the toner inside can be uniformly dispersed.

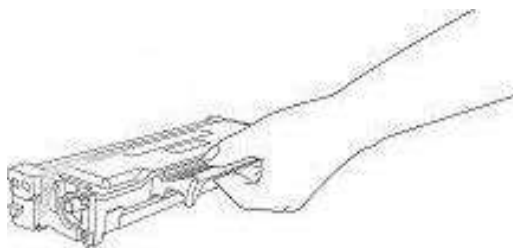


5. Pull the seal out and take the toner protection cover out.

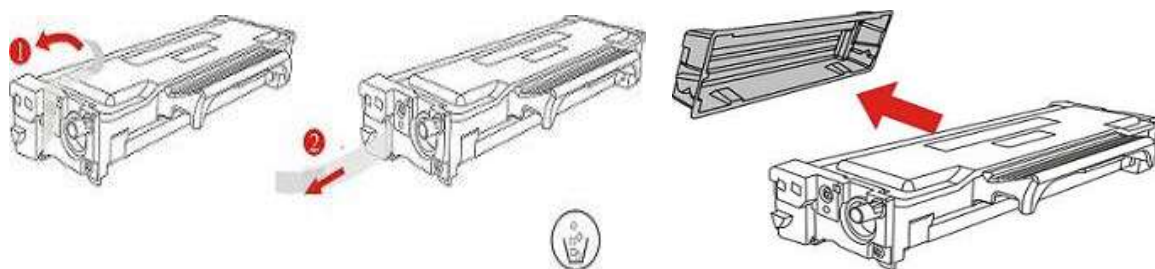

6. Install the drum component along the inner track to finish installing toner cartridge.

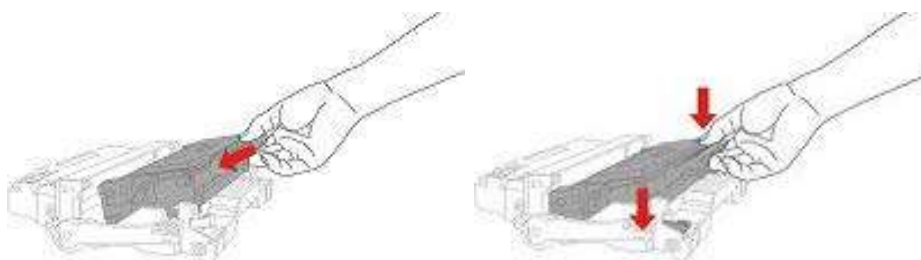


7. Take the drum component with toner cartridge installed and install it inside the printer along the inner track of printer to finish installing.

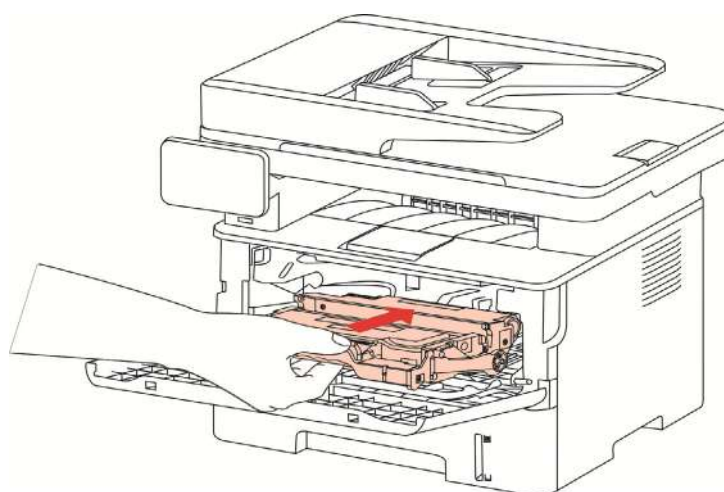


8. Close the front cover.

Replace the drum assembly steps are as follows:


1. Power off the printer.

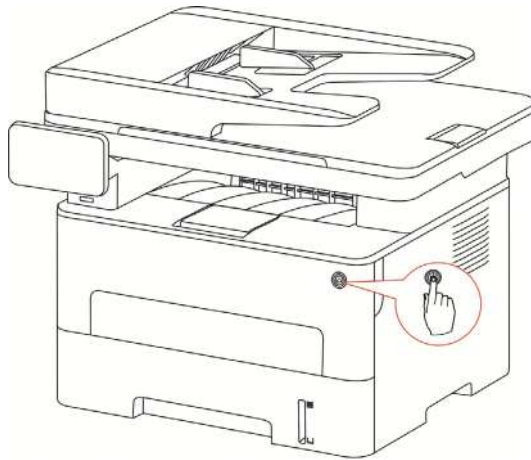


2. Open the front cover and take the laser toner cartridge out along the track.

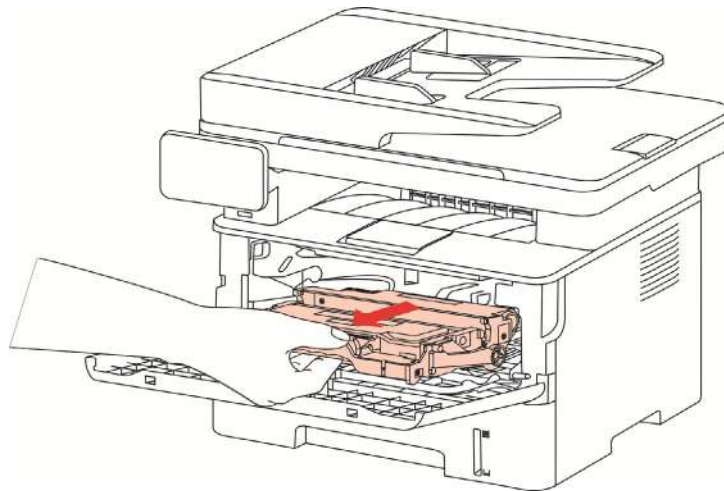


3. Press the blue button on the left side of drum component with left hand and lift the toner cartridge handle with right hand at the same time to take the toner cartridge out.

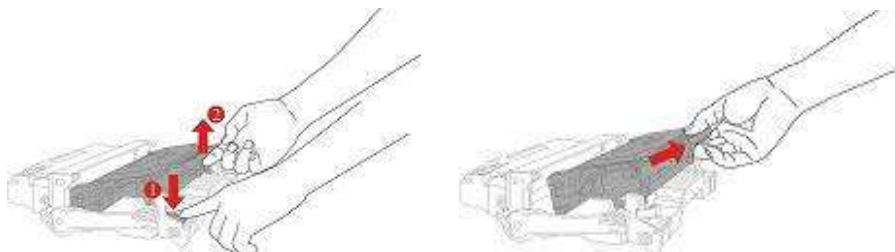


4. Open the package of new drum component, take the protection device of drum component, and put the drum component on a horizontal table.

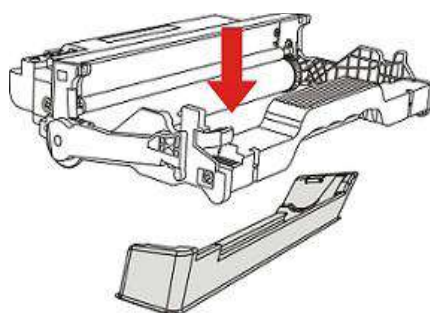

5. Install the drum component along the inner track to finish installing toner cartridge.

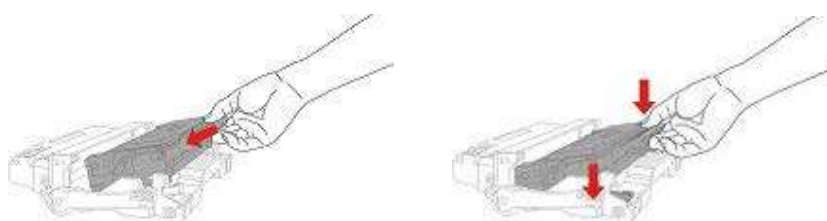

6. Take the drum component with toner cartridge installed and install it inside the printer along the inner track of printer to finish installing.

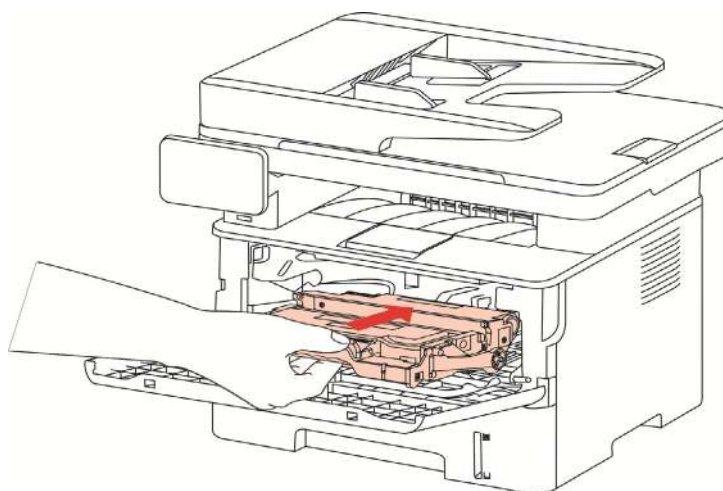

7. Close the front cover.

14. Troubleshooting

Please read this section carefully. It may help you to solve common problems encountered during the printing process. If the problems persist, please contact Pantum Aftersales Service Centre.

Prior to handling common problems, first check that:

- The power cord is connected correctly and the printer is powered on.
- All of the protective parts are removed.
- The toner cartridge is installed correctly.
- The paper is correctly loaded into the tray.
- The interface cable between the printer and the computer is connected correctly.
- The correct printer driver has been selected and installed properly.
- The computer port is properly configured and is connected to the correct printer port.


14.1.Cleaning Jammed Paper

14.1.1.Middle jam




Note: • When removing the paper jam, please don't touch immediately places labled with high temperature warning in contact with internal components after opening the printer's front or rear cover, to prevent burns.


1. Pull paper tray out.

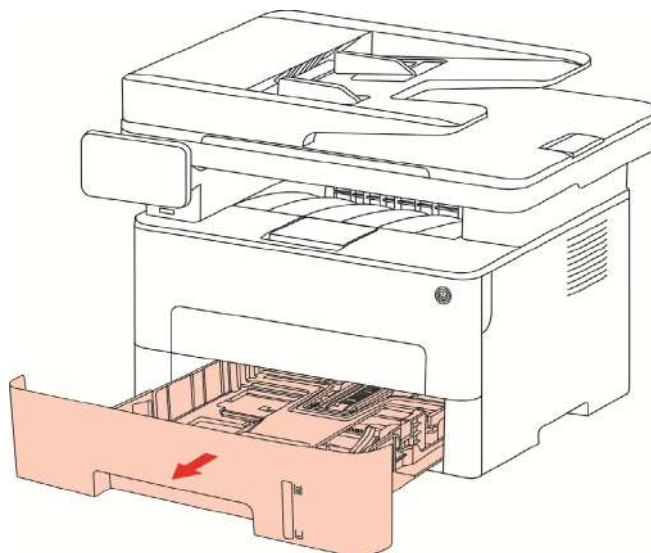


2. Gently pull the jammed paper out.

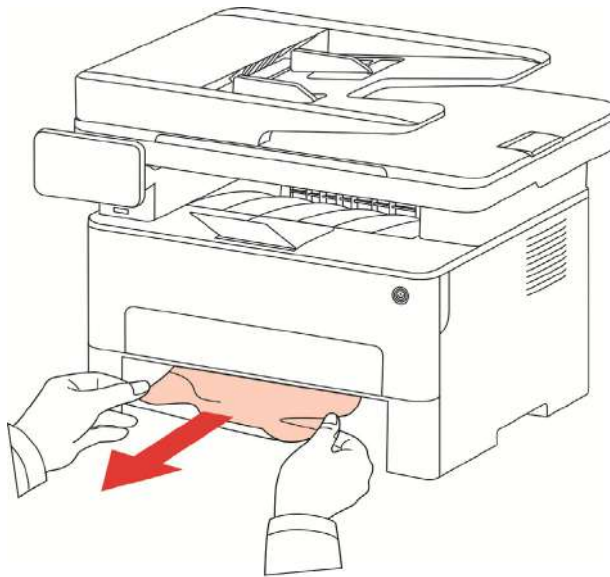


3. Install paper tray.

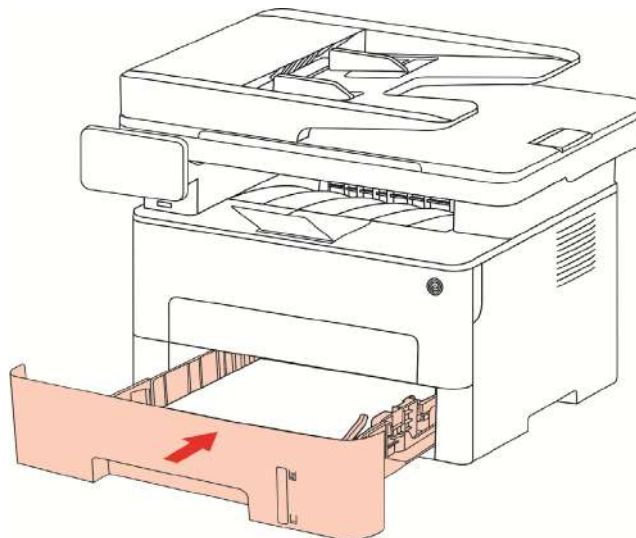


4. Open the front cover.

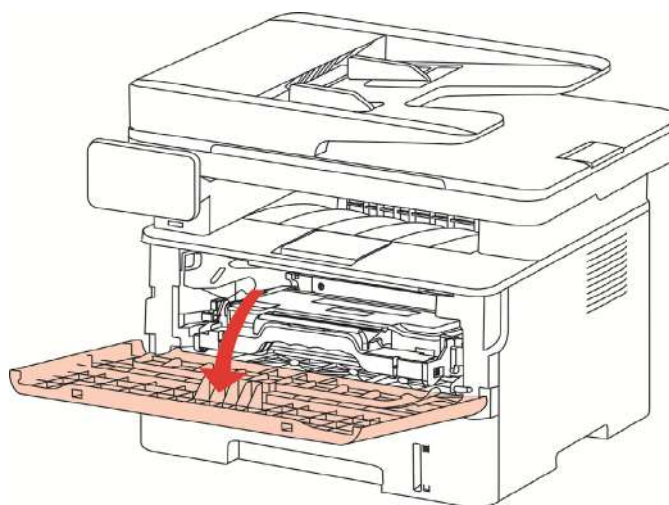

5. Take the laser toner cartridge out along the track. (For the purpose of preventing printing quality from affecting by the exposure of photosensitive drum, please put the laser toner cartridge inside the protection bag or wrap it with thick paper).

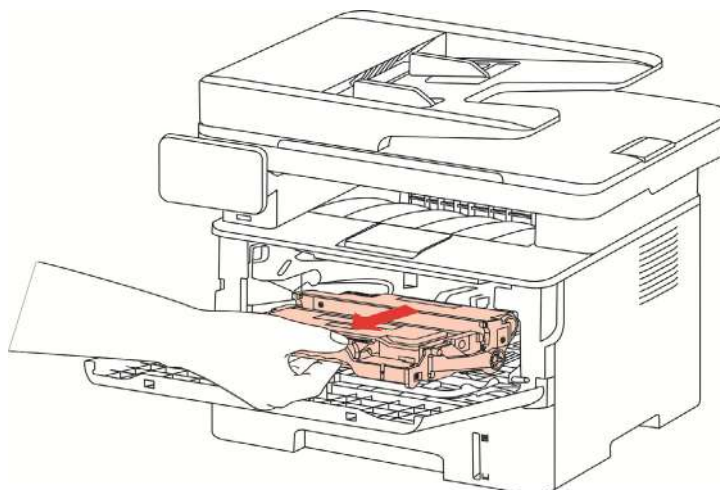


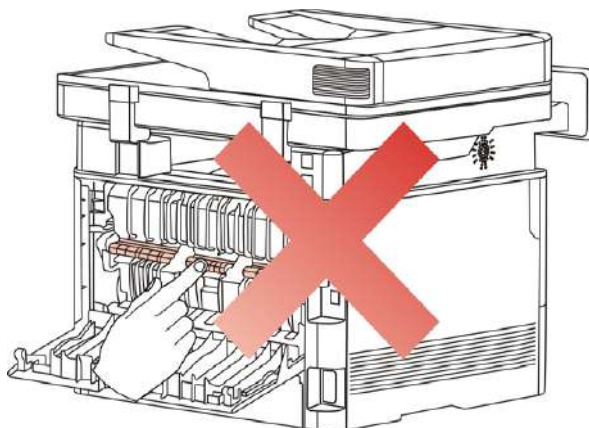
6. Gently pull the jammed paper out.

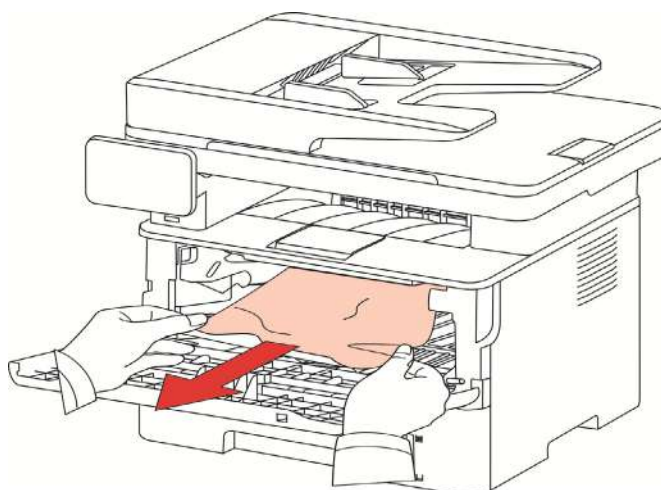


7. After taking out papers jammed, install the laser toner cartridge again and close the front cover, then the printer will recover printing.

14.1.2.Paper Jam in the Fuser Unit


 **Note:** When papers jammed in fuser unit are taken out, please pay attention and do not touch the shaded area shown below in order to avoid burns.




1. Open the front cover and then remove the laser toner cartridge along the guide rail.

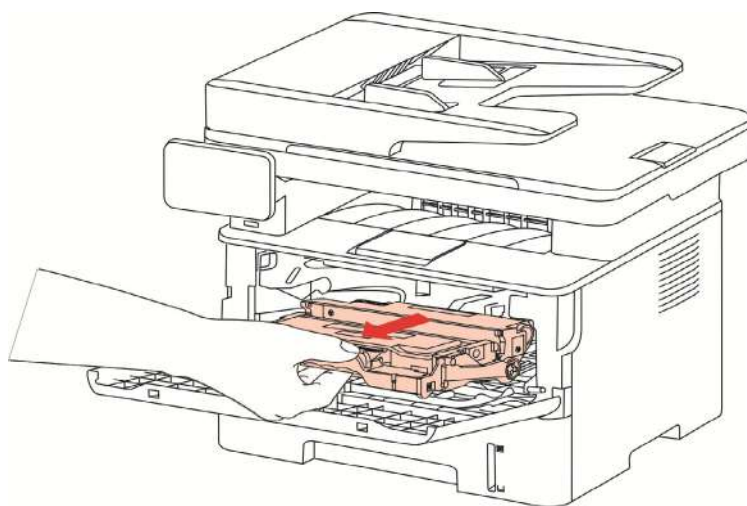


2. Open the rear cover.

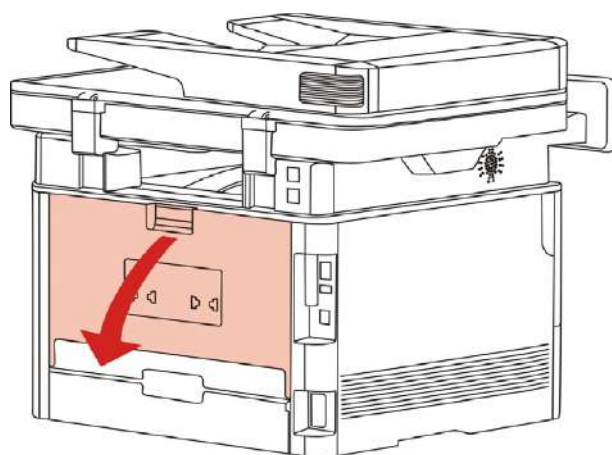


3. Open the fuser door using the handles on both sides.

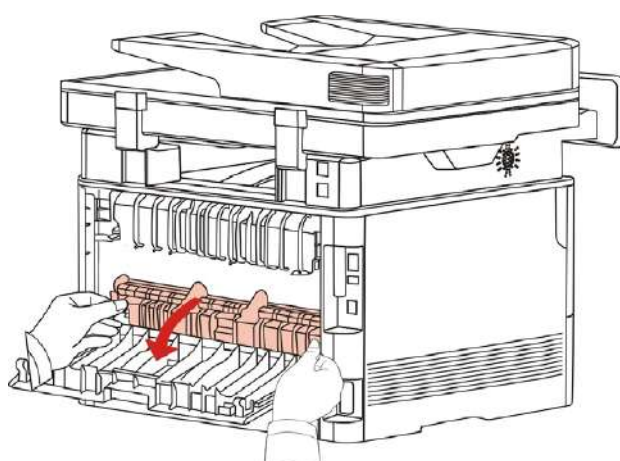


4. Gently pull the jammed paper out.

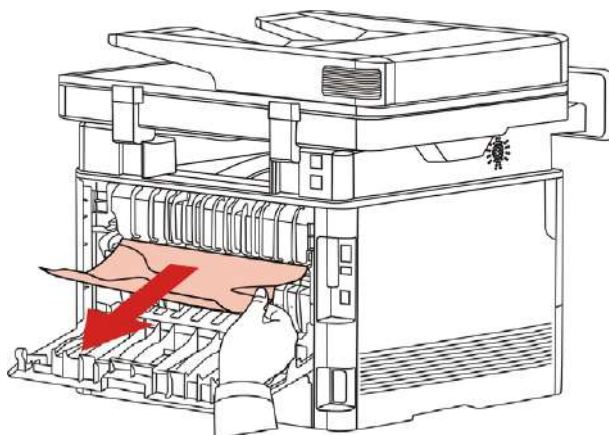

5. Close the back cover after removing the paper jammed.

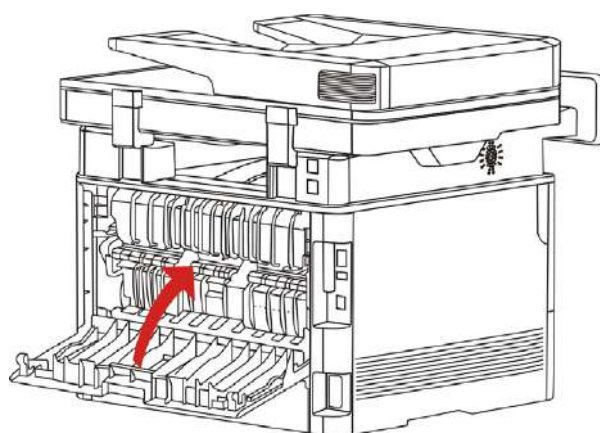


6. Install a new toner cartridge and then close the front cover; then, the printer will recover printing automatically.

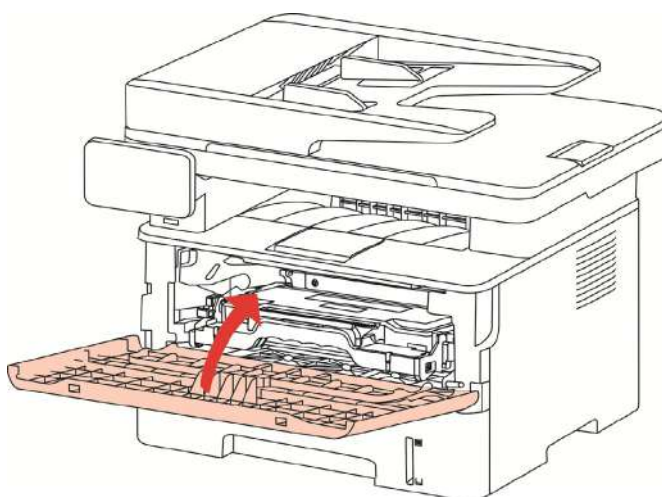


14.1.3. Duplex Unit Jam


1. Remove the duplex printing unit from the back of the printer.

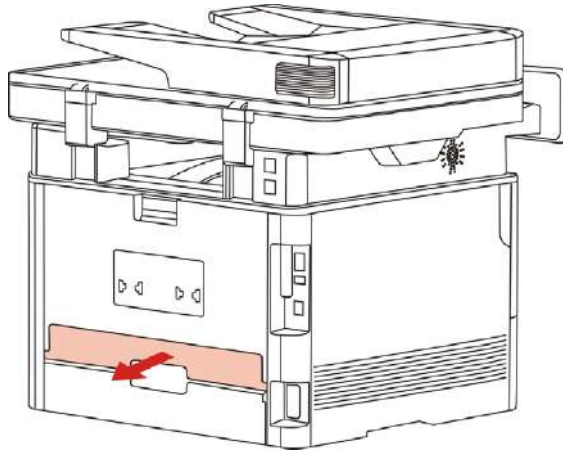


2. Remove the jammed paper from the duplex unit.

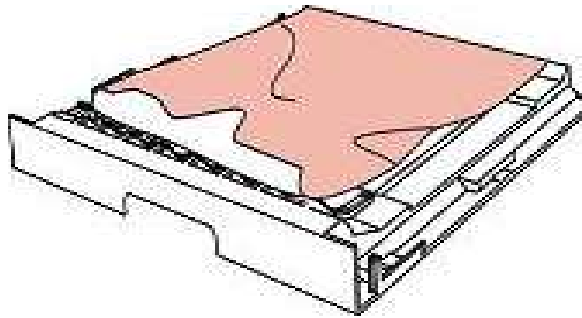

3. If the paper does not come out along with the duplex unit, open the tray and remove the jammed paper directly from the bottom.

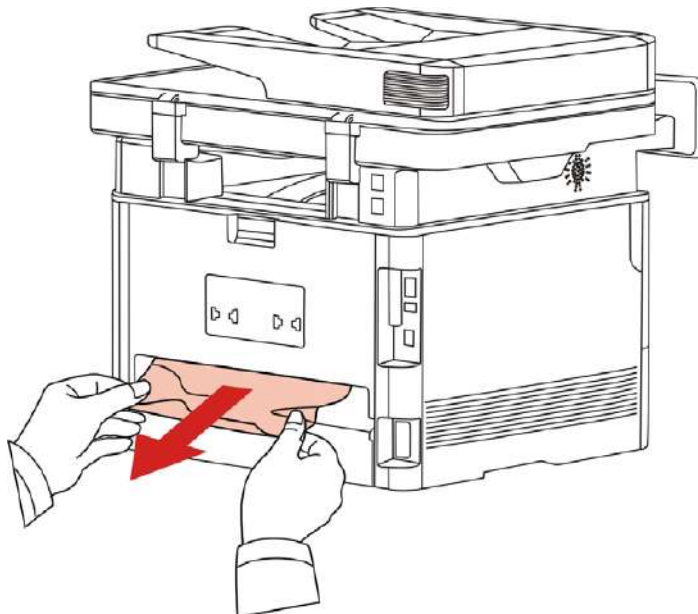


4. After taking papers jammed out, install the duplex unit back and inspect other parts to the product. If it can be ensured that there are no jammed papers, open and close the front cover and then the printer will recover printing automatically.

 **Note:** After all papers jammed are taken out according to the above steps, close the front cover and tidy the papers in paper tray, then the printer will recover to print automatically.


- If the printer still does not start printing, please check that all the jammed paper inside the printer has been cleared.
 - If you cannot remove the jammed paper yourself, please contact your local Pantum authorized repair center or send the printer to the nearest Pantum authorized service center for repair.
 - Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.
-

14.1.4. A paper jam occurs on the automatic document feeder (ADF)


1. Open the ADF's top cover.

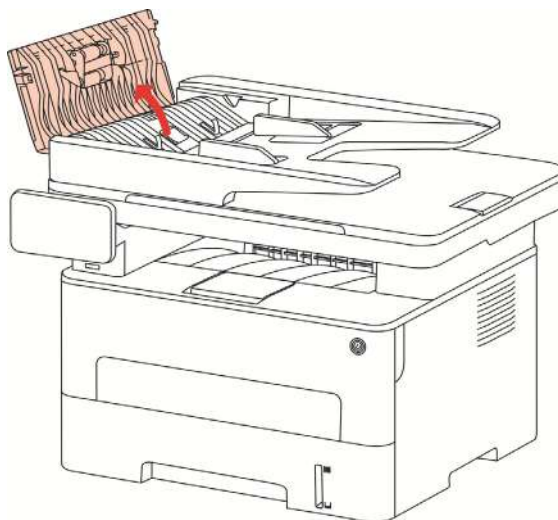


2. Remove the paper jammed from the ADF.

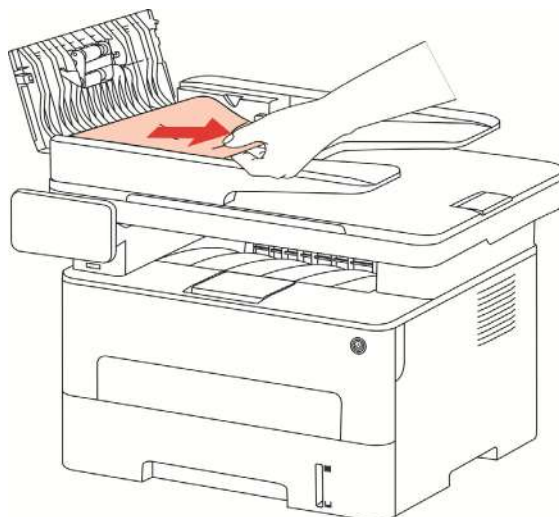

3. After removing the paper jammed, close the top cover and then the printer will be back to the ready state.

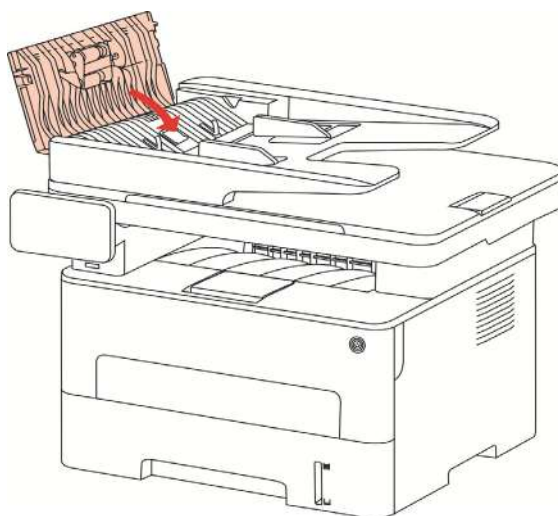

4. If it is difficult to remove the paper jammed, please try to open the scanner cover and remove it from the pressing block.

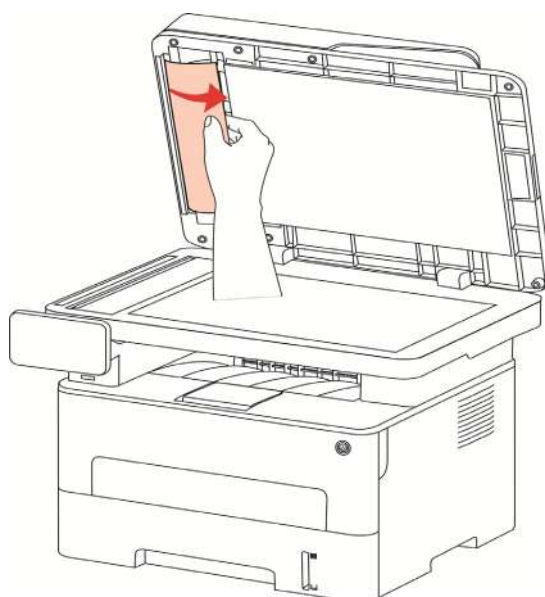

14.2. Software Failure

Problem	Solution
The printer icon will not be displayed in the "Printer and fax" folder.	Reinstall the printer driver. Ensure that the USB interface cable and the
The printer is in Ready mode but it will not perform any print job.	If the failure still exists after restarting the Make sure the network cable of USB cable is connected correctly.
Failed to install the driver	Check whether the print spooler service is enabled. Check the power supply and the connection of the printer.
The driver cannot be used if the IP address of the printer has been changed	Modify the port IP address of the printer driver. If the above method does not work, please reinstall the printer driver. It is recommended that a fixed IP address should be set to the network printer. In the DHCP network, it is recommended to bind the IP address with the MAC address of the printer.

14.3. Error Message

Error Message	Cause	Measure
No Laser Toner Cartridge Detected	The laser toner cartridge is installed incorrectly or laser toner cartridge is damaged.	The laser toner cartridge is installed correctly or new laser toner cartridge is replaced.
Toner Low (this prompt is displayed together with the standby picture alternately.)	The toner in cartridge runs low.	Please replace with a new toner cartridge.
As the toner is low, it is not available to accept the printing job (this prompt is displayed together with the standby picture alternately.)	If the toner in cartridge runs low, the printing of fax job received cannot be executed. (Normal in fax sending, file printing, copying and scanning.)	Please replace with a new toner cartridge or find out the "Low in Toner, Continue to Print" option among the fax receiving setting options and then set it as "On" for continuous printing. (Note: once the printer detects that the toner in cartridge doesn't run low during booting or opening and closing its cover, it will set the "Low in Toner, Continue to Print" option enabled before by user back to "Off".)
Toner cartridge life expired.	The toner in cartridge runs out.	Please replace with a new toner cartridge.
Feed jam	The print paper is loaded incorrectly. The paper is outside of the specification range.	Please correctly load the print paper.

Printer paper jam	The print paper is loaded incorrectly.	Please correctly load the print paper.
Scanner is Busy	With other scan jobs.	Please cancel the current scan job or wait for the completion of other scan jobs.
Scan failed	Scanner internal failure.	Please contact Pantum Customer Service.
No paper in ADF	If you have selected ADF as the scan source, this message appears when you start a copy or scan job without loading paper in the ADF.	Please put in the original properly.
Paper jam occurred on ADF	This prompt appears when there is a feed jam or feed failure in copying or scanning with the ADF.	Please remove the paper jam, arrange well and put originals into the ADF for scanning again.



Note: • If the problem remains, please contact Pantum Customer Service.

14.4. Common Troubleshooting

14.4.1.Common Trouble

Trouble Type	Fault phenomenon	Cause	Solution
Problems in printing	Poor print quality	See 14.4.2 Image Defects .	See 14.4.2 Image Defects .
Problems in copying	Failed to copy	The scanner is damaged.	Please contact Pantum Customer Service.
	Copy Image Abnormal	<ul style="list-style-type: none"> • The scanner is dirty or defective. • The toner cartridge is dirty or damaged. 	<ul style="list-style-type: none"> • Clean the scanner. • It is suggested to replace the original toner cartridge.





Problems with the Printer	The printer does not work	<ul style="list-style-type: none"> • Power cord of the device is not properly connected. <p>The cable between the computer and the printer is not connected properly.</p> <p>Error in specifying the print port.</p> <p>The printer is offline and User Guide of Printer is checked.</p> <p>The printer has not recovered from an internal error, such as a paper jam, paper empty, etc.</p> <ul style="list-style-type: none"> • Driver program of printer is not installed correctly. • The LCD screen prompts error messages. 	<ul style="list-style-type: none"> • Ensure proper connection of the power cord. • Please disconnect the printer cable and then connect it again. • Please check printer settings of the Windows to make sure the printing job could be sent to the correct port. If the computer is equipped with several ports, please be sure to connect the printer to the correct port. • Please make sure the printer is online without any abnormality. • Please remove errors to make the printer return to normal. • Please uninstall and then reinstall the printer driver.
	Online printing does not work	<p>The cable between the computer and the printer is not connected properly.</p> <p>Driver program of printer is not installed correctly.</p> <ul style="list-style-type: none"> • Printer internal failure. 	<ul style="list-style-type: none"> • Please disconnect the printer cable and then connect it again. • Please uninstall and then reinstall the printer driver.
Problems in scanning	Scanning error	<ul style="list-style-type: none"> • Data cable of the device is not properly connected. • The scan driver is installed incorrectly. • The LCD screen prompts error messages. 	<ul style="list-style-type: none"> • Ensure proper connection of the data cable. • Reinstall the scan driver.


Problems with Paper Handling	Paper feed failure	<ul style="list-style-type: none"> • The printer paper isn't put properly. • The print media is beyond the usage specification range. • The pickup roller is dirty. <p>Too many papers in paper tray.</p>	<p>Please install printing medium correctly; please print with manual feed tray if special printing medium is used to print.</p> <ul style="list-style-type: none"> • Please use the print media within the specification range. • Please clean the pickup roller. <p>Take the excessive papers out from paper tray; please print with manual feed tray if special printing medium is used to print.</p>
	Paper Jam	<p>Too many papers in paper tray.</p> <ul style="list-style-type: none"> • The print media is beyond the usage specification range. • There is foreign matter in the feed channel. • The pickup roller is dirty. • Internal parts failure. 	<p>Take the excessive papers out from paper tray; please print with manual feed tray if special printing medium is used to print.</p> <p>Take the excessive papers out from paper tray; please print with manual feed tray if special printing medium is used to print.</p> <ul style="list-style-type: none"> • Clean the paper path. • Please clean the pickup roller.
	Print multipage feed	<ul style="list-style-type: none"> • Excessive static electricity on the print media. • The print media is damp or sticks together. • Internal parts failure. 	<ul style="list-style-type: none"> • Re-separate the print media to eliminate some static electricity. It is suggested that you use the recommended print media. <p>Separate the print media or use better quality and dry print media..</p>



Note: • If the trouble still can not be shooted after the above operations, please contact Pantum Customer Service.

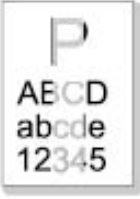14.4.2. Image Defects

Problem	Cause	Solution
 <p>The printout is whitish or light</p>	<ul style="list-style-type: none"> • The print media does not meet the usage specifications, for example the media is damp or too rough. • The resolution in the print program is set too low, concentration setting is too low, or toner saving mode is ticked. • Toner cartridge is damaged. • Toner is low. 	<ul style="list-style-type: none"> • Please use proper print media within the specification range. • Set the resolution and concentration setting of program, or cancel ticking the save toner mode. • It is suggested to replace the original toner cartridge.
 <p>Toner spots</p>	<ul style="list-style-type: none"> • Dirty toner cartridge or toner leakage. • Toner cartridge is damaged. • The print media that does not meet usage specification is used. For example, the media is damp or too rough. • The paper path is dirty. • If toner spots appear when copying and scanning, the platen glass may be dirty. • The scanner is dirty or damaged. 	<ul style="list-style-type: none"> • It is suggested to replace the original toner cartridge. • Please use the print media within the specification range. • Clean the paper path. • Clean the platen glass.
 <p>White spots</p>	<ul style="list-style-type: none"> • The print media that does not meet usage specification is used. For example, the media is damp or too rough. • The paper path is dirty. • Inner damage of toner cartridge. • The reflective glass of the laser inside the printer is dirty. 	<ul style="list-style-type: none"> • Please use the print media within the specification range. • Clean the paper path. • It is suggested to replace the original toner cartridge. • Please clean the LSU lens.
 <p>Toner comes off</p>	<ul style="list-style-type: none"> • The print media that does not meet usage specification is used. For example, the media is damp or too rough. • The printing paper medium set and paper medium placed are not consistent. • The inside of the printer is dirty. • Toner cartridge is damaged. • The parts inside the printer are damaged. 	<ul style="list-style-type: none"> • Please use printing medium within the specification scope, and use manual feed tray for printing in case of special medium. • Please print with corresponding paper medium. • Clean the inside of the printer. • It is suggested to replace the original toner cartridge.

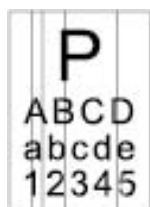


Black vertical stripes

- Dirty toner cartridge.
- Damaged inner parts of toner cartridge.
- The reflective glass of the laser inside the printer is dirty.
- The paper path is dirty.
- If black vertical stripes appear when copying or scanning, the scanner or the platen glass may be dirty.
- Scanner Light bulb has smudges.
- The scanner is damaged.
- Clean or replace toner cartridge
- Clean the mirror of the laser at the back of the printer.
- Clean the feed path of printer.
- Clean the scanner or the platen glass.



Black background (gray background)

- The print media that does not meet usage specification is used. For example, the media is damp or too rough.
- Dirty toner cartridge
- Damaged inner parts of toner cartridge.
- The paper path is dirty.
- The transfer voltage inside the printer is abnormal.
- Scanning exposure.
- If black background or gray background appears when copying and scanning, the platen glass may be dirty.
- Please use the print media within the specification range.
- Clean or replace toner cartridge
- Clean the paper path inside the printer.
- Please close the cover on the manuscript, and then carry out copying and scanning.
- Clean the platen glass.

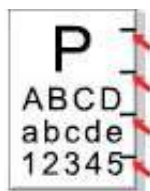


Cyclical traces appear

- Dirty toner cartridge.
- Damaged inner parts of toner cartridge.
- The fuser component is damaged.
- Clean or replace toner cartridge
- Please contact customer services center to replace to a new fuser assembly.




Skewed pages

- The printer paper isn't put properly.
- The feed channel of the printer is dirty.
- Make sure the print paper is placed correctly.
- Clean the paper path inside the printer.

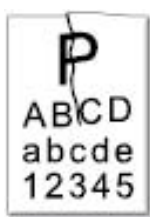

Wrinkled paper

- The printer paper isn't put properly.
- The print media does not meet the usage specification.
- The feed channel of the printer is dirty.
- The fuser component is damaged.
- Make sure the print paper is placed correctly.
- Please use print media within the specification range.
- Clean the paper path inside the printer.
- Please contact customer services center to replace to a new fuser assembly.

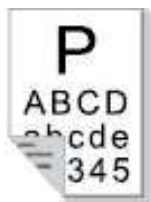

The back of the printout is dirty

- Dirty toner cartridge
- The transfer roller inside the printer is dirty.
- The transfer voltage inside the printer is abnormal.

- Clean or replace toner cartridge
- Clean the internal transfer part of the printer.



Whole page dark

- Toner cartridge is improperly installed.
- Inner damage of toner cartridge.
- Abnormal internal charging of machine or the toner cartridge is not charged.
- If all-black image appear when copying and scanning, maybe it is scanning exposure, and the cover on the manuscript is not properly closed.
- The scanner is damaged.


- Install ink cartridge correctly.
- It is suggested to replace the original toner cartridge.
- Please close the cover on the manuscript, and then carry out copying and scanning.



The toner does not adhere to the paper

- The print media that does not meet usage specification is used. For example, the media is damp or too rough.
- The inside of the printer is dirty.
- Toner cartridge is damaged.
- The parts inside the printer are damaged.

- Please use printing medium within the specification scope, and use manual feed tray for printing in case of special medium.
- Clean the inside of the printer.
- It is suggested to replace the original toner cartridge.

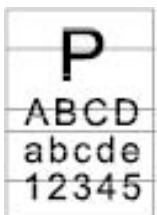

Horizontal stripes

- The toner cartridge is not installed correctly.
- The toner cartridge may be damaged.
- The parts inside the printer are damaged.

- Install ink cartridge correctly.
- It is suggested to replace the original toner cartridge.



Note: • Failures above can be improved by cleaning or replacing toner cartridge. Please contact customer services center if the problem can still not be solved.

14.5. Fax faults

Trouble Type	Fault phenomenon	Solution
Telephone line or connection fault	The dialing tone cannot be heard.	<ul style="list-style-type: none"> • If you cannot hear the dialing tone after picking up the receiver, please check the connection of all telephone lines between the fax and the wall-mounted socket. • Use the telephone connecting another line to test the wall-mounted socket; if there is no dialing tone, please check the communication line.
	The printer cannot response in a fax call automatically.	<ul style="list-style-type: none"> • Make sure it is not the "Telephone Mode" as the receiving mode. (Please see Chapter 10.3.2 to set the receiving mode as "Fax Mode".)
Fax receiving fault	The fax cannot be received	<ul style="list-style-type: none"> • Make sure the fax is set with the correct receiving mode. (Please see Chapter 10.3.2 to select the receiving mode.) • If the telephone line is interfered, please try to set it as VoIP in compatibility. (For compatibility setting, please see Chapter 10.3.3)
	The fax received is somewhat blank or of poor quality	<ul style="list-style-type: none"> • The fax sending faxes may have a fault. • The telephone line may have a fault due to noise. • Check the printer through copy. • The toner cartridge comes to the end of its expected service life. Please replace it. (Please see Chapter 13.2.2 "Replace the Toner Cartridge".)
	The fax is well received but cannot be printed	<ul style="list-style-type: none"> • Check if the toner in cartridge has run low. Replace with a new toner cartridge and then print. • Find out the option of " Low in Toner, Continue to Print" among receiving setting options and then set it as On.
	An external call is being handled.	<ul style="list-style-type: none"> • If the Telephone mode adopted, please press Startup and then pick up the receiver immediately. • If answering the call with the extension telephone, please input the 3-digit fax receiving code (*90 by default). When the fax begins to response, please hang up.

Fax sending fault	The dialing fails to be done	<ul style="list-style-type: none"> • Please check the connection of power cable. • Please check the connection of telephone line. • Change the (audio/pulse) settings. Please set in the fax sending menu with the dialing way supported for telephone line.
	The printer is poor in transmitting files	<ul style="list-style-type: none"> • Make one copy of original to check if the fax scanner could work normally. • Transmit with a higher resolution.
	A prompt of "Communication Failure" appears in printing the fax confirmation report	<ul style="list-style-type: none"> • The telephone line may suffer from temporary noise or electrostatic interference. Please send the fax again. • Please try to set as VoIP in compatibility and then send again. (Please see Chapter 10.3.3 for compatibility setting.) <p>If the problem still occurs, please check the telephone line.</p>

15. Product Specifications



Note: • Specification values vary slightly from printers with different models with different functions ,and product specifications vary from different countries and regions.
• These values are based on the initial data. For more information about the latest specifications, please visit: www.pantum.com .

15.1.Overview of the Specifications

Product Size(W*D*H)	415mm*360mm*352mm
Printer weight (excluding powder box, drum module and package)	About 10.54kg
Weight of printer (including cartridge, drum and package)	About 13.71kg
Touch screen	Dimension: 3.5" capacitive touch screen
	Resolution: 320*480, RGB565
Print Environment	Print temperature range:10-32℃
	Print humidity range:20%RH~80%RH
Power Voltage	110V Model: AC100~127V, 50Hz/60Hz,9A
	220V Model: AC220~240V, 50Hz/60Hz,4.5A
Noise (acoustic pressure level)	Print/scan: ≤52dB(A)
	Copy: ≤54dB(A)
	Standby: ≤30dB(A)
	Mute mode: ≤46 dB (A)
Enter network standby time:	5 minutes
Power Consumption	Network standby: ≤2.710W
	Standby: ≤ 55W
	Shutdown: ≤ 0.5W
	TEC: conforming to requirements of EnergyStarV2.0 and Chinese energy efficenc rating

Operating System	Microsoft Windows XP/ Windows Vista/ Windows 7/ Windows 8/ Windows 8.1/ Windows 10/ Windows Server 2003/ Windows Server 2008/ Windows Server 2012(32/64 Bit)
	Mac OS X 10.7/10.8/10.9/10.10/10.11/10.12
	Linux (Ubuntu 12.04/ Ubuntu 14.04/ Ubuntu 16.04)
	Versions higher than iOS 7.0
	Android 4.4-8.0
Communication interface	Hi-speed USB 2.0
	IEEE802.3 10Base-T/100Base-Tx
	IEEE802.11b/g/n (support WPS)

15.2.Print Specifications

Print Speed	33cpm(A4)/35cpm(Letter)
Print Time of First Page	≤8.5sec
Print Language	PDL

15.3.Copy Specifications

Copy Speed	30cpm(A4)/33cpm(Letter)
FCOT	Flatbed <10 seconds
	ADF <12 seconds
Maximum Pages for Successive Print	99 pages
Zoom Ratio	25%~400%
Other Copy Functions	ID copy, bill copy, multi-in-one copy, clone copy.

15.4.Scan Specifications

Scan Type	Flatbed+ADF
Scanning speed	Single-sided: 24ipm
	Duplex: 48ipm
Maximum Scan Size	Flatbed: 216×297mm
	ADF: 216×356 mm
Chromoscan	Yes
Scan Output Function	Scan to E-mail, PC, FTP and USB

15.5.Fax specification

Fax Type	Black-and-white
Modem Speed	33.6Kbps
Fax Memory	650 pages
Encoding	MH/MR/MMR/JBIG
Compatibility	ITU-T sg3/ECM
Resolution	Standard, fine super fine picture
Other Fax Functions	PC-FAX (Send), Fax Filtering, Group Sending, Fax Forwarding, Speed Dial, Group Dial, Delay Sending, Auto Redial, Auto Receive, Auto Shrink, Mobile Fax
Environment	PSTN,PBX,VOIP

Company Name: Magnell Associate, Inc. (DBA NEWEGG.COM)

Office address:17560 Rowland St. City of Industry, CA 91748

TEL: (626) 271-9700

USA Only

PANTUM