



Cách định cấu hình trình điều khiển TWAIN

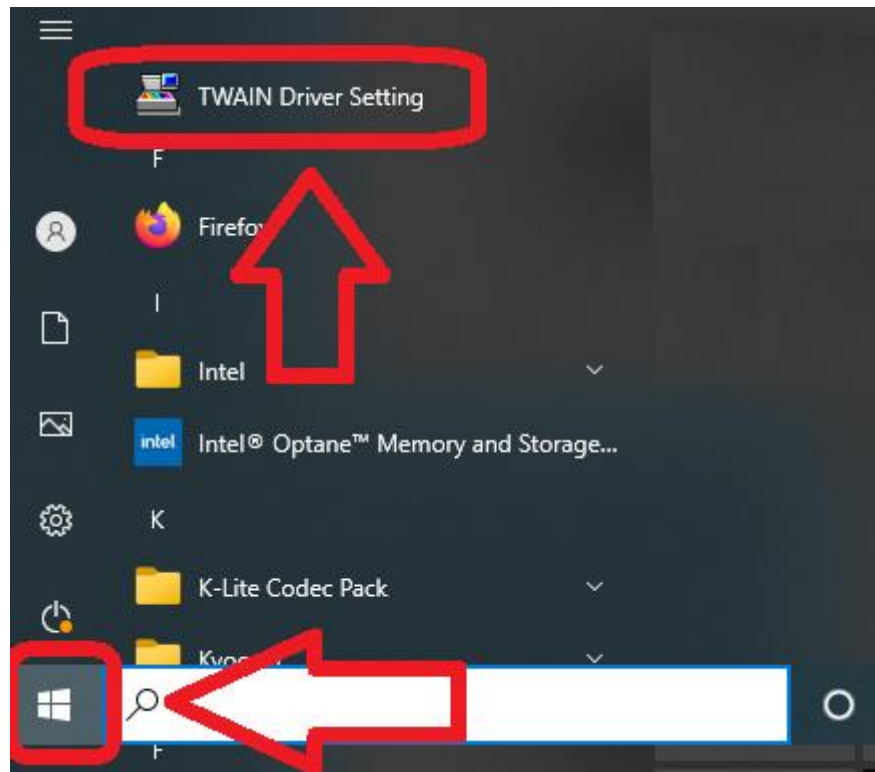

Nếu sử dụng kết nối USB

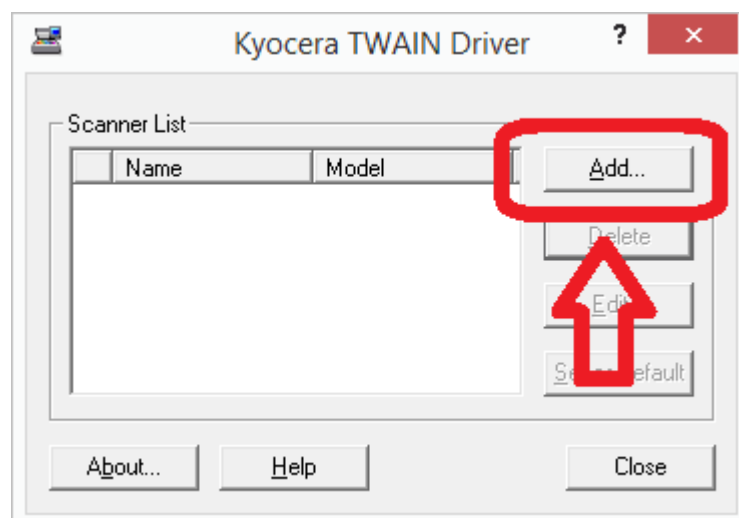

Kyocera TWAIN Driver

Name: ECOSYS M5526cdw (USB)

Model: ECOSYS M5526cdw (USB)

Unit: ☐ Inch ☒ Metric

Scanner Address:

Image Compression(Color): ☒ Yes ☐ No

Compression Level: 3 (Low to High slider)

Image Compression(Gray / Monochrome): Compression Level: 3 (Low to High slider)

Secure Protocol Setting: ☐ SSL

User Authentication Settings

Help OK Cancel

1. Select the *printer model (USB)* from the **Model** list
 - not / models
2. Input a suitable value into the **Name** field
3. Select **OK**

Kyocera TWAIN Driver

Scanner List

	Name	Model
✓	ECOSYS M5526cdw...	ECOSYS M5526

Buttons: Add..., Delete, Edit..., Set as default

Bottom buttons: About... Help Close

Nếu sử dụng kết nối mạng

Kyocera TWAIN Driver

Name
ECOSYS M5526cdw (Network)

Model
ECOSYS M5526cdw

Unit
☐ Inch
☒ Metric

Scanner Address
192.168.1.200

Image Compression(Color)
☒ Yes ☐ No

Compression Level
3 Low High

Image Compression(Gray / Monochrome)
Compression Level
3 Low High

Secure Protocol Setting
☐ SSL

User Authentication Settings

Help OK Cancel

